Brought to you by Pro Gear & Transmission.

For parts or service call:

877-776-4600 407-872-1901



www.globaldifferentialsupply.com


906 W. Gore St. Orlando, FL 32805 parts@eprogear.com

STEERABLE DRIVE AXLE PARTS MANUAL

MODEL SDA 12 SDA 16 SDA 18 SDA 21



Telephone (925) 454-9500 Fax (925) 454-9501 151 Lawrence Drive, Livermore, CA 94551 www.fabcoautomotive.com

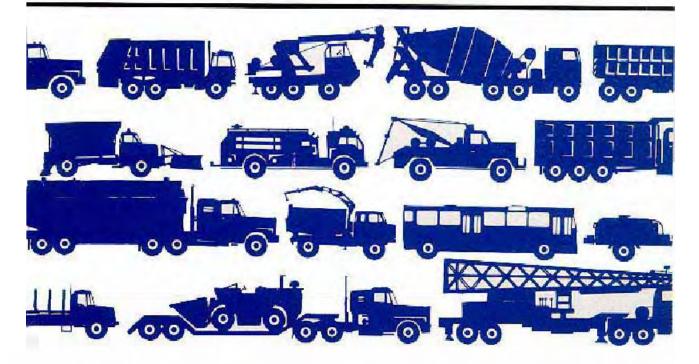

PARTS MANUAL SDA 12

Steerable	Drive	Axle	Assembl	y ²	26-27
Steerable	Drive	End	Assembly	/	28-31

To Use This Book:

- 1. Refer to the exploded view which illustrates the needed part.
- 2. Find the required part in the exploded view and then note the item number or numbers.
- 3. Locate the item number in the parts list for part number, destription, and quantity.

Note:

- 1. Before ordering parts for a Fabco Steerable Drive Axle, please refer to the Fabco nameplate located on the left rear of the axle housing. Specify model number, serial number, ratio or other information that is on the nameplate when ordering parts.
- 2. Some parts such as the steerable drive ends, the axle housing and the steering arm are unique to customer specifications. Our parts personnel can refer to the specific Bill of Material to determine part numbers for these parts.


Additional Parts Manuals:

Single Reduction Differential Parts Manual Air Brake Parts Manual Hydraulic Brake Parts Manual

Part numbers contained in this manual were in effect at the time the manual was approved for printing and are subject to change without notice or liability. Fabco Automotive Corporation reserves the right to change parts at any time.

	ITEM	PART NO.	DESCRIPTION	QUANTITY PER AXLE
	1	255 223	Clamp. Tip Rod. Consisting of:	2
	Ι Λ	688 265	Clamp, Tie Rod, Consisting of: Locknut, 5/8-18	۷
	A		·	
	В	927 276	Lockwasher, 5/8	
	С	255 446	Clamp	
	D	265 255	Bolt, 5/8-18 x 2 ³ / ₄	2
	2	749 225	Pin, Cotter	4
	3	_	*Arm, Axle Steering	1
	4	363 227	End, Right Tie Rod	1
	5	363 228	End, Left Tie Rod) 1
	6	_	*End, Right Steerable Drive, Disc Style	} 1
	6A	_	*End, Right Steerable Drive, Cast Spoke Style	,
	7	_	*End, Left Steerable Drive, Disc Style	§ 1
	7A	_	*End, Left Steerable Drive, Cast Spoke Style	,
	9	_	*Housing, Axle	1
	10	688 275	Nut, Steering Arm Mounting Lock	4
	11	688 689	Nut, Steerable Drive End to Axle Housing Mounting Stud	16
	12	758 274	Plug, Axle Housing Drain	1
	13	758 229	Plug, Axle Housing Oil Level	1
	14	788 548 003	Stud, Differential Carrier Mounting	2
	15	836 222	Fitting, Axle Housing Vent	1
	16	_	*Tube, Tie Rod	1
	17	927 668	Washer, Steerable Drive End Mounting Stud	16
	18	724 723	Screw, Socket Hd. Set, 5/8-18	2
	19	688 636	Nut, Jam, 5/8-18	2
- 1	20	265 249	Bolt, Differential Mtg.	8
1	21	688 287	Nut, Hex 7/16-20	2
NOT ₹	22	927 749	Lockwasher, 7/16	2
SHOWN	23	927 684	Washer, Flat, 7/16	8
1	24	358 222	Fitting, Grease	2
		728 232 001	Loctite 515 Gasket Eliminator	6 ml Tube

^{*}See note 2, Table of Contents

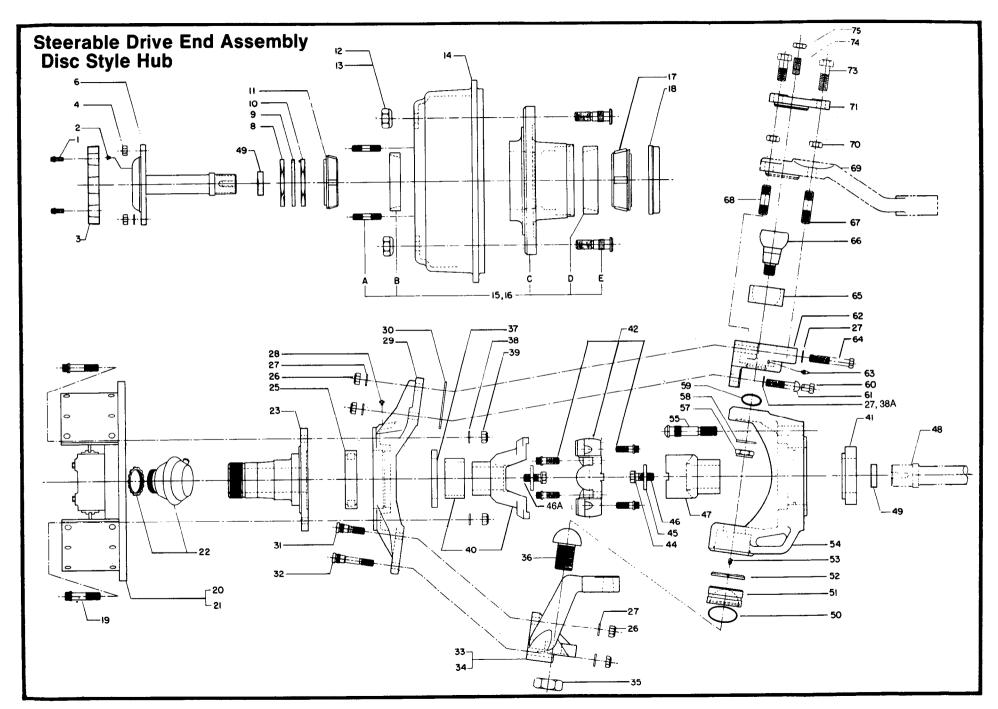

	able Drive Style Hul	End Assembly)	QUAI PI AXLE	ER					Pl	NTITY ER E END
ITEM	PART N	D. DESCRIPTION	L.H.	R.H.	ITE	M	PART NO.	DESCRIPTION	L.H.	R.H.
1	724 66	Capscrew, Hub Cap	2	2	17		233 396	Bearing Cone, Inner Wheel	1	1
2	758 23		1	1	18		732 334	Seal, Wheel Hub	1	1
3	483 25	5,	1	1	19	. (724 682	Screw, Wheel Spindle Mtg., 31/2 Lg.	8	8
4	688 34	· · · · · · · · · · · · · · · · · · ·	8	8] ''	' (724 683	Screw, Wheel Spindle Mtg., 4-3/8 Lg.	2	2
6	742 88		1	1	20		**	*** Brake Assembly, Left Hand	1	_
8	688 24	· · · · · · · · · · · · · · · · · · ·	1	1	21		**	*** Brake Asseembly, Right Hand	_	1
9	927 27		1	1	22		243 264 **	*** Actuator & Lock Nut, Brake	1	1
10	688 23	Nut, Wheel Bearing Adjustment (With Dowel)	1	1				(Air Brake Axles Only)		
11	233 24		1	1	23		774 272	Spindle, Wheel Bearing	1	1
12	688 25	Nut, Left Hand Wheel	1 0	_	25		233 264	Bearing, Outer Race and Roller Assy.	1	1
13	688 25	Nut, Right Hand Wheel	_	10	26		688 292	Nut, Lower & Upper Kingpin Bracket	0	0
14	378 26	Drum, 15x5 Brake	1	1	07		007.000	Mounting Lock	8 40	8
	482 05	003+Assembly, Left Hand Wheel Hub			27		927 666	Washer, Kingpin Bracket Mtg.	12	12
15	₹	(Air Brake Axles Only)	1	_	28		836 235 965 935	Vent	1	1
10	482 05	007+Assembly, Left Hand Wheel Hub	•		30		905 935 792 977	Yoke, Spindle	1	1
	. 400.05	(Hyd. Brake Axles Only)			31		788 539 00	Shim, Camber Adjustment	2	2
	482 05	004+Assembly, Right Hand Wheel Hub (Air Brake Axles Only)			32			6 Stud, Lower Kingpin Bracket Mtg. (2" Long) 4 Stud, Lower Kingpin Bracket Mtg. (3-3/8" Long)	2	2
16	482.05	5 008+Assembly, Right Hand Wheel Hub	_	1	33			1 Bracket, Left Lower Kingpin	1	_
	(402 00	(Hyd. Brake Axles Only)			34		273 372 00	1 Bracket, Right Lower Kingpin		1
Α	788 54	001 Stud, Outer Axle Shaft Drive	8	8	35		688 578	Nut, Lower Kingpin Ball Stud Jam	1	1
A B	233 23		1	1	36		225 277	Ball Stud, Lower Kingpin	1	1
_	482 29	,	4	4	37		732 333	Seal, Outer Drive Yoke	1	1
С	482 34		1	1	38		927 784	Washer, Spindle Mtg. Lock	10	10
D	233 39	, ()	1	1	30		321 104	washer, Spiriule Wily. Look	10	10
_		005 Stud, Left Hand Wheel	10							
Е	(006 Stud, Right Hard Wheel	_	10						
					****	Dofo	rtatha Airar	Hudraulia Braka Darta Manual for information		


^{****} Refer to the Air or Hydraulic Brake Parts Manual for information relating to the brakes and see Note 2, Table of Contents.

⁺This Assembly contains Items A through E.

Steerable Drive End Assembly (Disc Style Hub) QUANTITY QUANTITY PER PER **AXLE END** AXLE END ITEM PART NO. **DESCRIPTION** L.H. R.H. ITEM PART NO. DESCRIPTION L.H. R.H. Washer, Steering Stop Adjustment Nut, Upper Kingpin Ball Stud Lock 38A 927 767 A/R A/R 57 688 274 1 Washer, Upper Kingpin Ball Stud Nut, Wheel Spindle Mounting Lock 10 10 58 927 649 1 39 688 345 675 222 O-ring, Upper Kingpin 1 40 9651766 Yoke, Outer Drive and Bearing Race 1 59 1 265 668 Bolt, Upper Kingpin Bracket Mounting 1 41 732 305 Seal, Assembly, Inner Drive Yoke 1 60 1 Cross and Bearing, Universal Joint w/Bolts 1 61 265 899 Bolt, Steering Stop 42 277 248 1 273 375 Bracket, Upper Kingpin 44 927 289 Washer, Drive Yoke Bolt Sealing 2 2 62 1 927 723 Washer, Drive Yoke Retaining 2 358 222 Fitting, Grease 1 45 2 63 Bolt, Upper Kingpin Bracket Mounting 46 265 276 1 64 265 658 Bolt, Inner Drive Yoke Retaining, 13/4" Long 1 Bearing, Upper Kingpin 1 65 234 239 1 46A 265 234 Bolt, Outer Drive Yoke Retaining, 2" Long 1 Ball Stud, Upper Kingpin 1 66 225 278 1 47 965 765 Yoke, Inner Drive 788 554 003 Stud, Steering Arm (2-9/16" Long) Shaft, Inner Axle (See Note 2, Table of Contents) 1 67 * 2 48 1 788 554 002 Stud, Steering Arm (2-1 /16" Long) * 2 Ring. Inner Axle and Outer Axle 2 68 49 736 768 675 229 O-Ring, Lower Kingpin 1 69 Arm, Steering (see note 2, Table of Contents) * 1 50 Nut, Steering Arm Mounting Lock 51 234 242 Bearing, Lower Kingpin 1 70 688 275 * 4 Plate, Lower Kingpin Bearing 1 52 793 266 1 71 235 588 Cap, Upper Kingpin Bolt, Upper Kingpin Cap 358 223 Fitting, 45° Grease 73 265 998 53 1 724 723 Screw, Soc. Hd. Set 5/8-18 54 965 824 Yoke, Suspension 1 74 1 1 8 75 688 636 Nut, Jam, 5/8-18 55 788 538 008 Stud. Suspension Yoke to Axle Housing 1

^{*}Steering arm, studs and nuts and/or cap and bolts may be mounted on either steerable end in any combination, two arms, two caps or one each.

Cast Spoke Style Hub Assembly

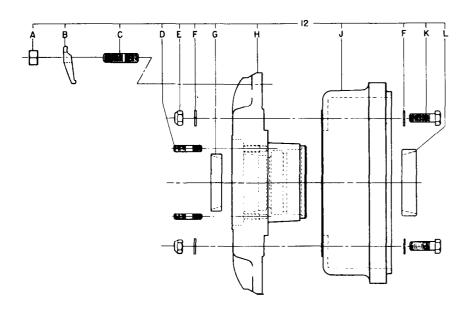

Cast Spoke Style Hub Assembly 12C 788 474 Stud, Rim						6	6			
	opono oty.ou.				12D	788 475	Stud, Outer Axle Shaft Drive		8	8
1				NTITY	12E	688 628	Nut, Drum Mounting		6	6
l				ER E END	12F	927 555	Washer, Drum Mounting		6	6
1			AAL	E END	12G	233 239	Bearing Cup, Outer Wheel		1	1
ITEM	PART NO.	DESCRIPTION	1 4	R.H.		4 82 337	Wheel, Cast Spoke	7		
IIIEW	FAIRT NO.	DESCRIPTION	L.II.	17.11.	12H	,	(Air Brake Axles Only)	(1	1
ļ	482 059 001	Assembly, Cast Spoke Hub			1211	482 346	Wheel, Cast Spoke	(•	'
1	((Air, Clamps for 8" and Narrower Rim)				•	(Hydraulic Brake Axles Only)	y		
	482 059 002	Assembly, Cast Spoke Hub			12J	378 274	Drum, 15x5 Brake		1	1
12	}	(Hydraulic, Clamps for 8" and Narrower Rim)	\ ₁	1	12K	265 444	Bolt, Drum Mounting		6	6
12	482 059 005	Assembly, Cast Spoke Hub	('	'	12L	233 397	Bearing Cup, Inner Wheel		1	1
ļ	1	(Air, Clamps for 8½" and Wider Rim)	1							
l	482 059 006	Assembly, Cast Spoke Hub]							
	•	(Hydraulic, Clamps for 8½" and Wider Rim)	,		This as	ssembly contains	items A through L.			
12A	688 549	Nut, Rim Clamp	6	6						
12B	∮ 255 428	Clamp, Rim, 8" and Narrower Rim	6	6						
'25	255 448	Clamp, Rim, 8½" and Wider Rim	. 0	O						

PARTS MANUAL SDA 16

Steerable	Drive	Axle	Assembly34	4-35
Steerable	Drive	End	Assembly3	6-39

To Use This Book:

- 1. Refer to the exploded view which illustrates the needed part.
- 2. Find the required part in the exploded view and then note the item number or numbers.
- 3. Locate the item number in the parts list for part number, destription, and quantity.


Note:

- 1. Before ordering parts for a Fabco Steerable Drive Axle, please refer to the Fabco nameplate located on the left rear of the axle housing. Specify model number, serial number, ratio or other information that is on the nameplate when ordering parts.
- 2. Some parts such as the steerable drive ends, the axle housing and the steering arm are unique to customer specifications. Our parts personnel can refer to the specific Bill of Material to determine part numbers for these parts.

Additional Parts Manuals:


Single Reduction Differential Parts Manual Double Reduction Differential Parts Manual Air Brake Parts Manual

Part numbers contained in this manual were in effect at the time the manual was approved for printing and are subject to change without notice or liability. Fabco reserves the right to change parts at any time.

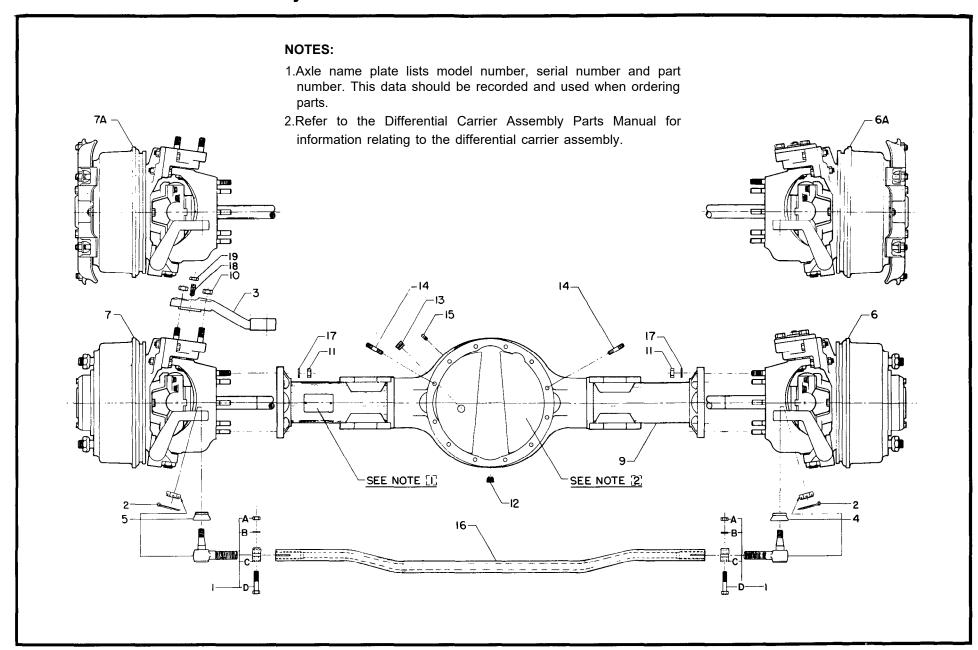


	ITEM	PART NO.	DESCRIPTION	QUANTITY PER AXLE
				2
	1	255 223	Clamp, Tie Rod, Consisting of:	۷
	A	688 265	Locknut, 5/8-18	
	В	927 276	Lockwasher, 5/8	
	С	255 446	Clamp	
	D	265 255	Bolt, 5/8-18 x 2 ³ / ₄	0
	2	749 225	Pin, Cotter	2
	3	_	*Arm, Axle Steering	1
	4	363 227	End, Right Tie Rod	1
	5	363 228	End, Left Tie Rod	1
	6	_	*End, Right Steerable Drive, Disc Style	} 1
	6A	_	*End, Right Steerable Drive, Cast Spoke Style	,
	7	_	*End, Left Steerable Drive, Disc Style	} 1
	7A	_	*End, Left Steerable Drive, Cast Spoke Style) '
	9	_	*Housing, Axle	1
	10	688 275	Nut, Steering Arm Mounting Lock	4
	11	688 689	Nut, Steerable Drive End to Axle Housing Mounting Stud	16
	12	758 274	Plug, Axle Housing Drain	1
	13	758 362	Plug, Axle Housing Oil Level	1
	14	788 549 001	Stud, Differential Carrier Mounting	2
	15	836 222	Fitting, Axle Housing Vent	1
	16	-	*Tube, Tie Rod	1
	17	927 668	Washer, Steerable Drive End Mounting Stud	16
	18	724 723	Set Screw, 5/8-18x11/2	2
	19	688 636	Nut, Jam, 5/8-18	2
(20	265 229	Bolt, Differential Mtg.	10
(21	688 266	Nut, Hex 1/2-20	2
NOT	22	927 282	Lockwasher, 1/2	2
SHOWN	23	927 553	Washer, Flat, 1/2	10
3	24	358 222	Fitting, Grease	2
(25	758 293	Plug, Housing Differential Temp.	_ 1
	20	728 232 001	Loctite 515 Gasket Eliminator	6 ml Tube

^{*}See note 2, Table of Contents

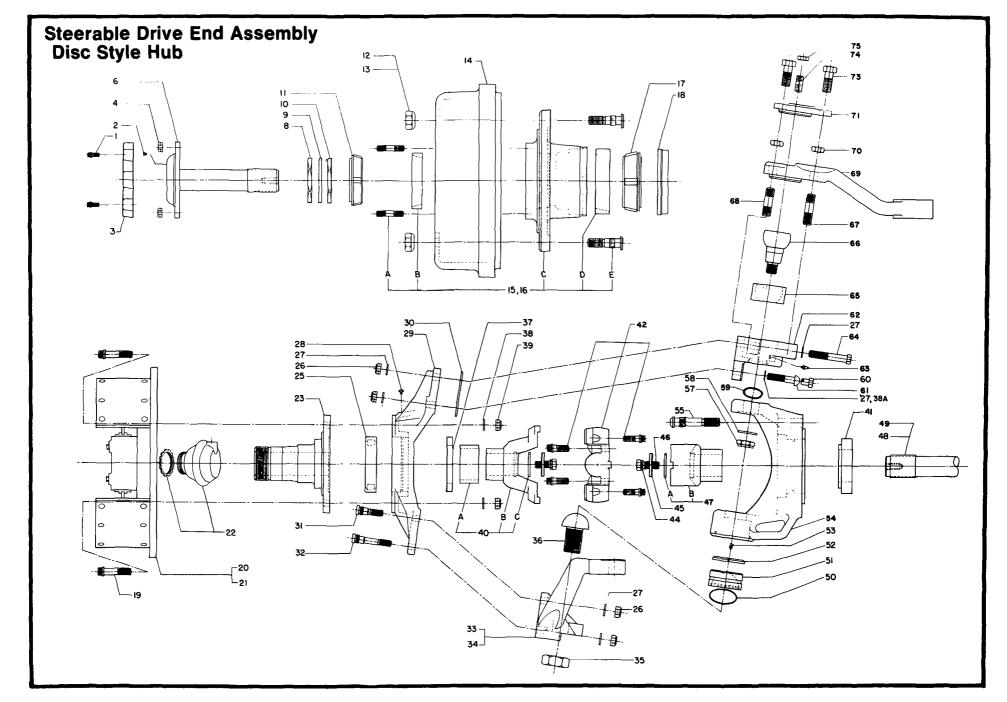

	le Drive End tyle Hub)	d Assembly	P	NTITY PER E END						NTITY ER E END
ITEM	PART NO.	DESCRIPTION	L.H.	R.H.	ITEN		PART NO.	DESCRIPTION	L.H.	R.H.
1	724 666	Capscrew, Hub Cap	2	2	17			Bearing Cone, Inner Wheel	1	1
2	758 232	Plug, Wheel Brg. Oil Level	1	1	18			Seal, Wheel Hub	1	1
3	483 259	Hub Cap	1	1	19	- {		Screw, Wheel Spindle Mtg., 3½ Lg.	8	8
4	688 342	Nut, Axle Shaft Drive Stud	8	8	19	- (Screw, Wheel Spindle Mtg., 4-3/8 Lg.	2	2
6	742 962	Shaft, Outer Axle	1	1	20			Brake Assembly, Left Hand	1	_
8	688 242	Nut, Wheel Bearing Lock	1	1	21		****	Brake Assembly, Right Hand	_	1
9	927 278	Washer, Wheel Brg. Lock	1	1	22		243 264 **** A	Actuator & Lock Nut, Brake	1	1
10	688 239	Nut, Wheel Bearing Adjustment (With Dowel)	1	1	ĺ					
11	233 242	Bearing Cone, Outer Wheel	1	1	23			Spindle, Wheel Bearing	1	1
12	688 257	Nut, Left Hand Wheel	10	_	25			Bearing, Outer Race and Roller Assy.	1	1
13	688 258	Nut, Right Hand Wheel	_	10	26			Nut, Lower & Upper Kingpin Bracket	0	0
14	378 262	Drum, 15x5 Brake	1	1				Mounting Lock	δ 40	8 12
1	482 057 00	3+Assembly, Left Hand Wheel Hub,			27			Vasher, Kingpin Bracket Mtg.	12	12
15		Long Studs	1	_	28			/ent	1	1
15	482 057 00	1 +Assembly, Left Hand Wheel Hub,	'		29			/oke, Spindle	1	1
Į		Short Studs			30			Shim, Camber Adjustment	2	2
- (482 057 00	4+Assembly, Right Hand Wheel Hub,			31			Stud, Lower Kingpin Bracket Mtg. (2" Long)	2	2
16	492.0E7.00	Long Studs	_	1	32			Stud, Lower Kingpin Bracket Mtg. (3-3/8" Long) Bracket, Left Lower Kingpin	2	_
- 1	402 037 00	2+Assembly, Right Hand Wheel Hub, Short Studs			33			Bracket, Left Lower Kingpin Bracket, Right Lower Kingpin	ı	_
Α '	788 549 00	1 Stud, Outer Axle Shaft Drive	8	8	34				_	1
В	233 239	Bearing Cup, Outer Wheel	1	1	35			lut, Lower Kingpin Ball Stud Jam Ball Stud, Lower Kingpin	1	1
C	482 364	Hub, Wheel	1	1	36			Seal, Outer Drive Yoke	1	1
D	233 397	Bearing Cup, inner Wheel	1	1	37			•	1	10
,		5 Stud, Left Hand Wheel, Long	٠	-	38		921 104 V	Vasher, Spindle Mtg. Lock	10	10
1		1 Stud, Left Hand Wheel, Short	10	_						
E {		6 Stud, Right Hand Wheel, Long			l l					
- (2 Stud, Right Hand Wheel, Short	-	10	**** F	efer	to the Air Brake	Parts Manual for information relating		
,	, 00 000 00.	2 otaa, ragiit riana wiloof, onort	,					2, Table of Contents.		

⁺This Assembly contains Items A through E.

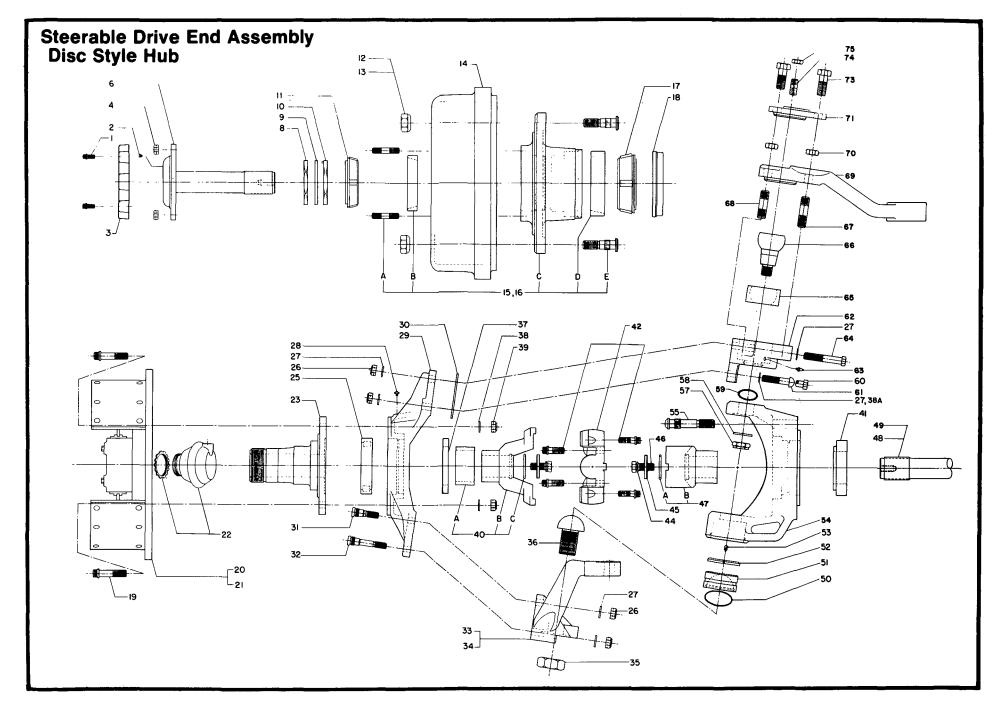

Steerable Drive End Assembly (Disc Style Hub) QUANTITY PER AXLE END ITEM PART NO. **DESCRIPTION** L.H. R.H. A/R A/R 38A 927 767 Washer, Steering Stop Nut, Wheel Spindle Mounting Lock 39 688 345 10 10 40 9651763 Yoke, Outer Drive (w/Split Ring and Bearing Race) 1 Bearing Race 736 774 40A 1 Yoke, Outer Drive 40B 965 763 1 1 Ring, Split 40C 736 878 1 Seal, Assembly, Inner Drive Yoke 41 732 305 1 277 248 Cross and Bearing, Universal Joint w/Bolts 42 1 O-Ring, Drive Yoke Bolt Sealing 44 675 016 2 Washer, Drive Yoke Retaining Washer 9271776 45 2 Bolt, Drive Yoke Retaining 46 265 989 2 Yoke, Inner Drive (w/Split Ring) 47 9651837 47A 736 878 Ring, Split 965 837 Yoke, Inner Drive 47B Shaft, Inner Axle 48 Shaft, Inner Axle 49 50 675 229 O-Ring, Lower Kingpin Bearing, Lower Kingpin 51 234 242 Plate, Lower Kingpin Bearing 52 793 266 Fitting, 45° Grease 53 358 223


ITEM	PART NO.	DESCRIPTION	L.H.	R.H.		
54	965 759	Yoke, Suspension	1	1		
55	788 538 012	Stud, Suspension Yoke to Axle Housing	8	8		
57	688 274	Nut, Upper Kingpin Ball Stud Lock	1	1		
58	927 649	Washer, Upper Kingpin Ball Stud	1	1		
59	675 222	O-ring, Upper Kingpin	1	1		
60	265 668	Bolt, Upper Kingpin Bracket Mounting	1	1		
61	265 899	Bolt, Steering Stop	1	1		
62	273 375	Bracket, Upper Kingpin	1	1		
63	358 222	Fitting, Grease	1	1		
64	265 658	Bolt, Upper Kingpin Bracket Mounting	2	2		
65	234 239	Bearing, Upper Kingpin	1	1		
66	225 278	Ball Stud, Upper Kingpin	1	1		
67	788 554 003	Stud, Steering Arm (2-9/16" Long)	* 2	_		
68	788 554 002	Stud, Steering Arm (2-1/16" Long)	* 2	_		
69	_	Arm, Steering (see Note 2, Table of Contents)	* 1	_		
70	688 275	Nut, Steering Arm Mounting Lock	* 4	_		
71	235 588	Cap, Upper Kingpin	* —	1		
73	265 998	Bolt, Upper Kingpin Cap	_	4		
74	724 723	Screw, Socket HD Set, 5/8-18	1	1		
75	688 636	Nut, Jam, 5/8-18	1	1		

^{*}Steering arm, studs, and nuts and/or cap and bolts may be mounted on either steerable end in any combination, two arms, two caps or one each.

^{**} See note 2. Table of Contents.

(Axle shafts may differ from left to right according to position of differential.)

Cast Spoke Style Hub Assembly

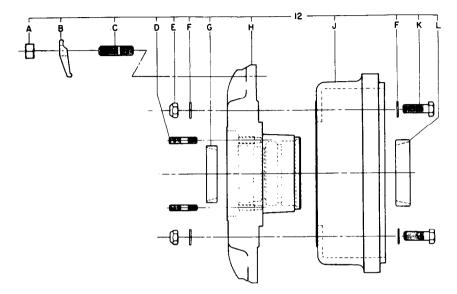

Cast Spoke Style Hub Assembly

					NTITY ER E END
ITEM	PART NO.	DESCRIPTION		L.H.	R.H.
12	482 059 001 482 059 005	Assembly, Cast Spoke Hub (Air, Clamps for 8" and Narrower Rim) Assembly, Cast Spoke Hub (Air, Clamps for 8½" and Wider Rim)	}	1	1
12A	688 549	Nut, Rim Clamp	λ.	6	6
12B {	255 428 255 448	Clamp, Rim, 8" and Narrower Rim Clamp, Rim, 8½" and Wider Rim	}	6	6
12C	788 474	Stud, Rim		6	6
12D	788 475	Stud, Outer Axle Shaft Drive		8	8
12E	688 628	Nut, Drum Mounting		6	6
12F	927 555	Washer, Drum Mounting		6	6
12G	233 239	Bearing Cup, Outer Wheel		1	1
12H	482 337	Wheel, Cast Spoke		1	1
12J	378 274	Drum, 15x15 Brake		1	1
12K	265 444	Bolt, Drum Mounting		6	6
12L	233 397	Bearing Cup, Inner Wheel		1	1

This assembly contains Items A through L.

PARTS MANUAL SDA 18

Steerable	Drive	Axle	Assembl	y42	43
Steerable	Drive	End	Assembly	y44	47

To Use This Book:

- 1. Refer to the exploded view which illustrates the needed part.
- 2. Find the required part in the exploded view and then note the item number or numbers.
- 3. Locate the item number in the parts list for part number, description and quantity.


Notes:

- 1. Before ordering parts for a Fabco Steerable Drive Axle, please refer to the Fabco nameplate located on the left rear of the axle housing. Specify model number, serial number, part number, ratio or other information that is on the nameplate when ordering parts.
- 2. Some parts such as the steerable drive ends, the axle housing and the steering arm are unique to customer specifications. Our parts personnel can refer to the specific Bill of Material to determine part numbers for these parts.

Additional Parts Manuals:


Single Reduction Differential Carrier Parts Manual Double Reduction Differential Carrier Parts Manual Drive Thru Differential Carrier Parts Manual Air Brake Parts Manual


Part numbers contained in this manual were in effect at the time this manual was approved for printing and are subject to change without notice or liability. Fabco Automotive Corporation reserves the right to change parts at any time.

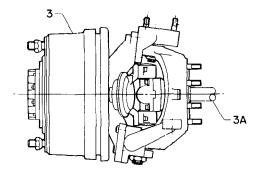

NOTES:


- [1] AXLE NAME PLATE LISTS MODEL NUMBER, SERIAL NUMBER AND PART NUMBER. THIS DATA SHOULD BE RECORDED AND USED WHEN ORDERING PARTS.
- [2] REFER TO THE DIFFERENTIAL CARRIER PART MANUAL FOR INFORMATION RELATING TO THE DIFFERENTIAL CARRIER ASSEMBLY.
- [3] ITEMS 2 THROUGH 7 ARE VARIABLE AND INTERCHANGEABLE TO SUIT CUSTOMER REQUIREMENTS.

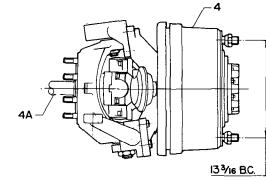

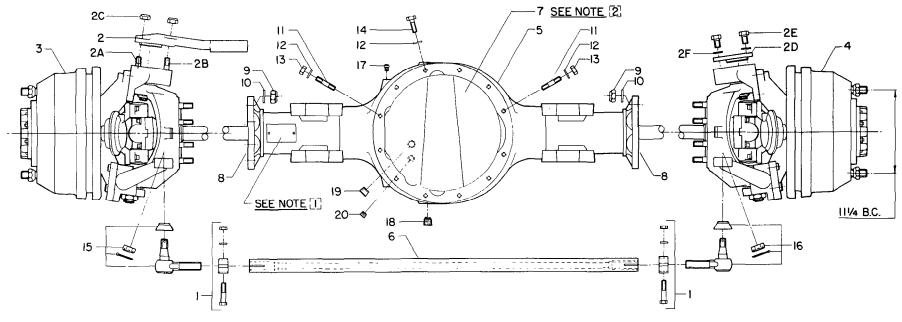


ITEN 4	DADT NO	DESCRIPTION	QUANTITY PER AXLE
ITEM	PART NO.	DESCRIPTION	PERAXLE
1	255 427	Clamp Assembly Tie Rod	2
2	_	*Arm, Steering	A/R
2A	788 473	*Stud, Steering Arm Mounting (Short)	A/R
2B	788 472	*Stud, Steering Arm Mounting (Long)	A/R
2C	688 687	*Nut, Steering Arm Mounting	A/R
2D	235 383	*Cap, Upper Kingpin	A/R
2E	265 269	*Bolt, Upper Kingpin Cap	A/R
2F	927 293	*Washer, Upper Kingpin Cap	A/R
3	_	'End, Left Steerable Drive (11¼ Bolt Circle)	1
	_	*End, Left Steerable Drive 133/16 Bolt Circle)	
3A	_	*Shaft, Left Inner Axle	1
4	_	*End, Right Steerable Drive (11¼ Bolt Circle)	1
	_	*End, Right Steerable Drive 13°/16 Bolt Circle)	
4A	_	*Shaft, Right Inner Axle	1
5	_	*Housing, Axle	1
6	_	*Tube, Tie Rod	1
7	_	*Differential Carrier Assembly	1
8	427 452	Gasket, Form-In-Place Silicone Type	3 oz.
		Suspension Yoke and Differential to Axle Housing	
9	688 689	Nut, Suspension Yoke to Axle Housing	16
10	927 668	Washer, Suspension Yoke to Axle Housing	16
11	788 462	Stud, Differential Carrier Mounting	2
12	927 276	Lockwasher, Differential Mounting	12
13	688 265	Nut, Differential Mounting Studs	2
14	265 223	Capscrew, Differential Mounting	10
15	363 272	End, Left Tie Rod	1
16	363 273	End, Right Tie Rod	1
17	836 222	Fitting, Axle Housing Vent	'
18	758 274	Plug, Axle Housing Drain	1
19	758 362	Plug, Dryseal, Axle Housing Oil Level	1
20	758 293	Plug, Dryseal	

^{*}See note 2 Table of Contents.

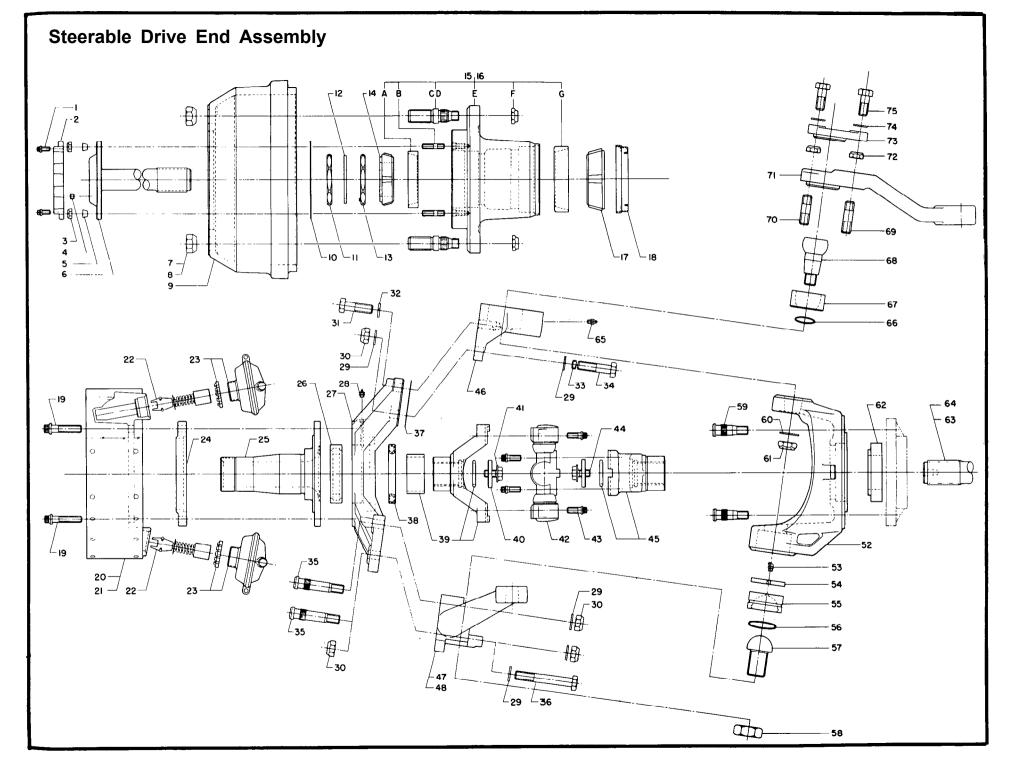

Steerable Drive End Assembly

				ITY PER END				AXLE	ITY PER E END
ITEM	PART NO.	DESCRIPTION	L.H.	R.H.	ITEM	PART NO.	DESCRIPTION	L.H.	R.H.
1	724 426	Capscrew, Hub Cap	2	2	E	482 362	Hub, Wheel B.C.)	1	1
2	483 257	Hub Cap	1	1		482 363	Hub, Wheel B.C.)	1	1
3	688 493	Nut, Outer Shaft	10	10	l F	688 289	Nut, Wheel Stud Lock	10	10
4	758 232	Plug, Axle Flange	1	1	G	233 397	Bearing Cup, Inner	1	1
5	736 348	Dowel, Drive Stud	10	10	17	233 396	Bearing Cone, Inner	1	1
6	769 268	Shaft Outer	1	1	18	732 334	Seal, Hub	1	1
7	688 259	Nut, Wheel RH		10	19	724 665	Screw, Wheel Spindle	8	8
8	688 262	Nut, Wheel LH	10	_	20	272 395	Brake Assembly Left Hand		
9	378 278	Drum 15 x 5 Brake			ł		(12" Wedge)	1	
	378 279	11¼ Bolt Circle) (Drum, 15 x 5 Brake	1	1		272 397	Brake Assembly Left Hand) (14" Wedge)	ı	
		13 ³ / ₁₆ Bolt Circle)			21	272 396	Brake Assembly Right Hand		
10	427 257	Gasket, Outer Axle Shaft	1	1	-	000	(12" Wedge)		
11	688 242	Nut, Wheel Bearing Lock	1	1	1	272 398	Brake Assembly Right Hand	_	1
12	927 278	Washer, Wheel Bearing Lock	1	1		2.2 000	(14" Wedge)		
13	688 239	Nut, Wheel Bearing Lock (With Dowel)	1	1	22		Wedge Assembly (Included with Items 20 and 21)	_	_
14	233 242	Bearing Cone, Outer	1	1	23	243 264	Actuator & Locknut, Brake	2	2
15	_	*Hub Assembly Left Hand			24	736 936	Ring, Brake to Spindle	1	1
		111/4 Bolt Circle)			25	774 292	Spindle	1	1
	_	*Hub Assembly Left Hand	1		26	233 264	Bearing, Outer Axle Shaft	1	1
		13 ³ / ₁₆ Bolt Circle)			27	965 892	Yoke, Spindle	1	1
16	_	*Hub Assembly Right Hand)			28	836 235	Vent	1	1
		111/4 Bolt Circle)			29	927 668	Washer, Plain Hardened,	8	8
	_	*Hub Assembly Right Hand	_	1	30	688 689	Nut, Kingpin Bracket	6	6
		13 ³ / ₁₆ Bolt Circle)			31	265 986	Bolt, Upper Kingpin Bracket	2	2
Α	233 239	Bearing Cup, Outer	1	1	1		Mounting Long)		
В	788 232	Stud, Outer Axle	10	10	32	927 293	Washer, Spring Lock,	2	2
C	788 494	Stud, Wheel LH Short (1% from Hub out)			33	265 659	Bolt, Upper Kingpin Bracket Steering Stop Long)	1	1
	788 498	Stud, Wheel LH Long (2% from Hub out)	10		34	265 673	Bolt, Upper Kingpin Bracket Mounting (3 Long)	1	1
D	788 495	Stud, Wheel RH Short) 1% from Hub out)		10			See note 2 Table of Contents.		
	788 499	Stud, Wheel RH Long) (2% from Hub out)							

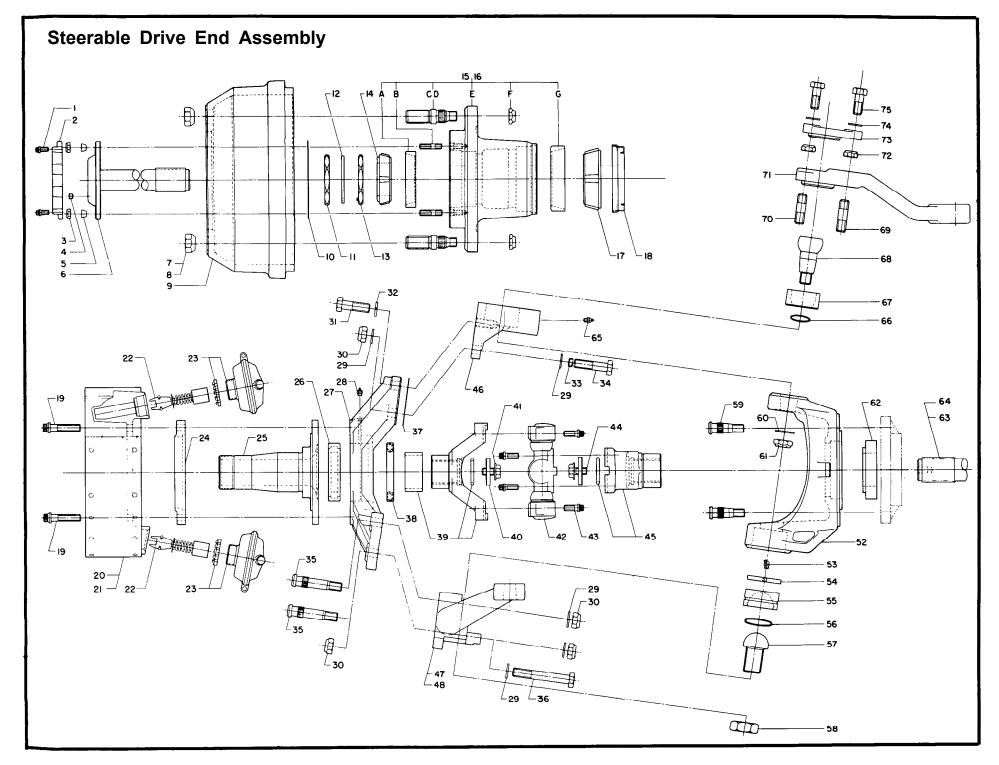

Steerable Drive End Assembly

ITEM	PART NO	DESCRIPTION		ITY PER E END R.H.	ITEM	PART NO.	DESCRIPTION	QUANTI AXLE L.H.	TY PER END R.H.	
					=					
35	788 542	Stud, Lower Kingpin Bracket	3	3	60	927 649	Washer, Upper Kingpin	1	1	
36	265 789	Bolt, Lower Kingpin Bracket	1	1	61	688 274	Nut, Upper Kingpin	1	1	
37	744 299	Shim, Upper Kingpin Bracket	1	1	62	732 305	Seal, Assembly Inner Drive Yoke	1	1	
38	732 333	Seal, Outer Axle Shaft	1	1	63	_	*Shaft, Inner Axle			
39	9651888	Yoke, Outer Drive with	1	1	64	_	*Shaft, Inner Axle		_	
		Ring and Bearing Race			65	358 222	Fitting Grease	1	1	
40	927 1776	Washer, Drive Yoke Retaining	2	2	66	675 222	O-Ring, Upper Kingpin	1	1	
41	675 016	O-Ring, Drive Yoke Sealing	2	2	67	234 239	Bearing, Upper Kingpin	1	1	
42	277 269	Cross & Bearing Assembly	1	1	68	225 278	Ball Stud Upper Kingpin	1	1	
43	724 574	Capscrew, Cross & Bearing	8	8	69	788 472	**Stud, Steering Arm (Long)	_		
44	265 379	Bolt, Axle Shaft	2	2	70	788 473	**Stud, Steering Arm (Short)	_		
45	9651887	Yoke, Inner Drive with Ring	1	1	71	-	**Steering Arm	_		
46	273 647	Bracket, Upper Kingpin (Plain)	1	1	72	688 687	**Nut, Steering Arm Mounting	_	_	
47	273 653	Bracket, Lower Kingpin LH	1	_	73	235 383	**Cap, Upper Kingpin	_	-	
48	273 654	Bracket, Lower Kingpin RH	_	1	74	927 293	**Washer, Upper Kingpin Cap		_	
49		(NOT USED)			75	265 269	**Bolt, Upper Kingpin Cap		_	
50		(NOT USED)			1					
51		(NOT USED)								
52	965 894	Yoke, Suspension	1	1			Table of Contents (axle shafts may dif			
53	358 223	Fitting 45° Grease	1	1	İ	left to righ	t according to position of differential.))		
54	793 266	Disc Lower Kingpin Bearing	1	1						
55	234 242	Bearing, Lower Kingpin	1	1		**These parts are listed on axle assembly shown here for reference only.				
56	675 229	O-Ring, Lower Kingpin	1	1						
57	225 277	Ball Stud Lower Kingpin	1	1	1					
58	688 578	Nut, Lower Kingpin	1	1]					
59	788 525	Stud, Suspension Yoke	8	8						
Ja	100 323	otaa, oasponsion roke	Ū	•	Į.					

NOTES

PARTS MANUAL SDA 21

Steerable	Drive	Axle	Assembly	50-51
Steerable	Drive	End	Assembly	52-55

To Use This Book:

- 1. Refer to the exploded view which illustrates the needed part.
- 2. Find the required part in the exploded view and then note the item number or numbers.
- 3. Locate the item number in the parts list for part number, description, and quantity.


Note:

- 1. Before ordering parts for a Fabco Steerable Drive Axle, please refer to the Fabco nameplate located on the left rear of the axle housing. Specify model number, serial number, ratio or other information that is on the nameplate when ordering parts.
- 2. Some parts such as the steerable drive ends, the axle housing and the steering arm are unique to customer specifications. Our parts personnel can refer to the specific Bill of Material to determine part numbers for these parts.

Additional Parts Manuals:


Single Reduction Differential Parts Manual Double Reduction Differential Parts Manual Drive Thru Style Differential Parts Manual Air Brake Parts Manual

Part numbers contained in this manual were in effect at the time the manual was approved for printing and are subject to change without notice or liability. Fabco reserves the right to change parts at any time.

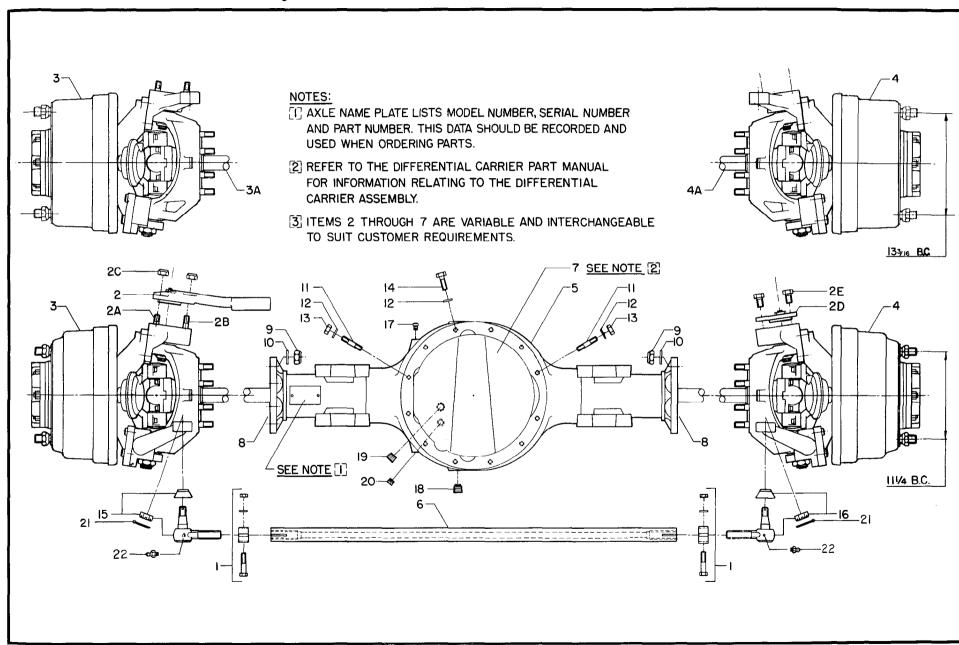

			QUANTITY	
ITEM	PART NO.	DESCRIPTION	PER AXLE	
1	255 427	Clamp Assembly Tie Rod	2	
2	MATERIAL MAT	*Arm, Steering	A/R	
2 A	788 554002	*Stud, Steering Arm Mounting (Short)	A/R	
2 B	788 554001	*Stud, Steering Arm Mounting (Long)		
2 C	688 275	*Nut, Steering Arm Mounting	A/R	
2 D	235 383	*Cap, Upper Kingpin	A/R	
2E	265 998	*Bolt, Upper Kingpin Cap	A/R	
		*End, Left Steerable Drive		
3 A	_	*Shaft, Left Inner Axle	1	
4	_	*End, Right Steerable Drive		
<u>4</u> A	44-matter	*Shaft, Right Inner Axle	1	
5		*Housing, Axle	1	
6 7		*Tube, Tie Rod	1	
	_	*Differential Carrier Assembly	1	
9	688 689	Nut, Suspension Yoke to Axle Housir	ng 16	
10	927 668	Washer, Suspension Yoke to Axle Ho	ousing 16	
11	788 533001	Stud, Differential Carrier Mounting	2	
12	927 276	Lockwasher, Differential Mounting	12	
13	688 265	Nut, Differential Mounting Studs	2 R381 DIFF .	22 DIFF.
14	265 222	Capscrew, Differential Mounting, 2 L		1
	265 223	Capscrew, Differential Mounting, 1¾ Lon	g 10	6
15	363 272	End, Left Tie Rod	1	
16	363 273	End, Right Tie Rod	1	
17	836 222	Fitting, Axle Housing Vent	1	
18	758 274	Plug, Axle Housing Magnetic Drain	1	
19	758 369	Plug, Dryseal, Axle Housing Oil Level,	Magnetic 1	
20	758 293	Plug, Dryseal	1	
2 1	749 225	Cotter Pin	1	
22	358 222	Grease Fitting	2	
	728 232001	Loctite 515 Gasket Eliminator	6 ml Tube	

^{*}See Note 2, Table of Contents.

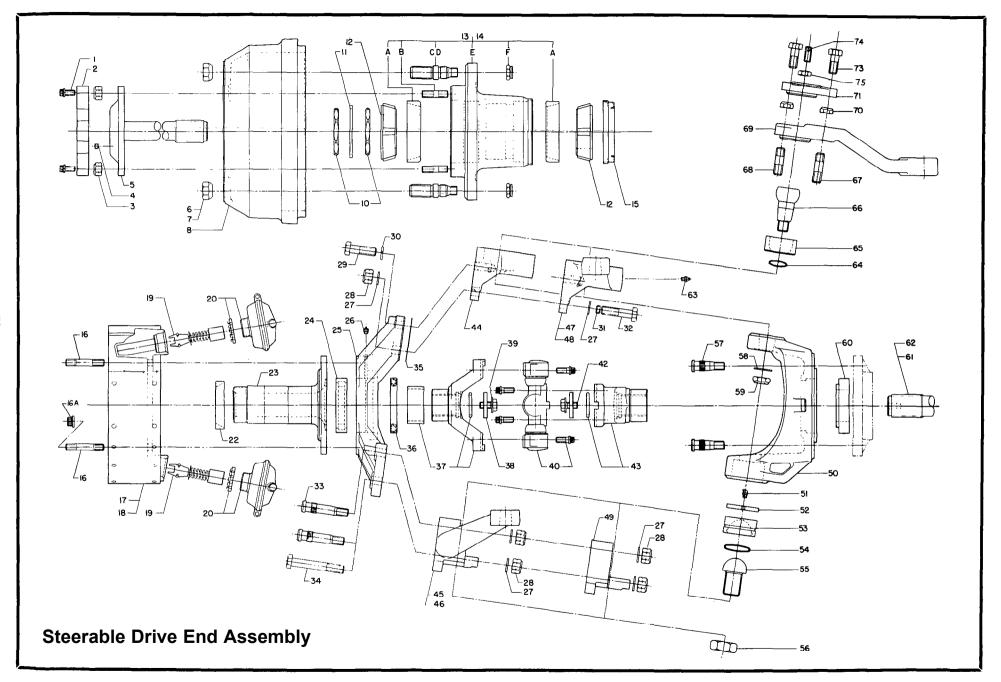


Steerable Drive End Assembly			NTITY AXLE					QUANTITY PER AXLE		
ITEM	PART NO.	DESCRIPTION	L.H.	R.H.	ITEM	PART NO.	DESCRIPTION	L.H.	R.H.	
1	724 426	Capscrew, Hub Cap	2	2	A	233 462	Bearing Cup, Inner & Outer	2	2	
2	483 256	Hub Cap	1	1	В	788 553 002	Stud, Outer Axle	8	8	
3	688 292	Nut, Outer Shaft	8	8	С	788 544 003	Stud, Wheel, LH, Short			
4	758 232	Plug, Axle Flange	1	1		788 544 001	(1 3/8 From Hub Out) Stud, Wheel, LH, Long	10		
5	769 393	Shaft, Outer	1	1		, 00 0 1 1 00 1	(2 1/8 From Hub Out)			
6	688 262 688 667	Nut, Wheel LH, 11¼ B.C. Nut, Wheel LH, 13 3/16 B.C.HD	10		D	788 544 004	Stud, Wheel, RH, Short) (1 3/8 From Hub Out)			
7	688 259 688 668	Nut, Wheel RH, 11¼ B.C. Nut, Wheel RH, 13 3/16 B.C.HD	Marie Sand	10		788 544 002	Stud, Wheel, RH, Long (2 1/8 From Hub Out)	Manager .	10	
8	378 286	Drum, 15 x 6 Brake) (111/4 Bolt Circle)			E	482 367 482 368	Hub, Wheel (11¼ B.C.) Hub, Wheel (13 3/16 B.C.)	1	4	
	378 288	Drum, 15 x 6 Brake	1	1	F	688 737	Nut, Wheel Stud Back	10	10	
		(13 3/16 Bolt Circle)			15	732 373	Seal, Hub	1	1	
10	688 699	Nut, Wheel Bearing Lock	2	2	16A	688 733	Nut, Brake Mtg. Stud	8	8	
11	927 769	Washer, Wheel Bearing Lock	1	1	16	788 553 003	Stud Brake Mtg.	8	8	
12	233 459	Bearing Cone, Inner & Outer	2	2	17	272 446	Brake Ass'y., LH	1	**************************************	
13	482*061 001	*Hub, Ass'y., LH, Short Studs			18	272 447	Brake Ass'y., RH	wheter	1	
	482*061 005	(11¼ B.C.) *Hub, Ass'y., LH, Short Studs (13 3/16 B.C.)	1		19		Wedge, 12° (Part of Brake Brake Assembly)	REF	REF	
	482*061 003	*Hub, Ass'y., LH, Long Studs (20	243 264	Actuator & Locknut, Brake	2	2	
	(11¼ B.C.) 482*061 007 *Hub, Ass'y., LH, Long Studs	*Hub, Ass'y., LH, Long Studs			23	774 295	Spindle	1	4	
		(13 3/16 B.C.)			24	233 264	Bearing, Outer Axle Shaft	1	1	
14	482*061 002	*Hub, Ass'y., RH, Short Studs (111/4 B.C.)			25	965 892	Yoke, Spindle	4	1	
	482*061 006	*Hub, Ass'y., RH, Short Studs			26	836 235	Vent	1	1	
	482*061 004	(13 3/16 B.C.) 82*061 004 *Hub, Ass'y., RH, Long Studs (11¼ B.C.)	***************************************	1	27	927 668	Washer, Plain Hardened, 3/4	8	8	
	402 001 004				28	688 689	Nut, Kingpin Bracket	6	6	
	482*061*008	*Hub, Ass'y., RH, Long Studs) (13 3/16 B.C.)			29	265 986	Bolt, Upper Kingpin Bracket Mounting (2½ Long)	2	2	
		*See Note 2 Table of Contents			30	927 293	Washer, Spring Lock, 3/4	2	2	

င့်

j.

.

STANGER STANKES

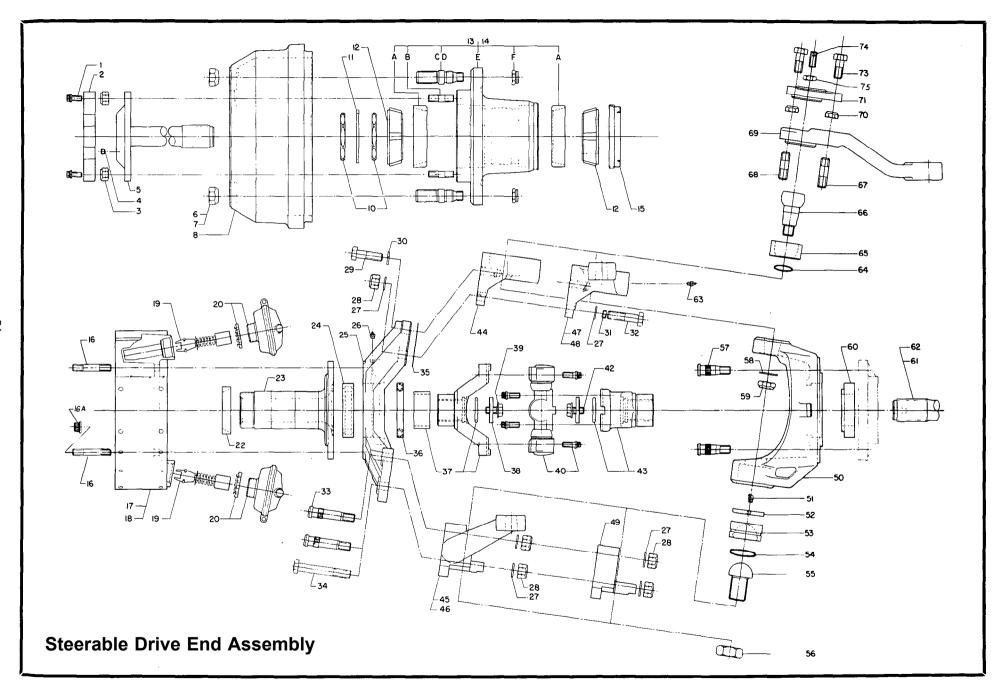

Steerable Drive End Assembly Cont'd.				NTITY AXLE					NTITY AXLE	
ITEM	PART NO.	DESCRIPTION	L.H.	R.H.	ITEM	PART NO.	DESCRIPTION	L.H	R.H.	
31	265 924	Bolt, Upper Kingpin Bracket	1	1	56	688 578	Nut, Lower Kingpin	1	1	
		Steering Stop (4 Long)			57	788 538 006	Stud, Suspension Yoke	8	8	
32	265 673	Bolt, Upper Kingpin Bracket Mounting (3 Long)	1	1	58	927 649	Washer, Upper Kingpin	1	1	
33	788 538 014	Stud, Lower Kingpin Bracket	3	3	59	688 274	Nut, Upper Kingpin	1	1	
34	265 789	Bolt, Lower Kingpin Bracket	1	1	60	732 305	Seal, Ass'y., Inner Drive Yoke	1	1	
35	744 299	Shim, Upper Kingpin Bracket	1	1	61	_	*Shaft, Inner Axle	_	_	
36	732 333	Seal, Outer Axle Shaft	1	1	62	_	*Shaft, Inner Axle	_		
37	9651939	Yoke, Outer Drive w/Ring &	1	1	63	358 222	Fitting, Grease	1	1	
		Bearing Race			64	675 222	O-Ring, Upper Kingpin	1	1	
38	9271776	Washer, Drive Yoke Retaining	2	2	65	234 239	Bearing, Upper Kingpin	1	1	
39	675 016	O-Ring, Drive Yoke Sealing	2	2	66	225 278	Ball Stud, Upper Kingpin	1	1	
40	277 265	Cross & Bearing Assembly	1	1	67	788 554 001	**Stud, Steering Arm (Long)		_	
42	265 989	Bolt, Axle Shaft	2	2	68	788 554 002	**Stud, Steering Arm (Short)	_	_	
43	9651938	Yoke, Inner Drive w/Ring	1	1	69		'*Steering Arm	_	_	
44	273 647	Bracket, Upper Kingpin (Plain)	1	1	70	688 275	*'Nut, Steering Arm Mounting		_	
45	273 653	Bracket, Lower Kingpin, LH	1	_	71	235 383	'*Cap, Upper Kingpin	_	_	
46	273 654	Bracket, Lower Kingpin, RH		1	73	265 998	*'Bolt, Upper Kingpin Cap	_	_	
47	273 675	Bracket, Upper Kingpin, LH	1		74	724 723	Screw, Set, Soc. HD	1	1	
48	273 676	Bracket, Upper Kingpin, RH	_	1	75	688 636	Nut, Jam, %-18	1	1	
49	273 662	Bracket, Lower Kingpin, Plain	1	1						
50	965 937	Yoke, Suspension	1	1						
51	358 223	Fitting, 45°, Grease	1	1			, Table of Contents (axle shafts may right according to position of differ			
52	793 266	Disc, Lower Kingpin Bearing	1	1	ļ					
53	234 242	Bearing, Lower Kingpin	1	1		**These parts are listed on axle assembly shown here for reference only.				
54	675 229	O-Ring, Lower Kingpin	1	1	1					
55	225 277	Ball Stud, Lower Kingpin	1	1						