

**Brought to you by Pro Gear &  
Transmission.**


**For parts or service call:**

**877-776-4600  
407-872-1901**




**[www.globaldifferentialsupply.com](http://www.globaldifferentialsupply.com)**

**906 W. Gore St. Orlando, FL 32805  
[parts@eprogear.com](mailto:parts@eprogear.com)**

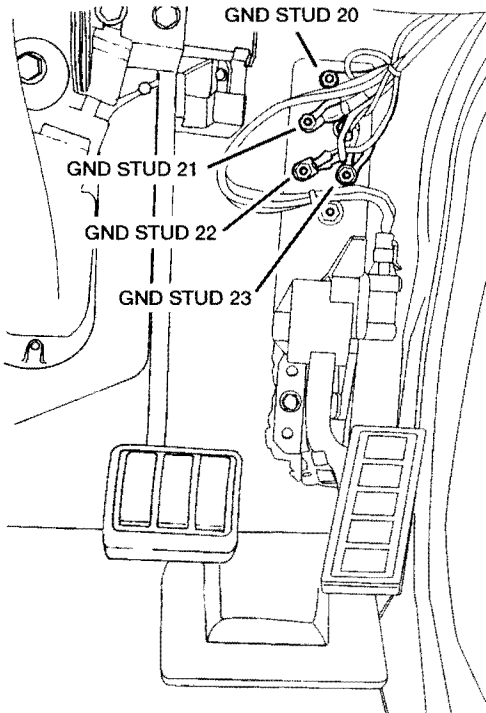

W3000593


Ground Studs (inside cab, driver side)

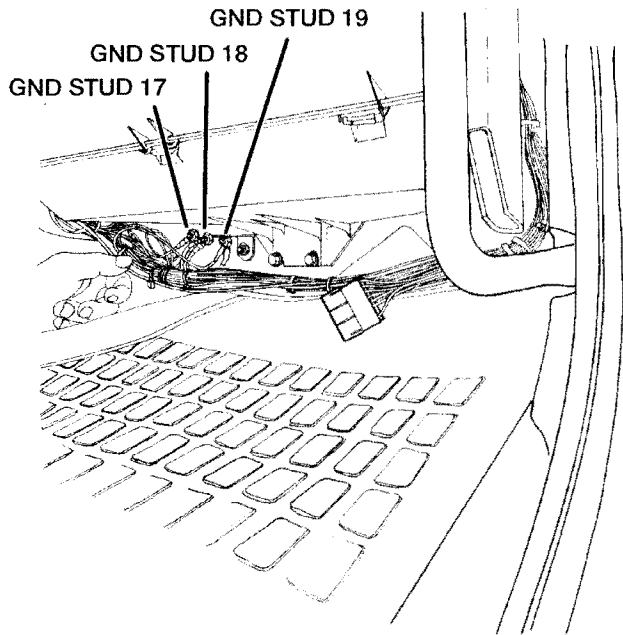

W3000592


Ground Studs and splice pack (inside cab, passenger side, under heater unit)

### Other ground junctions

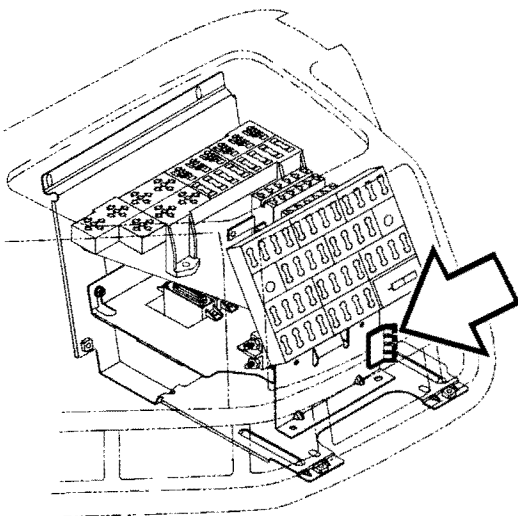

W3000967

Bus bar located inside Truck Electrical Center (center dash)

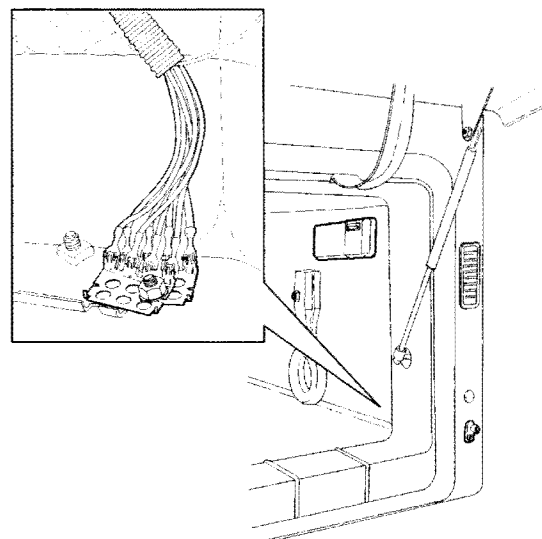

W3000937

Driver terminal junction ground located inside LHS luggage compartment