

Brought to you by Pro Gear &
Transmission.

For parts or service call:

877-776-4600

407-872-1901



www.globaldifferentialsupply.com

906 W. Gore St. Orlando, FL 32805
parts@eprogear.com

Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to January 2002.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is believed to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to an S.R.T. (Standard Repair Time).

Service procedures which do not include an operation number in the title are for general information and no reference is made to an S.R.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

Note: Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

Caution: Indicates an unsafe practice where damage to the product could occur.

Warning: Indicates an unsafe practice where personal injury or severe damage to the product could occur.

Danger: Indicates an unsafe practice where serious personal injury or death could occur.

Volvo Trucks North America, Inc.
Greensboro, NC USA

Order number: PV776-TSP158779

© 2002 Volvo Trucks North America, Inc., Greensboro, NC USA


All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Trucks North America, Inc..

Contents

General	3
Preventive Maintenance	3
Specifications	7
Engines	7
Transmissions	10
Rear Axle	11
Tools	12
Special Tools and Special Equipment	12
Preventive Maintenance Inspection Bay	19
Design and Function	21
Valve Adjustment Interval	21
Clutch	21
Power Take-off	23
Driveshaft	23
Brakes	24
Steering System	25
Hubs	26
Chassis	27
Cab	28
Preventive Maintenance	29
Annual Service Including Lubrication and Oil Change	29
Reception	33
Lubrication	34
Cab	53
External Checks	63
Engine Compartment Checks	72
Front Suspension, Steering System Checks	83
Checks Beneath the Vehicle	86
Test Driving	103
.....	113
Additional Time Based Maintenance	113
.....	115
Additional Mileage Based Maintenance	115
Feedback	

General

Preventive Maintenance

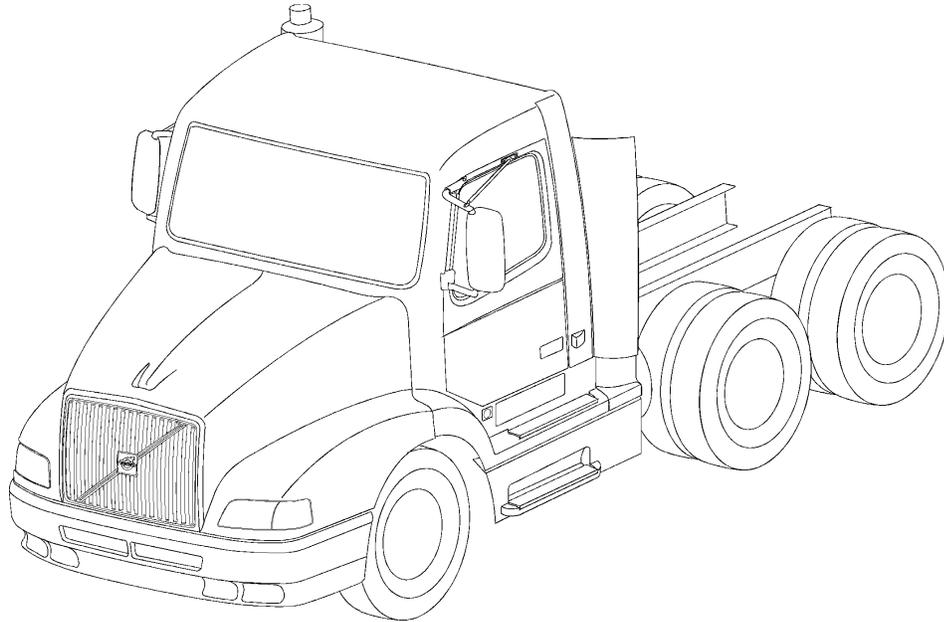

W9000073

Introduction

This manual describes inspection and lubrication requirements during the Annual Service of Volvo vehicles. The purpose for performing the preventive maintenance is to ensure that the vehicle is safe and roadworthy over its full lifetime.

The driver is taking part in the continuous preventive maintenance program by completing the required Daily Pre-trip Inspection. This is a purely visual inspection that is designed to detect any obvious problems that would make the vehicle unsafe to take on the road. Added to the Pre-trip Inspection is the Preventive Maintenance Program that is typically carried out by trained personnel using a systematic approach to cover all important components of the new vehicle.

Preventive maintenance is a planned vehicle maintenance program that provides an orderly series of servicing and inspecting procedures. A well applied maintenance program realizes the investment made in the vehicle. The difference between a poorly maintained vehicle and a well maintained vehicle will not show up until later mileages. Good maintenance is necessary to assure the designed life expectancy of the vehicle and its individual components.

Maintenance Coverage

There is no firm maintenance program that will apply to all operations. A basic maintenance program is not difficult to set up; to make the program the most effective takes time and effort, and is based around the needs and experiences of each individual operation. The program in this service manual covers all types of Volvo VN/VHD vehicles with medium to high mileages and sometimes high loads.

Use this established maintenance program as a base to tailor an individual maintenance program for customers that have requirements that are outside of the scope of this program.

To establish an individual program, look at information sources that are usually available, such as:

- Driver's repair or complaint reports.
- Unusual parts usage.
- Repetitive failures or problems found in inspection.
- Unscheduled maintenance or repairs.
- Road failures.

Program Structure

This maintenance program has been based on the progress in vehicle technology and increases in oil quality to simplify the maintenance.

For simplified scheduling, the program has tied maintenance to logical time or mileage limits that make it easy to anticipate needed servicing. For the majority of on-highway operators, the 24,000 km (15,000 miles) or 4 months schedule can be used with little change.

It is important that the scheduled intervals are followed as limits. Maintenance can be done before either 24,000 km (15,000 miles) have been reached or before 4 months are up but must be made at or before either the mileage or the time limit has been reached.

Advantages

A well-planned preventive maintenance program offers the following advantages:

- The lowest attainable maintenance cost.
- Maximum vehicle uptime.
- Better fuel economy.
- Reduced road failures; greater dependability.
- Increased customer confidence, better public relations.
- Less possibility of accidents due to defective equipment.
- Fewer driver complaints.

Regardless of the planning and the details of the maintenance program, the success of the program hinges on the caliber of workmanship in performing the actual inspection. A major cause of failure is a "pencil inspection"; that is, the mechanic checks off each operation as being OK without making the actual inspection. A "pencil inspection" defeats the purpose of the inspection, which is to detect an impending failure.

Maintenance Form

A service manual is issued detailing the current inspection forms. Forms are created for different users but all with the same references to this document. When the inspection point is carried out, check the box if the item is OK. If further work, such as adjustment, repair, etc., needs to be performed, check that box and go on with the next inspection point. Items noted as being faulty or in need of adjustment need to be shown to the customer and scheduled for repair.

There are many time — and/or mileage-based — service items that are not listed on the form. Look at the end of this document for a listing of additional components that may need to be serviced, depending on the mileage or time since last service.

Maintenance Records

It is important to use the inspection form together with other reports to come up with the best maintenance program for a specific application. Use driver's reports, complaints, parts usage, repetitive failures, previous repair orders, road failures, etc. to build a maintenance picture of the customer operation.

Records should be collected over the lifetime of the vehicle to form a permanent vehicle record file. The vehicle file should be used to customize the operational maintenance needs.

The "Driver Inspection Form" is also required by Federal law. The use of this inspection report makes the driver a part of the maintenance program and places direct responsibility on the driver to report problems that may come up during operation. When properly used, there should be no excuse for a defective vehicle being in service.

Note: The included Annual Service checklist is an uncontrolled copy. The document may be updated without notice.

Annual Inspection

Note: For further information refer to Publication 177-500, "Preventive Maintenance, Basic Service, VN,VHD."

The Annual inspection is carried out yearly in addition to a Basic inspection. This inspection is designed to open up components for inspection or using test equipment to record performance.

The ideal time to carry out the Annual inspection is right before the hardest season, which means just before winter in the cold weather climates or just before summer in the hot weather climates.

All inspection points are to be carried out as verification of function or condition. Any defects are noted on the inspection form for later correction, if so ordered by the vehicle owner.

Note: The standard repair time for performing the Annual Service Preventive Maintenance is based on inspection without repair or adjustment, and Oil and Filter Change.

Other Inspection

There are additional service points that are carried out at specific mileage or time intervals. These are not part of the Preventive Maintenance basic time. They should be scheduled as an adjustment or repair job carried out at the same time as the Preventive Maintenance, and are listed in this document as reminders only.

Noise Emissions

Volvo Trucks North America, Inc. warrants to the first person who purchases this vehicle for purposes other than resale and to each subsequent purchaser, that this vehicle as manufactured by Volvo Trucks North America, Inc. was designed, built and equipped to conform, with all applicable U.S. EPA Noise Control Regulations, at the time it left the control of Volvo Trucks North America, Inc.

This warranty covers this vehicle as designed, built and equipped by Volvo Trucks North America, Inc., and is not limited to any particular part, component or system of the vehicle manufactured by Volvo Trucks North America, Inc. Defects in design, assembly or in any part, component or system of the vehicle as manufactured by Volvo Trucks North America, Inc., which, at the time it left the control of Volvo Trucks North America, Inc. caused noise emissions to exceed Federal standards, are covered by this warranty for the life of the vehicle.

Tampering with Noise Control System

Federal law prohibits the following acts or the causing thereof:

(1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use;

or

(2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

Noise Shields and Insulation

Removing or rendering inoperative the engine and/or transmission noise deadening panels, shields or insulating materials.

Removing or rendering inoperative the cab tunnel or hood noise insulating materials.

Removing or rendering inoperative any truck body mounted sound insulation components and/or shields (e.g., cab or fender shields, skirts, wheel housing splash shields, etc.).

Engine Control and Fuel Systems

Removing or rendering inoperative, or modifying the engine control system (such as the ECU or the fuel system components) in order to allow the engine to operate outside of the manufacturer's specifications (e.g., exceeding the manufacturer's engine speed limits).

Cooling System

Removing or rendering inoperative cooling system components (e.g., temperature-controlled fan clutch, fan shroud, fan ring, recirculation shields, etc.).

Exhaust System

Removing or rendering inoperative exhaust system components (e.g., muffler, pipes, clamps, etc.).

Air Intake System

Removing or rendering inoperative air intake/induction system components (e.g., filter, filter housing, ducts, etc.).

Safety Advice



DANGER

Never operate a diesel engine in an area where hydrocarbon vapors (gasoline for example) are present or are suspected to be present. Hydrocarbon vapors can enter the air intake and make the engine overspeed, causing severe damage and/or explosion or fire. Serious personal injury or death can occur.



DANGER

Before working on a vehicle, set the parking brakes, place the transmission in neutral, and block the wheels. Failure to do so can result in unexpected vehicle movement and can cause serious personal injury or death.



DANGER

When entering and exiting the cab, use caution. Always have a firm hand hold and/or stable foot position before transferring weight to that position. Do not carry anything when entering or exiting. Make sure the soles of your shoes and the cab steps are free from dirt, grease, oil or moisture before using the steps. Failure to do so can result in a fall, and serious personal injury or death may occur.



DANGER

If using a jack and/or jack stands, choose proper fault-free equipment. Failure to do so can result in equipment failures and personal injury or death may occur.

Note: During the Preventive Maintenance inspection, check the condition of warning labels on the vehicle. If a label is damaged or defaced to the point where the message cannot be read, note on the inspection form to have it replaced.

Specifications

Engines

General

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," Publication Number 175-001, and appropriate vendor literature.

In a modern diesel engine it is very important to have regular oil changes. The demands of pulling high loads, pulling at high elevations, extreme high or low temperatures and longer service intervals, make the choice of correct oil a hard task. The Volvo dealer, the engine manufacturer or the oil manufacturer has the expertise to analyze driving conditions and to recommend which oil gives the best protection and economy.

Oil

The engine oil lubricates, seals, cools and cleans the engine. Filtering the intake air and using a low sulfur fuel helps the oil protect the engine parts. With better engine designs and improved oils, the service intervals have steadily increased. The interval choice depends on the engine manufacturer specifications. Make sure the correct oil type and also the correct viscosity are chosen for the mileage interval driven.

Periodic oil testing is recommended. The test results give a continuous picture of the health of the engine and can warn well in advance of a problem developing.

The intervals will not cover all applications. In on/off highway driving, severe off highway, continuous stop-and-go city driving and extremely high mileages, the oil change interval and preventive maintenance schedule need to be customized for the best protection and economy. The intervals listed in these specifications are guidelines that should be used in establishing a correct maintenance program.

CAUTION

Adding unknown additives may put the engine at risk of failure. There are many aftermarket oil additives that claim improved performance if added to the engine oil. Each oil type recommended already contains additives that have been tested by a collaboration with engine and oil manufacturers.

Synthetic oil is offered as an alternative to the traditional petroleum based oil for the engines. The ability of synthetic oil to protect the engine is better than regular oil but its life is the same as for regular oil. This is because of the combustion by-products that contaminate the oil. These contaminants will make the change intervals the

same as for regular oil. However, in extreme driving conditions, a synthetic oil may be the only choice for the application.

Note: It is not recommended to mix synthetic oils with petroleum-based oils.

Coolant

The engine coolant protects the cooling system from freezing or boil over problems. It also protects against corrosion and cylinder liner pitting. Coolant requirements are based on the additive levels present in the cooling system. To be able to run the cooling system as long as 2 years between coolant changes, there must be a replenishment of additives as they are used up. Testing should be done regularly to be sure the additive levels are within recommended levels.

Never run the engine with only water in the cooling system. Always use a mixture of clean water and a recommended antifreeze. The mixture should never be less than 40% antifreeze and 60% clean water or more than 60% antifreeze and 40% clean water.

Texaco Extended Life Coolant

Note: For further information on long life coolant refer to Service Bulletin 260-002, "Texaco Extended Life Coolant."

CAUTION

Texaco Long life coolant is colored red for identification purposes, so as not to mistake it for conventional, green coolant. Long life coolant will test as out of additives (SCA), but SCA should not be added.

Fleetguard ES Complete Long Life Coolant

Note: For further information on Fleetguard ES Complete Long Life Coolant refer to appropriate vendor literature.

Fuel

The sulfur content in low-sulfur fuel has been regulated to a maximum of 0.05% per weight for No.2-D diesel fuel. For fuels that have a sulfur content of 0.5% by weight and above, most engine manufacturers are requiring that oil is changed at shorter intervals. Sulfur creates highly acidic pollutants in the oil that break down the additives at a higher rate. If fuel with a higher sulfur content is used, the engine manufacturers recommend that the oil change intervals be reduced.

VOLVO ENGINES

Note: It is not recommended to mix synthetic oils with petroleum based oils.

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Maximum change intervals are 40,000 km (25,000 miles) if using oil that meets the Volvo Drain Specification -2 (VDS -2) . If the oil does not meet the requirements according to VDS, change intervals should be 24,000 km (15,000 miles) or less. Contact Volvo or a Volvo authorized dealer to obtain a list of approved VDS oils.

Shorter oil change intervals maybe required if the engine is operating in a dusty environment or if frequent stops and starts are made.

Supplemental coolant additives are recommended for all Volvo cooling systems. Antifreeze alone does not provide sufficient corrosion protection for heavy duty diesel engines.

If the fuel has a sulfur content exceeding 0.5% by weight, halve the indicated maximum mileage intervals.

Oil filters should always be changed when changing oil.

CUMMINS ENGINES

For further information, refer to the appropriate vendor literature.

If the engine is operating in ambient temperatures consistently below - 20 °C (0 °F) or above 40 °C (100 °F), perform maintenance at shorter intervals. Shorter intervals are also required if the engine is operating in a dusty environment or if frequent stops and starts are made.

Oil filters should always be changed when changing oil.

Supplemental coolant additives are recommended for all Cummins cooling systems. Antifreeze alone does not provide sufficient corrosion protection for heavy duty diesel engines.

Maximum Oil Drain Intervals

Note: Extended oil drain intervals are not recommended.

DETROIT DIESEL ENGINES

For further information, refer to the appropriate vendor literature.

The use of fuels with a sulfur content above 0.5% by weight will require more frequent oil changes. Refer to Detroit Diesel Publications for details. More frequent oil changes are also required if the engine is operating in a dusty environment or if frequent stops and starts are made.

Oil filters should always be changed when changing oil.

Supplemental coolant additives are recommended for all Detroit Diesel cooling systems. Antifreeze alone does not provide sufficient corrosion protection for heavy duty diesel engines.

Note: The Detroit Diesel Engine is installed in earlier VN vehicles (from 1996–2001) only.

CATERPILLAR ENGINES

For further information, refer to the appropriate vendor literature.

Caterpillar does NOT recommend an automatic extension of oil drain intervals with high quality oil, low sulfur fuel and non-severe duty driving. Oil drain intervals can only be extended with an oil analysis program containing the following elements: oil condition and wear metals, trend analysis, fuel consumption and oil consumption.

In areas where fuel sulfur content exceeds 1.5%, choose an oil with a total base number that is within the API CF-4 or CG-4 categories and shorten the oil change period based on oil analysis.

Shorter oil change intervals are required if the engine is operating in a dusty environment or if frequent stops and starts are made (see oil change interval below).

Oil filters should always be changed when changing oil.

Supplemental coolant additives are recommended for all Caterpillar cooling systems. Antifreeze alone does not provide sufficient corrosion protection for heavy duty diesel engines.

Note: Caterpillar Engines were installed in earlier VN vehicles (from 1996–1999) only.

Transmissions

Includes Volvo, Eaton Fuller, Meritor, and Allison HD Transmissions

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Rear Axle

Includes Volvo, Arvin Meritor, and Eaton Dana Rear Axles


For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Tools

Special Tools and Special Equipment


The following special tools are recommended for use in the preventive maintenance inspection. Special tools can be ordered through the Volvo Special Tools program in the parts ordering system or directly from Kent-Moore by calling (800) 328-6657. (Kent-Moore tool numbers are preceded by a J.) Please refer the specific tool number when ordering.

Special Tools

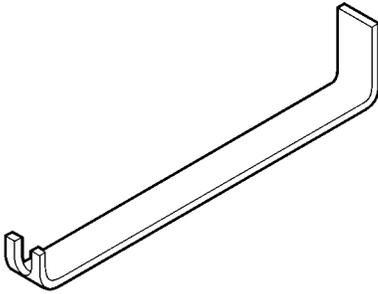


W0001489

J-42942
ABS Sensor Adjustment Tool
(Kent-Moore)

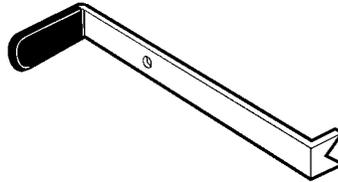


W0001198

J-42189
Airline Release Tool
(Kent-Moore)

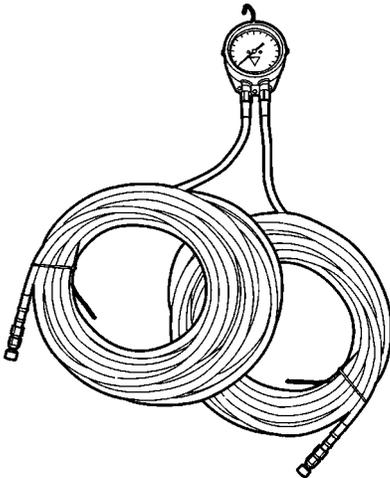


W0001731

J-44399
Air System Tester

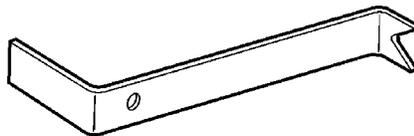


W0001874

J-44773
Airline Release Tool

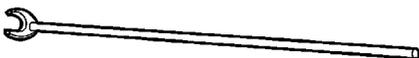

W0001896

J-44769
Wheel Speed Sensor Extractor

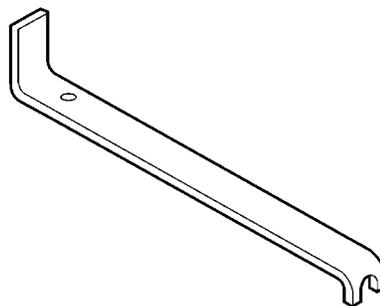

W5001199


J-44966
Wheel Speed Sensor Remover for Heavy Duty Steer Axle
and Aluminum Hub




J-44302
A/C Schrader Valve Core Removal Tool




J-44338
Oil Dipstick for A/C Compressor

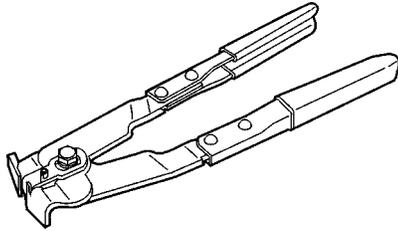


J-22610
Drive Shaft Boot Camp Pliers

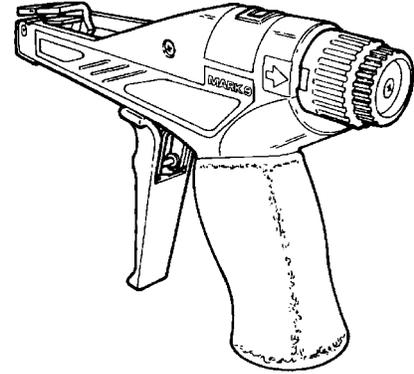


J-43143
Tie Strap Tensioner

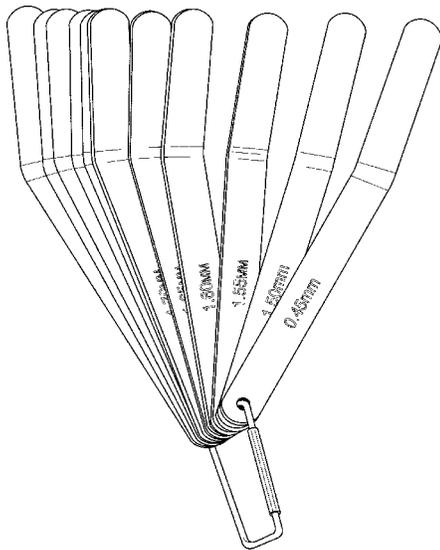


J-41610
Feeler Gauge Set

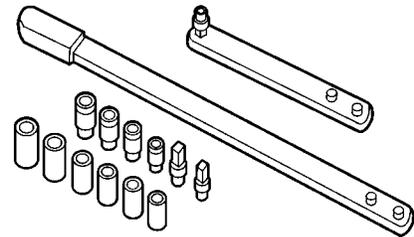


J-44392
Fan Belt Tensioner Tool

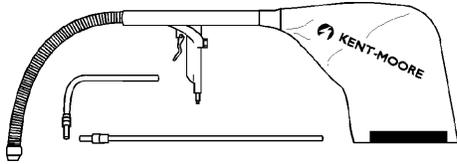

PT 5900
Chip Vacuum

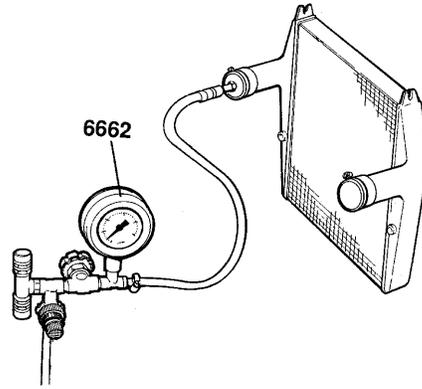


9998142
Charge Air Cooler Pressure Tester

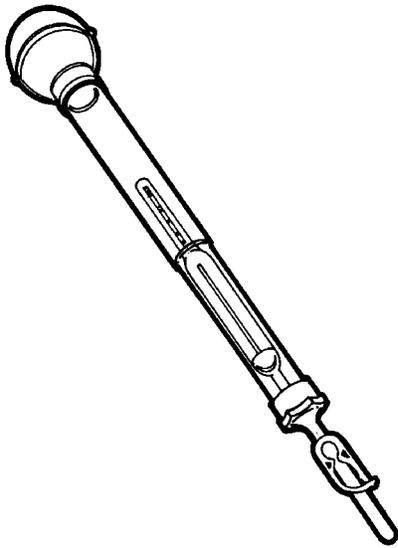


J-38641-B
Diesel Fuel Hydrometer

Other Special Equipment

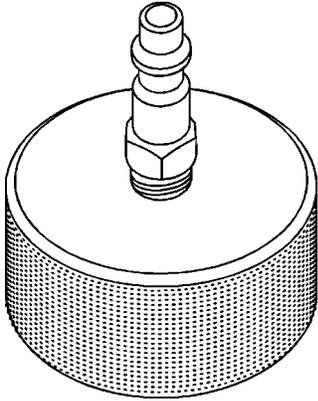

W0001261

J-42397-A
Coolant Pressure Test Adapter

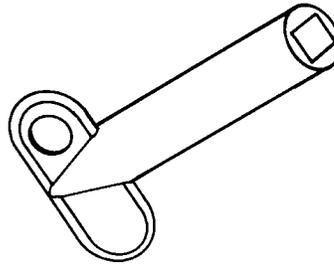


W3000642

1089953
Bulb Removal Tool



J-23600-B
Belt Tension Gauge

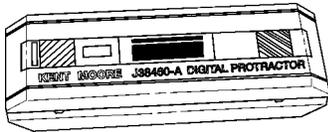


W7000708

J-38460-A
Digital Inclinometer




W0001985

J-36795
Tandem Axle Calipers

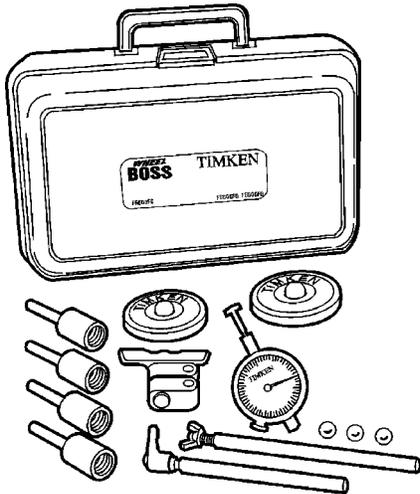


W0001843

3093472
Timken Wheel End Play Gauge

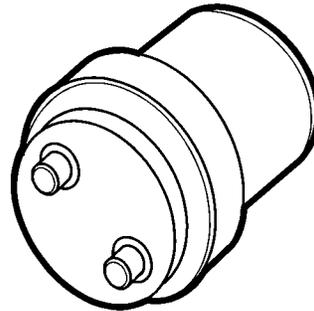


W0001207


9996791
Spring Pin Socket

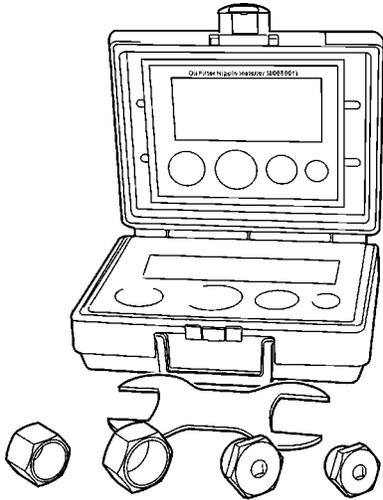


9998691
Oil Filter Nipple Installer Kit

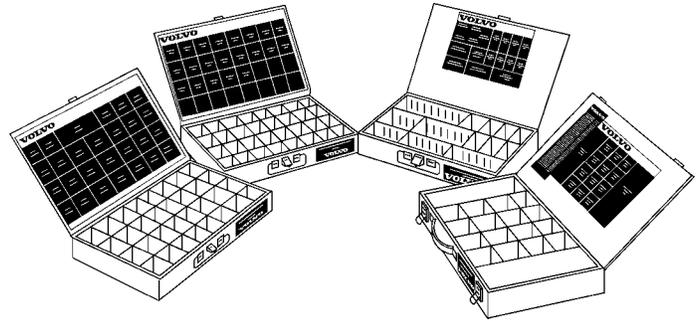

3947553, 3949521, 3946522, 3949523
Terminal and Shim Kits

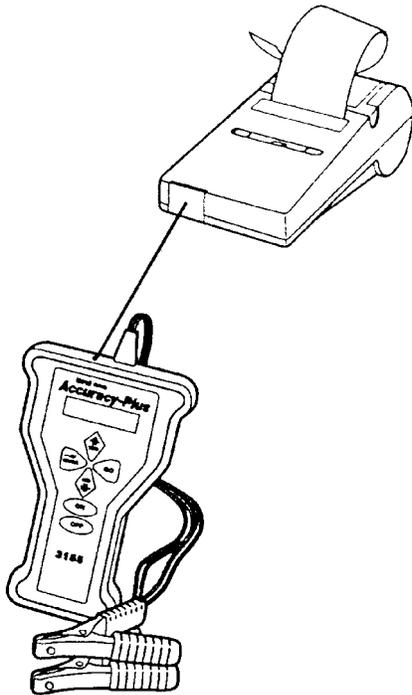


J-44701
Battery Tester Kit

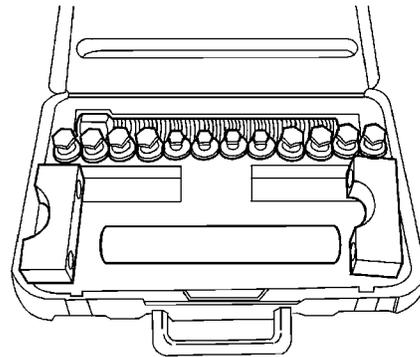


J-44778, J-44779
Driveshaft U-Joint and Yoke Kits

VCADS Pro Tools


The following hardware is used to operate VCADS Pro. The tools can be ordered from Volvo Trucks North America; please refer to the specific tool number when ordering.

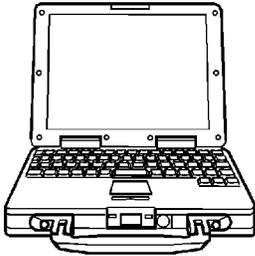


1

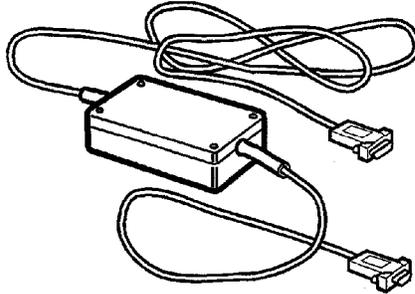

2

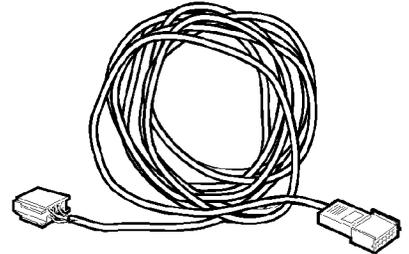


3

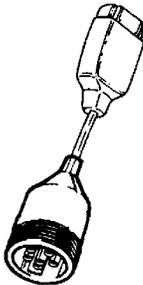


4



5

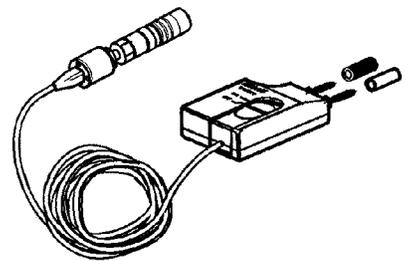

6

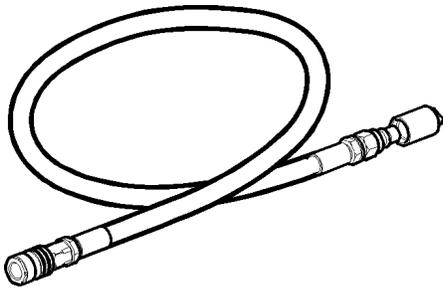

7


C0000285

- | | | | |
|---|--|---|--|
| 1 | PC tool-package | 5 | J-43939, 9 pin Diagnostic adapter (for vehicles built from January 1999) |
| 2 | 9998555, Communication interface unit | 6 | 9998496, Pressure gauge |
| 3 | 9812331, Extension cable | 7 | 9998495, Air Pressure Hose |
| 4 | J-43999, 6 pin Diagnostic adapter (for vehicles prior to 1999) | | |

W5001142


Lighting System, Special Tools

The tools listed below are used to complete maintenance on the Lighting System for Volvo Trucks. They may be obtained from Volvo, or where indicated, from Kent Moore at (800) 328-6657.

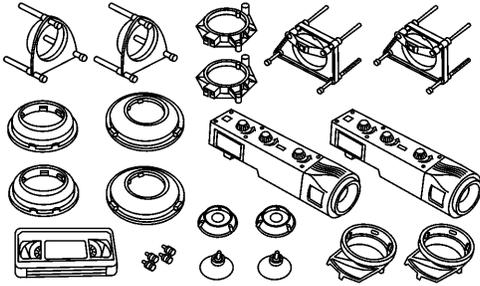


J-25300-D

Headlight Aiming Kit (Kent Moore)

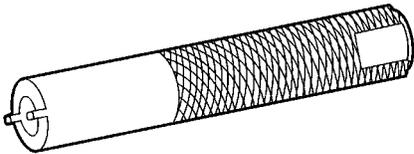


J-42395

Rheostat Removal Tool (Kent Moore)

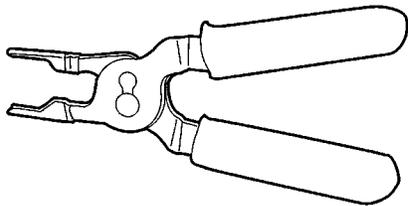


J-43244

Relay Puller Tool (Kent Moore)

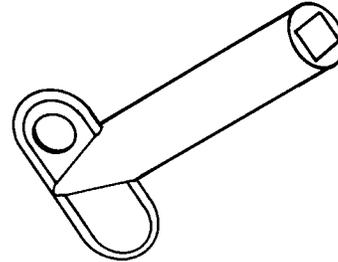

1089953

Lamp Removal Tool (Volvo)

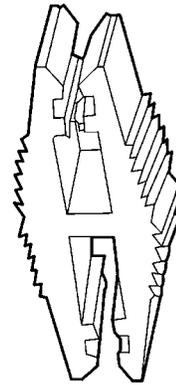

20378326

Fuse Puller Tool (Volvo)

Preventive Maintenance Inspection Bay

Location

Preventive maintenance is logically carried out at the same time as lubrication of the vehicle. It is then natural to use a bay with a grease pit to be assigned and equipped for preventive maintenance. If a pit is not available, a regular workshop bay can be used, with jacks added to the necessary equipment.

The bay needs to be well lit so inspection can be done without having to use a flashlight (unless inspecting in the frame).

Equipment

Inspection bay equipment should be specifically assigned to that bay and not be shared with the rest of the shop. The floor equipment should have floor space for storage in between using them and tools should be hung on boards or stored in a cabinet for easy overview and access.

Install mirrors in four corners of the bay so one person can do a lighting function check without having to leave the cab or rely on a spotter. Mirrors do not need to be larger than truck door mirrors. Any type of equipment that allows inspection by one person instead of having to use a helper, makes inspection easier and faster.

Design and Function

Valve Adjustment Interval

Check the engine valve clearance after the first six months of operation. Check every 12 months thereafter. Adjust if necessary.

For information on valve clearance check and adjustment refer to Service Information, Group 2.

Clutch

General

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Hydraulic fluid in the clutch system collects moisture from the air and will eventually hold enough moisture to affect the metal surfaces in the system unless removed. Replace the fluid at the recommended intervals or more frequently.

The clutch pedal play (1) is given by the clearance between the plunger and the piston (1a) in the master cylinder. Thus the pedal will always have a play, regardless of the clutch adjustment. The correct play is adjusted with the upper adjusting screw (1b) in the pedal carrier.

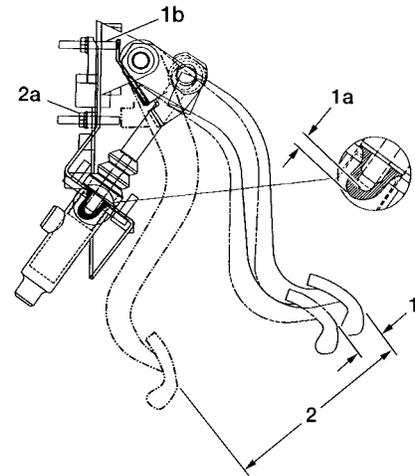


Fig. 1: Clutch


W4000756

Volvo Clutch Slave Cylinder

Slave cylinder stroke (**A**) is 29 ± 1 mm (1.14 ± 0.04 in.). The clutch pedal throw (**2** — see previous illustration) gives the stroke. The lower adjusting screw (**2a**) limits the pedal throw and thereby the clutch slave cylinder stroke.

Distance **B** should never be exceeded. The distance is adjusted by removing the fork from the lever and repositioning lever on the cross shaft.

Distance **C** is set when the clutch is new. During wear of clutch, the distance will decrease. Readjustment should not be needed before it is time to reface the clutch disc.

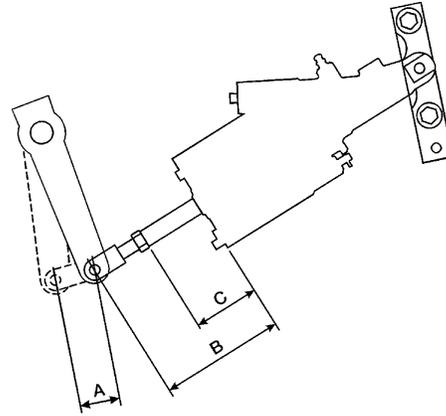


W4000731

Fig. 2: Volvo Clutch Slave Cylinder

Other Clutch Slave Cylinder

A slave cylinder for any non-Volvo clutch has a wear indicator. When the indicator is out of the operating range, it is time to adjust the clutch.

To get the slave cylinder throw into the accepted range, adjust the clutch plate until the indicator is in the operating range again.

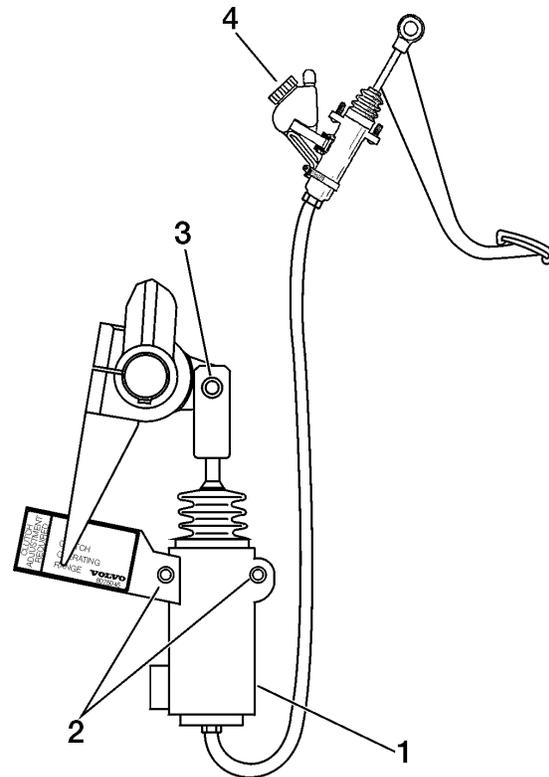

W4002441

- 1 Slave Cylinder
- 2 Mounting Bolts
- 3 Clutch Clevis Pin
- 4 Clutch Master Cylinder and Reservoir (Found on the Bulkhead in the Engine Coupling)

Power Take-off

Volvo PTO

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Volvo PTO's mount directly to the transmission and do not need separate oil fill and check. Make sure there is extra oil filled in the transmission for the PTO volume.



CAUTION

Transmission oil heat exchanger should be installed when using PTO continuously over 15 minutes at a time or with a continuous power output over 55 kW (75 hp). Without heat exchanger, the oil can overheat and transmission damage may follow.

If the application has a remotely installed pump or blower with a driveshaft connection, the driveshaft U-joints need to be greased at every maintenance interval or more often, depending on usage. Use a lithium-based grease with EP additives and of the consistency of NLGI No. 2.

Driveshaft




DANGER

Failure to correctly grease the driveshaft U-joints or slip-joints can lead to component failure which can result in separation of the driveshaft from the vehicle. A separated driveshaft can result in major component damage and loss of vehicle control, and can cause serious personal injury or death.


For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Use a lithium-based grease with EP additives with a consistency of NLGI No. 2. Do not use conventional chassis grease.

The driveshaft U-joints must be lubricated correctly for the bearings to receive grease. The most common case of U-joint failure is incorrect greasing. Always make sure that grease is coming out of all four seals. If one seal fails to purge old grease, move the driveshaft from side to side while applying gun pressure. This allows for greater clearance on the thrust end of the bearing that is not purging. New grease flushes abrasive contaminants from each bearing and assures that the bearing is filled properly.

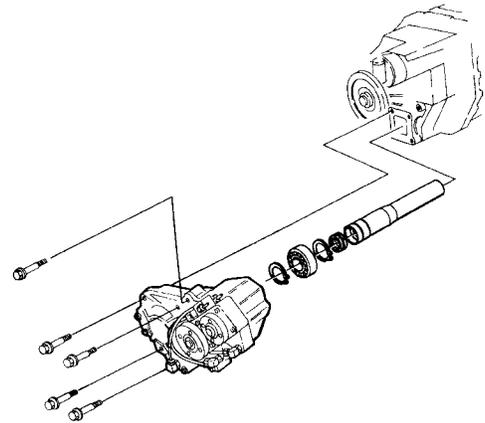

W4000758

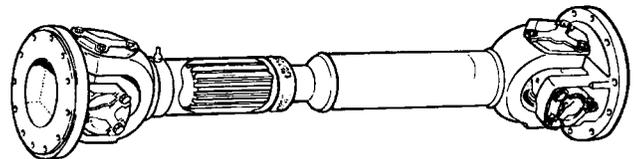

W4000753

Brakes


Brake Cams and Slack Adjusters

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

For further information concerning brake cams see service information in Group 5, "Q Plus LX500 and MX500 Cam Brakes Literature," publication number 514-003, and appropriate vendor literature.

Lubricate the brake cam bushings using a lithium-based grease with EP additives and consistency NLGI No. 2. Fill grease until old grease has been pushed out past the seal and new grease can be seen flowing.

Lubricate the slack adjusters using a lithium-based grease with EP additives and consistency NLGI No. 2. Fill grease until old grease has been pushed out past the splined shaft area, and adjustment pawl and new grease can be seen flowing.

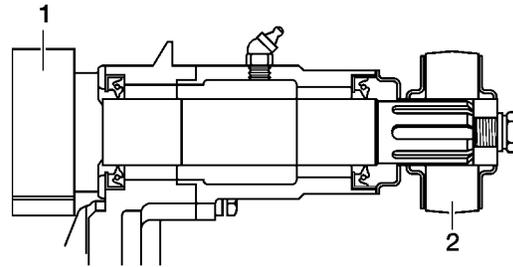


W5000615

Air Dryers

Air dryers have internal maintenance systems that clean out the accumulated moisture frequently and can therefore work with long maintenance intervals. Eventually the drying medium will be filled up and the cartridge will need to be changed. Change cartridge when there is more water being drained in the daily emptying of the tank than usual. This is a progressive development and the time interval will be different from application to application.

Dryer manufacturers recommend changing cartridge every 2 to 3 years but intervals need to be adjusted for application. The only dryer with regular maintenance is the Midland, where the coalescent filter needs changing every year.

Note: If a vehicle is operated in a severe weather environment, it is recommended to change the air dryer cartridge prior to the severe weather season.

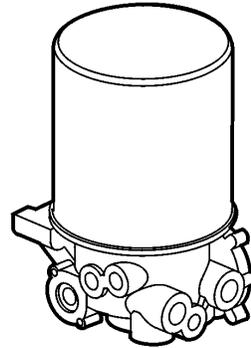


W5001194

Steering System

Steering Linkage and Knuckles

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

For axle forward models, grease the steering shaft U-joints every 4 months. A more frequent maintenance interval may be required if the vehicle is operated under severe driving conditions.

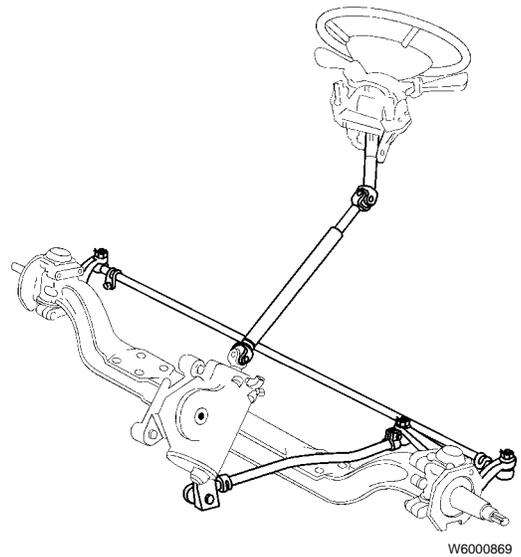


Steering System

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Use Automatic Transmission Fluid (ATF) Dexron® II or Dexron® III for the steering system.

A darkened fluid indicates a steering system that is running hotter than normal and the fluid is overheated. Troubleshoot the reason for overheating and change fluid.

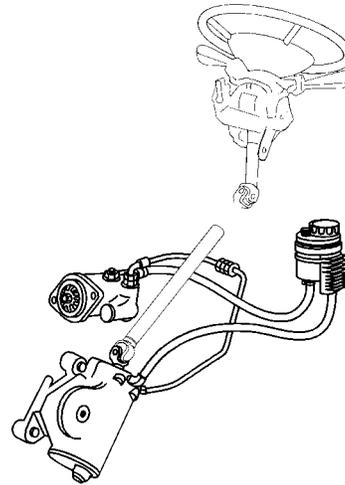

W6000868

Hubs

Oil Lubricated Hubs

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Hubs are generally oil lubricated. There are no set oil change intervals. Change oil when the hub is removed for repairs or other routine maintenance.

There are conditions that require hub lubrication maintenance, which if not performed can result in shortened bearing life and premature hub replacement.

- Water ingress.
- Oil contamination (example: contaminating synthetic oil with petroleum based oil).
- Hub(s) are run at temperatures above 65 °C (150 °F).
- Hub(s) are run with low oil levels.
- End play checks are out of specification ranges and hubs have been run too tight or too loose. (Acceptable end play is .001 to .005").

Note: With above as the exceptions, preset hubs, premium bearings and seals are warranted for three years or 563,270 km (350,000 miles) by the supplier.



W7000438


Chassis

Springs and Suspension

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Lubricate spring pins using a lithium-based grease with EP additives and the consistency of NLG1 No.2. Fill grease until old grease has been pushed out past the seal on both sides and new grease can be seen flowing. If grease is not flowing through, use a prybar to lever down the spring ends to open up for the grease to flow. To perform this procedure the axle must be free hanging. Refer to the Service Information in Group 7.

Wear tolerance for the spring pin and bushing is 5 mm (3/16 in.).

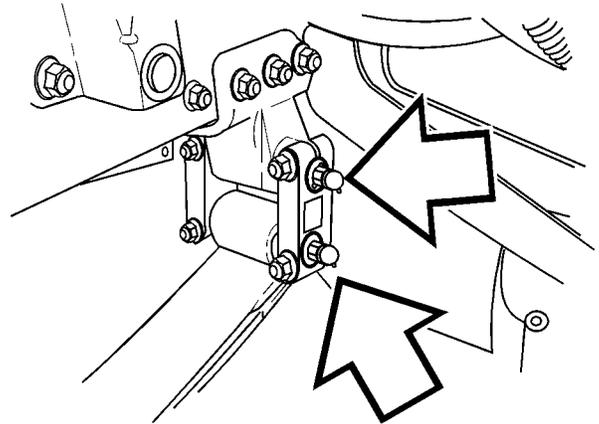

W7000449


T-Ride Equalizer Beam

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

In regular over-the-road operations the T-Ride should follow the normal lubrication schedule.

It is extremely important that the equalizer beam is well lubricated in any off-road or on/off-road operation. If there are other severe duty constraints, for example driving in water, lubricate more frequently, up to once per day, if necessary.

For further information on the T-Ride Equalizer Beam, refer to 721-600, "Rear Suspension, T-Ride."

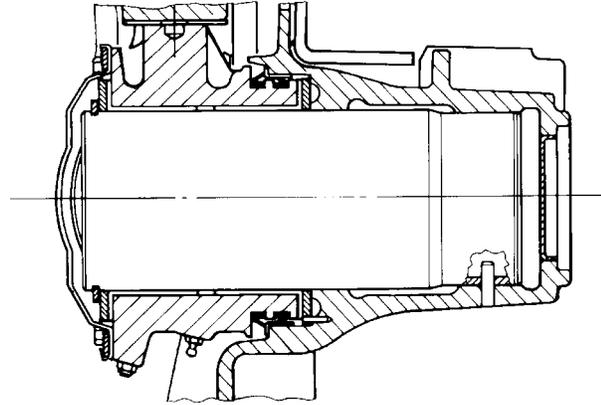

W6000838

Cab

Doors


Door lock mechanism should be **greased once per year using white lithium grease**. Coat the door stop arm with grease every year.



W8000949

Hood

Hood lock lever (front latch) is coated with teflon and should not need any conventional lubrication. If the mechanism is working hard or binds, try cleaning first. Clean and lubricate the scissor latch at the base cone receptacle with white grease.

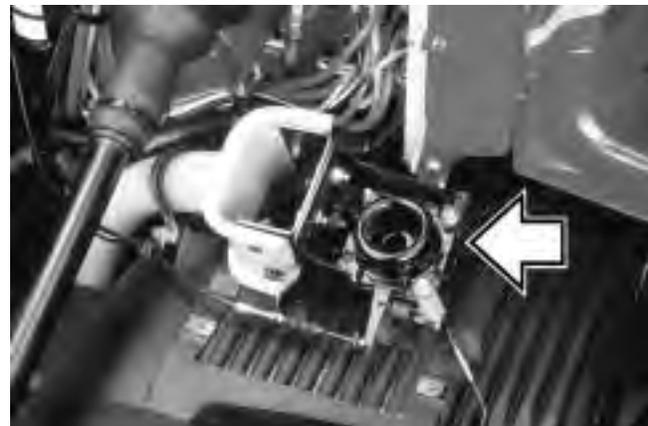

W8000888

Preventive Maintenance

Annual Service Including Lubrication and Oil Change

Date:	Model:	Reg. No.:
Time:	Vehicle Identification Number:	Engine:
	Dealer Code:	Transmission
	Name:	Rear Axle:

X = Corrected without comment ✓ Correction not needed

N = Not relevant or applicable

	Lubrication, Oil and Fluid Level Check	
1	Chassis Lubrication	
2	Cab Lubrication	
3	Change Engine Oil and Filter	
4	Check Oil Level in Manual Transmission	
5	Check Oil Level in Automatic Transmission	
6	Check Oil Level in PTO, Power Take-Off	
7	Check Oil Level in Retarder	
8	Check Oil Level in Transfer Case	
9	Check Oil Level in Front Drive Axle	
10	Check Oil Level in Rear Drive Axle	
11	Check Oil Level in Hydraulic Bogie Lift	
12	Check Oil Level in Power Steering	
13	Check Oil Level in Hubs for Oil Lubricated Wheel Bearings	
14	Check Oil Level in Cab Tilt Pump	
15	Check Fluid Level in Clutch Fluid Reservoir	
16	Check Coolant Freeze Protection and Coolant Level	
17	Check Fluid Levels in Windshield Wiper and Headlamp Wiper Reservoirs	
18	Check Air Dryer	

	Checks in Cab	
21	Check Fault Codes in the Engine Electronic Control Unit	
22	Check Fault Codes in the ABS, Anti-Lock Brakes	
23	Check Fault Codes in Transmission	
24	Function Check of Parking Heater	
25	Check Engine Control in Cab	
26	Check Retarder Control	
27	Start Engine and Check of Starter Element and Preheater	
28	Check Pressure Regulator's Disconnection and Connection Pressure	
29	Check Air Compressor's Function and Condition	
30	Check Sealing on Main Brake Circuit (Service)	
31	Check Parking Brake and Blocking Valve	
32	Check Gearshift and Clutch Pedal	
33	Check Bogie Lift	
34	Check Brake Pedal and Foot Brake Valve	
35	Check Hinges, Doorstops, Locks and Sealing Strips	

	Checks in Cab	
19	Check Warning and Control Lamps	
20	Check Fault Codes in the Vehicle Electronic Control Unit	

	External Checks	
36	Function Check of External Lamps	
37	Check Rear View Mirrors and Reflectors	
38	Function Check of Wipers and Washers	
39	Check Headlamps	
40	Check Air Filter for Ventilation System	
41	Check Refrigerant Reservoir, Condenser, Pipes and Hoses	
42	Check Air Intake and Air Deflector	
43	Check Hood Attachment and Locking Devices	
44	Check Batteries - Dirt, Leakage, Attachment, Specific Gravity of Battery Acid, Fluid Level, Connections and Battery Box	
45	Check Fuel Tank, Hoses, Pipes, Venting and Mounting	
46	Check Filter for Fuel Tank Ventilation	
47	Draining of Fuel Tank (Dirt, Water)	
48	Check Fuel Water Separator for the Fuel System, Draining of Condensation	
49	Check Tire Wear	

	Engine Compartment	
50	Check Alternator Mounting	
51	Check Electrical Connections and Cables for Alternator, Starter Motor and Preheater	
52	Check Drive Belts	
53	Check Air Compressor	
54	Check Engine Mounting	
55	Check Radiator Mounting	
56	Check Radiator Fan, Bearing Tolerance, Bolt Unions, Fan Cover and Fan Ring with Rubber Seal	
57	Pressure Testing of Cooling System	
58	Check Radiator, Hoses, Pipes and Air Flow	
59	Check Intercooler, Hoses, Pipes and Air Flow	
60	Check Tightness of Engine and PTO	
61	Check Fuel Lines on Engine	
62	Check Exhaust Leakage	
63	Check A/C Compressor Mounting	
64	Check A/C Pipes and Hoses	
65	Check Air Pipe between Air Intake and Turbo	
66	Check Turbocharger and Regulator	
67	Check Pump Coupling for Injection Pump (Electronic Engines Not Applicable)	

	Engine Compartment	
68	Check Tightness on Servo Pump, Oil Lines and Steering Gear	
69	Check Sound Baffles for Engine	

	Front Suspension, Steering System Check	
70	Check Steering Linkage	
71	Check Front Shock Absorbers	
72	Check Steering Knuckle Bearing	
73	Check Front Wheel Bearings	
74	Check Front Wheels	

	Checks Beneath the Vehicle	
75	Check Tightness, Bearing Clearance and Ventilation on the Front Driving Axle	
76	Check Clearance in Clutch's Mechanical Function	
77	Check Clutch's Hydraulic and Pneumatic Control System	
78	Check Clutch Wear	
79	Check Transmission's Pneumatic and Mechanical Control System	
80	Check Seals for Speedometer Sensor and Joint Coupling	
81	Check Tightness on Transmission, Transfer Case and PTO Including check of lines	
82	Check Tightness on Cooler for Transmission	
83	Check Ventilation for Transmission, Transfer Case and PTO	
84	Check Tightness on Retarder and check lines	
85	Check Sound Baffle for Gearbox	
86	Check Transfer Case's Mounting	
87	Check Drive Belt for Power Steering	
88	Check Drive Shaft Universal Joints, Sliding Joints and Support Bearings	
89	Check Tightness on Rear Drive Axles and Hub Reduction Gear	
90	Check Bearing Clearance for Pinion and Input Shaft to Rear Drive Axles	
91	Check Rear Drive Axle Ventilation	
92	Check Exhaust Pipe and Silencer	
93	Check Rear Springs and U Bolts	
94	Check Anti-Roll Bar	
95	Check Rear Shock Absorbers	
96	Check Mounting for Front and Rear Axle	

	Checks Beneath the Vehicle	
97	Check Bogie Lift or Lift Axle	
98	Check Rear Suspension Level Sensors and Leveling Valves	
99	Check Height Regulation for Air Suspension	
100	Check Chassis Frame and Crossmembers	
101	Check Central Lubrication System	
102	Check Compressed Air Lines and Hoses	
103	Check Rear Wheel Bearings	
104	Check Rear Wheels	
105	Check Differential Locks	
106	Check Brake Linings	
107	Check Brake Cylinders, Levers, and Forks	

	Checks Beneath the Vehicle	
108	Check Brake Disc and Brake Calipers	
109	Check Stroke Length on Slack Adjusters, Brake Levers, and Brake Drums	
110	Check Load Sensing Valve	
111	Check Brake Chambers and Mounting Brackets	

	Test Driving	
112	Check After Start	
113	Check During Test Driving	
114	Check After Test Driving	
115	Finish	

Note: The values seen from cab and backwards are noted in the squares below										
Brake Linings - measured thickness in mm (in.)	Right									
	Left									
Brake Levers, Slack Adjusters, and Brake Drums - measured stroke in mm (in.)	Right									
	Left									
Notes on wear pattern on tires	Right									
	Left									

Comments

Reception



W1000068

When the customer drops off the vehicle, the service receptionist starts the paperwork and prepares the forms needed for the preventive maintenance. Ask the customer about problems that have been noticed while driving the vehicle. Ask questions that will make the job easier for the technician to find problem sources:

- Irregular tire wear?
- Unusual noise?
- Unusual vibration?
- Leaks?
- Other operation problems?

As the vehicle is approached, check for signs of leakage, general appearance, body damage, etc. Walk around the vehicle. Note on the PM inspection form if any leaks or problems are found.


Lubrication

Make sure that grease fittings are cleaned off before filling grease. Dirt on the fitting that is not cleaned off is pushed into the part with the new grease. Always fill grease to the point where old grease and contaminants are forced out from the part and only new grease comes out. If grease can not be filled so old grease is forced out or if new grease exits without pushing old grease out, note this on the form for repair. If a fitting does not

accept lubrication due to damage or internal stoppage, replace with a new fitting.

Do not heat part for better grease application where rubber or plastic parts are involved.

Remove excess grease from fittings, spring shackles and other surfaces.

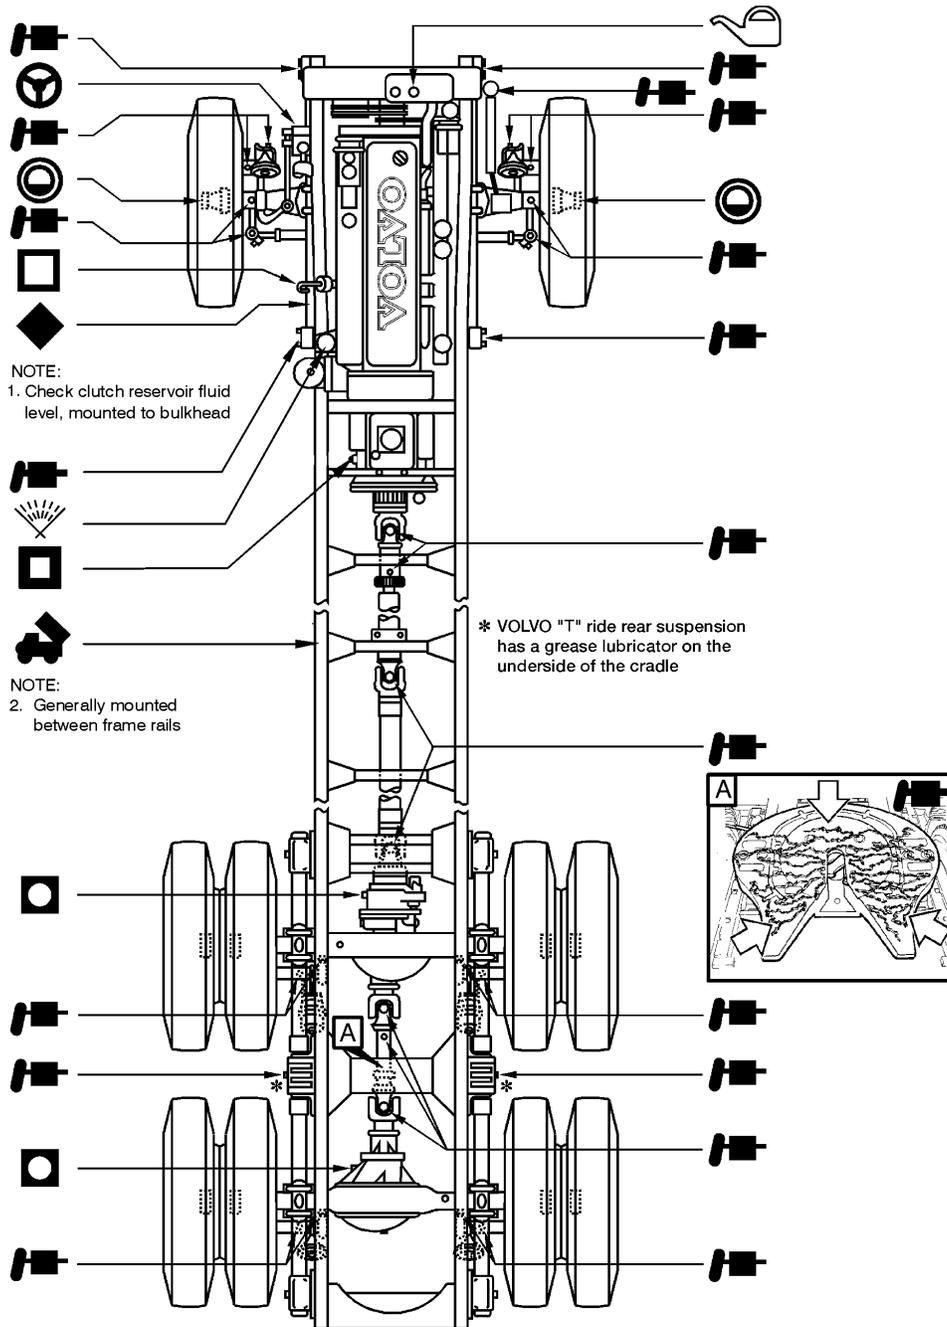


NOTE:
1. Check clutch reservoir fluid level, mounted to bulkhead

NOTE:
2. Generally mounted between frame rails

* VOLVO "T" ride rear suspension has a grease lubricator on the underside of the cradle

- GREASE
- ENGINE OIL LEVEL
- ⊗ STEERING BOX/RESERVOIR FLUID LEVEL
- ▣ TRANSMISSION OIL LEVEL
- ⊙ FRONT WHEEL OIL LEVEL
- ◻ DIFFERENTIAL OIL LEVEL
- ◆ CLUTCH RESERVOIR FLUID LEVEL
- ☞ COOLANT LEVEL
- ☼ DUMP BODY OIL RESERVOIR LEVEL
- ☼ WINDSHIELD WASHER FLUID LEVEL

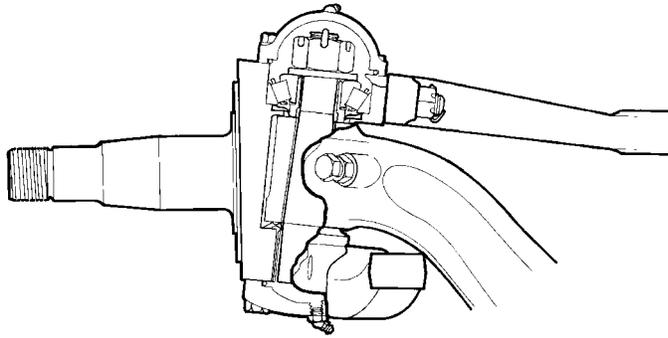

W6000848


1**Chassis Lubrication**

Note: Chassis lubrication should be performed every four months including the annual lubrication.

Front Axle Steering Knuckles

Volvo: Two grease fittings on each side—one on the top knuckle cover (fill with grease until the old grease is forced out past the top seal), one on the bottom cover (fill with grease until the old grease is forced out past the bottom seal).

Note: Lubrication of the Volvo axle should be done with the wheels on the ground!

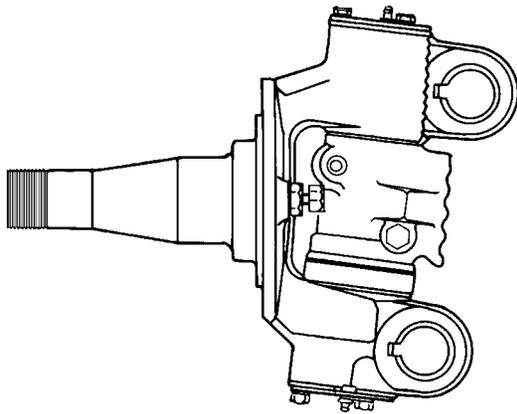


W6000850

Front Axle Steering Knuckles

Meritor and Eaton: Raise the axle so the wheels are off the ground before attempting to grease the steering knuckles.

Two grease fittings on each side—one on the top knuckle cover, fill with grease until the old grease is forced out past the top seal; one on the bottom cover, fill with grease until the old grease is forced out past the bottom seal.

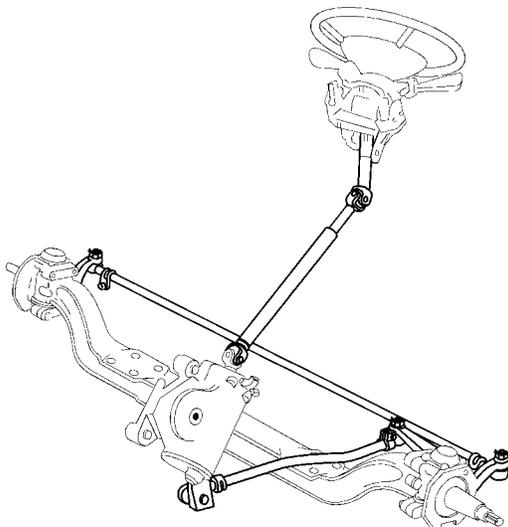


W6000869

Steering Linkage

Steering shaft and draglink are lubed for life. Tie-rod for Volvo front axles are lubed for life.

Meritor and Eaton front axle tie-rods need to be lubricated. Fill tie-rod end with grease until old grease is forced out past the rubber boot and only uncontaminated grease is visible.

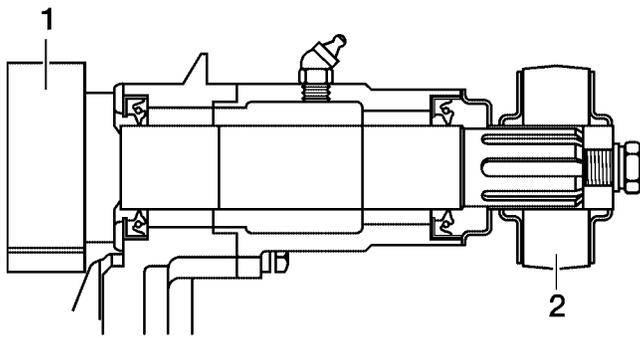


W5000615

Brake Cams

For further information concerning brake cams see service information in Group 5, "Q Plus LX500 and MX500 Cam Brakes Literature," publication number 514-003, and appropriate vendor literature.

There is one grease fitting on each cam for front and rear wheel brakes. Fill with grease until old grease is forced out past the end seal and only uncontaminated grease is visible.


Note: Parking brake should be released so grease can penetrate properly throughout the brake cam.

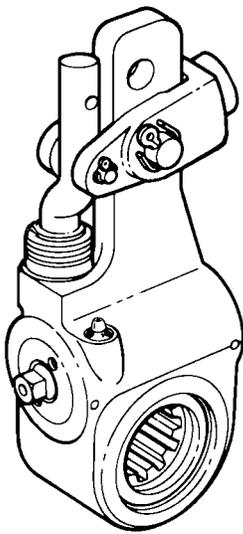

W5000609

Slack Adjusters

There is one grease fitting per slack adjuster. Fill with grease until old grease is forced out past the splined center and adjustment pawl area and only uncontaminated grease is visible.

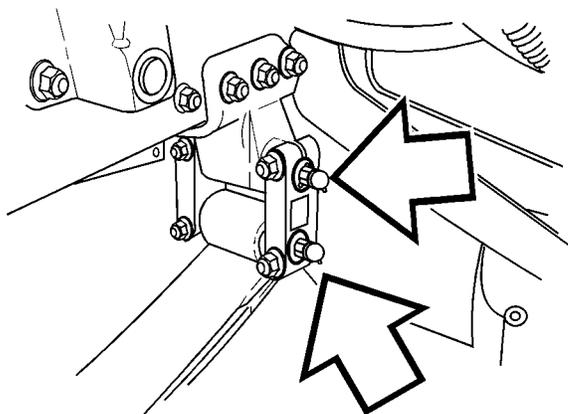

W7000449

Front Spring Pins

There are three grease fittings per spring. Fill each fitting with grease until old grease is forced out past both ends of the spring pin and only uncontaminated grease is visible. Use a pry bar to move spring end up and down until grease comes out of both ends of pin.




W4000771

Clutch Bearing and Cross Shaft

Volvo clutch is sealed for life and does not need lubrication.

Vendor clutch cross shafts and release bearings need to be lubricated. The cross shaft bearings are remotely lubricated by a hose. The grease fitting is located on the right side of the bell housing.

Grease the release bearing — but do not overgrease.

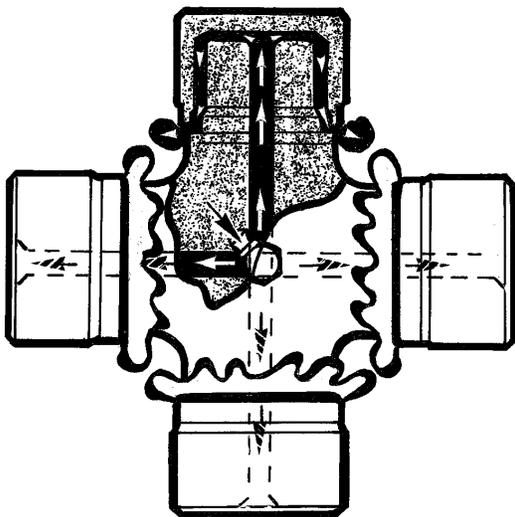

T4006100

Driveshafts


When greasing a driveshaft U-joint, it is very important that grease comes out of each of the four bearings. If grease does not come out of a seal, press the shaft toward the seal and apply grease at full pressure.

If a U-joint can not be fully greased, note it on the form for further inspection.

CAUTION

An ungreased U-joint bearing will fail after a short time.

If vehicle is equipped with a PTO that has a driveshaft, lubricate its U-joints.

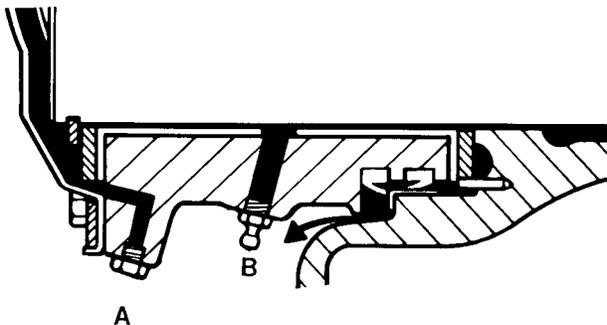

Volvo T-Ride

- 1 Remove the pressure relief valve located at A and install a grease fitting.
- 2 Remove the grease fitting at B
- 3 Fill with grease through A fitting until grease oozes out of B.
- 4 Install the grease fitting at B and fill it with grease until it oozes out around the entire seal (See arrow).
- 5 Remove the grease fitting at A and reinstall the pressure relief valve.

The bearing must be completely filled with grease. This becomes very important if vehicle operates in wet areas. If operating in places where driving through water, lubricate daily to force water out of bearing area.




W9000074

2 Cab Lubrication

Fifth Wheel

Note: For further information refer to "Cab" page 28.

Lubricate the plate pivot points and slide mechanism. Apply a heavy coat of grease on top of the plate.

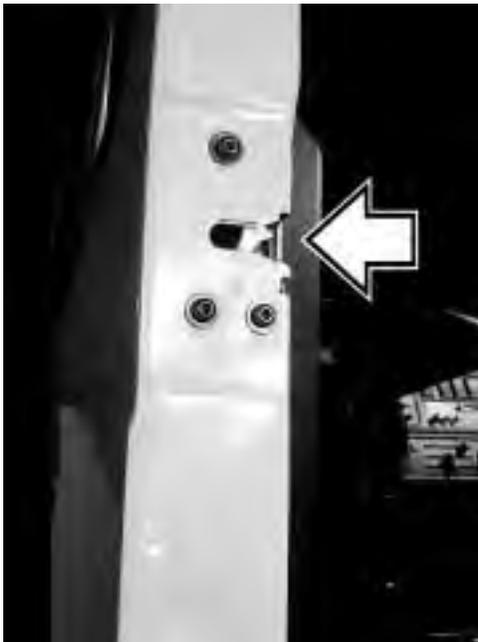

W8000949

Lubricate Door Locks

Hood lock lever (front latch) is coated with teflon and should not need any conventional lubrication. If the mechanism is working hard or binds, try cleaning first. **Clean and lubricate the scissor latch at the base cone receptacle with white lithium grease once per year.**




W6000843

Steering Gear

TRW and Sheppard steering gears may have severe weather seals at input shaft or sector shaft that require greasing.

CAUTION

Lubricate with a hand grease gun only. High-pressure grease application may unseat or damage seal.

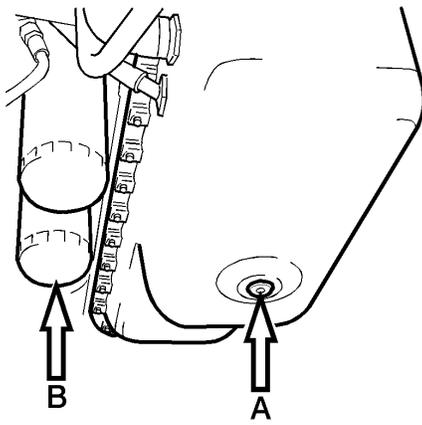

T1006392

- A Oil Plug
- B Oil Filter



T2012858

- 1 Reducing valve
- 2 Overflow valve for oil filters (By-pass)
- 3 Oil valve for pistons cooling
- 4 Overflow valve for oil filters (By-pass)
- 5 Thermostatic valve
- 6 Safety valve

3	Change Engine and Oil Filter
----------	-------------------------------------

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Change engine oil and filters. If required by customer, take a sample of the oil for analysis.

Note: Make sure the oil type is correct and has the correct viscosity. The two are not the same and are equally important in giving the right protection for the engine.

Oil Change


DANGER
<p>Before working on a vehicle, set the parking brakes, place the transmission in neutral, and block the wheels. Failure to do so can result in unexpected vehicle movement and can cause serious personal injury or death.</p>

WARNING
<p>Take precautions when draining the oil. Wear gloves and let the engine cool down before draining. Serious burns can result from contact with a hot engine or hot engine oil.</p>

WARNING
<p>Use rubber gloves when handling used oil. Wash skin thoroughly if it comes in contact with used oil. Prolonged contact with used engine oil may be harmful.</p>


It is important to drain as much oil as possible. Try to change oil immediately after driving, when the oil is warm. Always replace the oil filters when changing oil.

Note: Always dispose of oil according to Federal and local regulations. Used oil disposed of inappropriately can contaminate nature, waterways, community drinking water and kills wildlife.

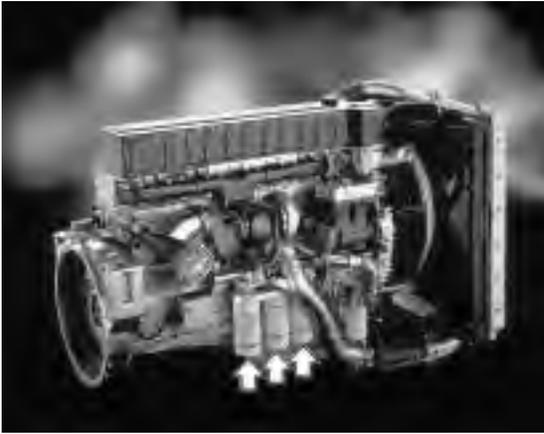

W2003480

D12 Oil Filters

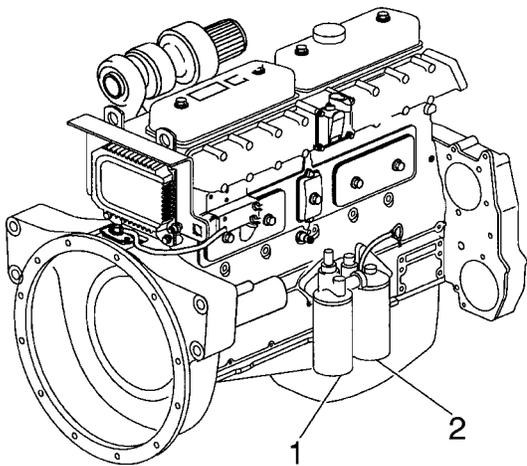

W2003078

D7 Oil Filters

- | | |
|---|------------------|
| 1 | Full-flow Filter |
| 2 | Bypass Filter |

Oil Filters

CAUTION

Use only the engine manufacturer's oil filter for replacement. Use of an oil filter not built to specification could result in severe damage to bearings, crankshaft, etc. as a result of unfiltered oil entering the lubrication system.

Note: Always dispose of oil according to Federal and local regulations. Used oil disposed of inappropriately can contaminate nature, waterways, community drinking water and kills wildlife.


Install new filters as follows:

- Coat the filter gasket with oil.
- Install the filter and turn it by hand until the gasket makes contact with the sealing surface.
- Then turn the filter an additional 3/4 turn.

Oil Level Check

Note: Do not let the oil level drop below the lower marking on the dipstick. Do not overfill so the level is above the upper marking on the dipstick.

Wait five minutes after shutting off the engine before checking the oil level. This gives the oil time to drain back to the oil pan.

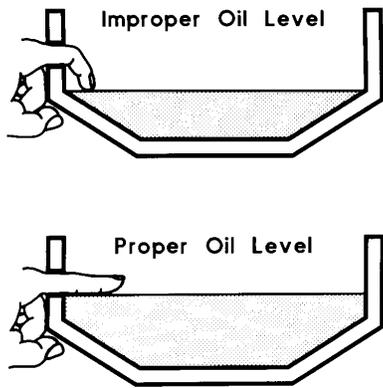

W4000768

4

Check Oil Level In Manual Transmission

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

Note: Synthetic oil is not recommended for the Volvo transmissions.

Volvo:

Perform the first oil and filter change at 10,000 km (6,000 miles). See specifications for regular oil and filter change intervals. Ensure that the filter cover is secure after changing the filter.

Fuller:


Petroleum based oil: Perform the first oil and filter change at 5,000 to 8,000 km (3,000 to 5,000 miles). See specifications for regular oil and filter change intervals.

Synthetic lubricant: No initial oil change is necessary. See specifications for the regular oil and filter change intervals.

Meritor:

Petroleum based oil: Perform the first oil and filter change at 5,000 to 8,000 km (3,000 to 5,000 miles). See specifications for regular oil and filter change intervals.

Synthetic lubricant: No initial oil change is necessary. See specifications for the regular oil and filter change intervals.

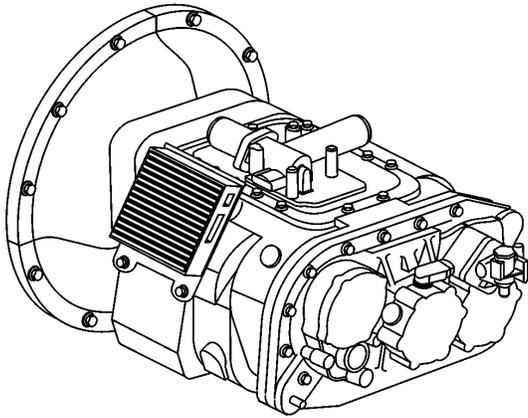

W4002517

5	Check Oil Level in Automatic Transmission
----------	--

Note: For further information refer to “Transmissions” page 10.

Transmission fluid cools, lubricates, and transmits hydraulic power. Always maintain proper fluid level. If fluid level is too low, the torque converter and clutches do not receive an adequate supply of fluid and the transmission overheats. If the level is too high, the fluid aerates causing the transmission to shift erratically and overheat. Fluid may be expelled through the breather or dipstick tube when the fluid level is too high.

Transmission fluid check:

- 1 Clean all dirt from around the end of the fluid fill tube before removing the dipstick. Do not allow dirt or foreign matter to enter the transmission. Dirt or foreign matter in the hydraulic system may cause undue wear of transmission parts, make valves stick, and clog passages. Check the fluid level using the following procedure and record the level in your maintenance log.
- 2 Always check the fluid level reading with the engine running at least twice. Consistency is important to maintaining accuracy of the reading. If inconsistent readings persist, check the transmission breather to be sure it is clean and unclogged.

Cold Check:


Note: The fluid level rises as its temperature rises. Do not fill above the Cold Run band if the transmission fluid is below normal operating temperatures.

- 1 The purpose of the cold check is to determine if the transmission has enough fluid to be operated safely until a hot check can be made.
- 2 Run the engine for at least one minute. Apply service brake. Shift to Drive (D) and operate the engine for 30 seconds at 1000 to 1500 rpm; then shift to Reverse (R) to clear the hydraulic system of air. Then shift to Neutral (N) and allow the engine to idle (500 to 800 rpm).
- 3 With the engine running, remove the dipstick from the tube and wipe clean.
- 4 Insert the dipstick into the tube and remove. Check the fluid level reading. Repeat the check procedure to verify reading.
- 5 If the fluid level is within the "COLD RUN" band, the transmission may be operated until the fluid is hot enough to perform a "HOT RUN" check. If the fluid level is not within the "COLD RUN" band, add or drain as necessary to bring it to the middle of the "COLD RUN" band.
- 6 Perform a hot check at the first opportunity after the normal operating temperature of 71 - 93 °C (160 - 200 °F) is reached.


Hot Check:

Note: The fluid must be hot to insure an accurate check. The fluid level rises as the temperature increases.

- 1 Operate the transmission in Drive (D) range until normal operating temperature is reached:
 - sump temperature 71 - 93 °C (160 - 200 °F)
 - converter-out temperature 82 - 104 °C (180 - 220 °F)
- 2 Park the vehicle on a level surface and shift to Neutral (N). Apply the parking brake and chock the wheels. Allow the engine to idle (500 - 800 rpm).
- 3 With the engine running, remove the dipstick from the tube and wipe clean. Insert the dipstick into the tube and remove.
- 4 Check the fluid level reading. Repeat the check procedure to verify the reading.
- 5 If the fluid level is not within the "HOT RUN" band, add or drain as necessary to bring the fluid level to within the "HOT RUN" band.

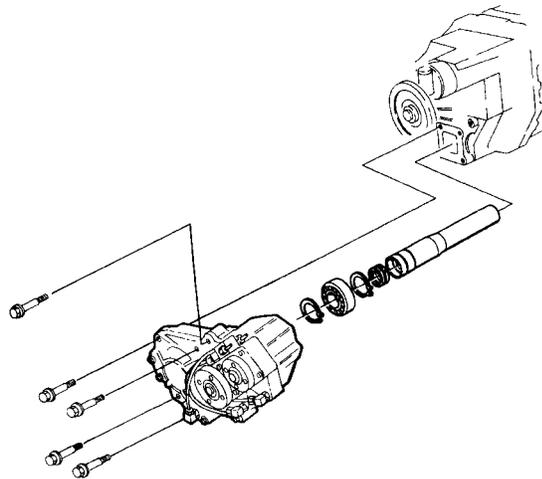

W4000758

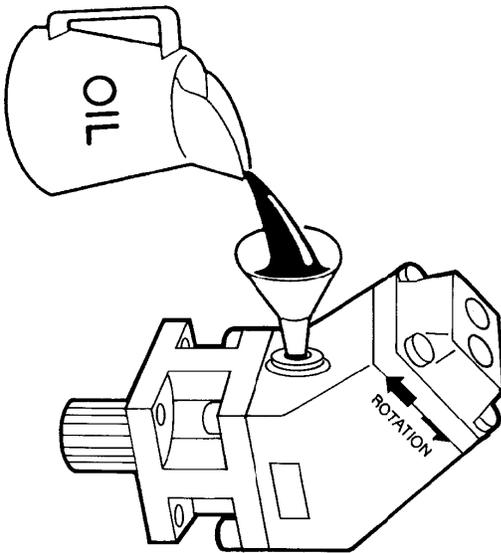

W4002393

6	Check Oil Level in PTO, Power Take-Off
----------	---

Note: For further information refer to “Power Take-off” page 23.

Power Take-Off

Volvo PTO

Volvo PTOs mount directly to the transmission and do not need separate oil fill or checks. Make sure there is extra oil filled in the transmission for the PTO volume.

Add:	
with single PTO	0.5 L (0.5 qt.)
with double PTO	0.8 L (0.8 qt.)

⚠ CAUTION
Transmission oil heat exchanger should be installed when using PTO continuously over 15 minutes at a time or with a continuous power output over 55 C.W.O. (75 hp). Without heat exchanger, the oil can overheat and cause damage to the transmission.

If the application has a pump that is installed separately or a blower with a driveshaft connection, the driveshaft U-joints need to be greased at every maintenance interval or more often, depending on usage. Use a lithium-based grease with EP additives and of the consistency of NLGI No. 2.


Side Engine-Mounted PTO

⚠ CAUTION
During operation, the pump must always be filled with oil. Otherwise, damage to the pump will result.

Engine-mounted PTOs mount directly to the engine and need to be checked before vehicle operation. Make sure the hydraulic system is filled above the low limit mark of the hydraulic reservoir.

7**Check Oil Level in Retarder**

To ensure the correct oil level in the retarder the oil level should be checked when the retarder is warm.

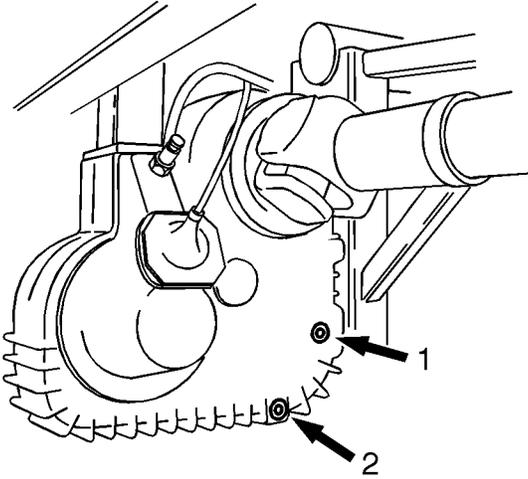


T1006646

1 Level/Fill Plug

2 Drain Plug


8**Check Oil Level in Transfer Case**

Not applicable for VN/VHD vehicles.

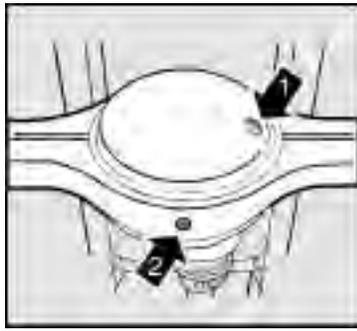


T0008128

- 1 Level/Fill Plug
- 2 Drain Plug

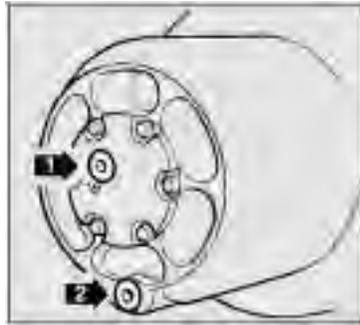


T0008164

- 1 Level/Fill Plug
- 2 Drain Plug

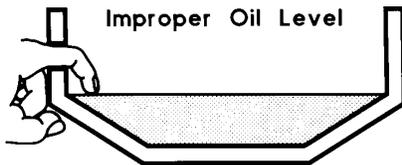

Improper Oil Level

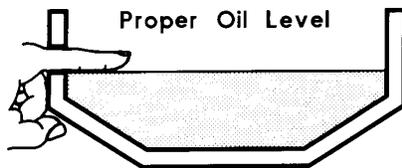

Proper Oil Level

W4000768

9	Check Oil Level in Front Drive Axle
----------	--

Note: For further information refer to “Driveshaft” page 23.

Checking and Draining Oil

WARNING

Take precautions when draining the oil. Wear gloves and let the engine cool down before draining. Serious burns can result from contact with a hot engine or hot engine oil.

Check the oil level through the top plug. The oil should be level with the hole. Add oil if necessary.

Drain oil through the bottom plug. Drain oil immediately after driving the vehicle, so that the oil is hot.

Note: Also check the rear axle ventilation for blockage. Blockage can cause extreme pressure in the axle and create leaks.

Hub Reduction

For further information concerning component specifications see service information in Group 1, “Oil and Filter Change Intervals for Volvo Components,” publication number 175-001, and appropriate vendor literature.

If the axle is equipped with hub reduction, empty each hub separately when changing oil. Turn the wheel until the drain plug is at its lowest position. Remove plug and drain.

Fill oil through the level/fill plug hole. Fill each hub reduction before filling oil in the rear axle

Note: Synthetic oil is not recommended for the Volvo transmissions.

10	Check Oil Level in Rear Drive Axle
-----------	---

Note: For further information refer to "Rear Axle" page 11.

Checking and Draining Oil

 WARNING
Wear protective gloves and glasses when changing oil. Hot oil can cause severe burns.

Check the oil level through the top plug. The oil should be level with the hole. Add oil if necessary.

Drain oil through the bottom plug. Drain oil immediately after driving the vehicle, so that the oil is hot.

Note: Also check the rear axle ventilation for blockage. Blockage can cause extreme pressure in the axle and create leaks.

Hub Reduction


For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

If the axle is equipped with hub reduction, empty each hub separately when changing oil. Turn the wheel until the drain plug is at its lowest position. Remove plug and drain.

Fill oil through the level/fill plug hole. Fill each hub reduction before filling oil in the rear axle


Note: Synthetic oil is not recommended for the Volvo transmissions.

Note: Independent shift units require an lubrication check, independent of the axle lubrication check.

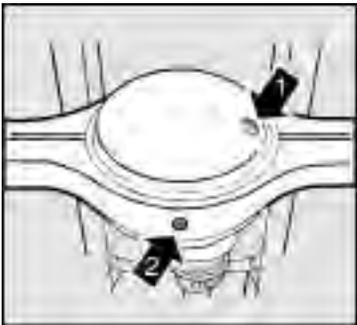


T0008128

- 1 Level/Fill Plug
- 2 Drain Plug

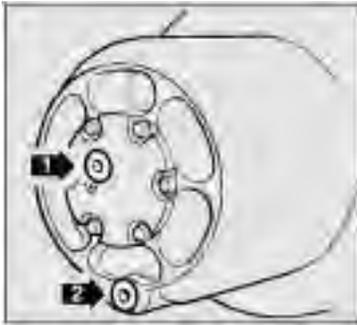


T0008164

- 1 Level/Fill Plug
- 2 Drain Plug

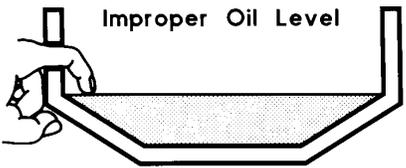


Improper Oil Level

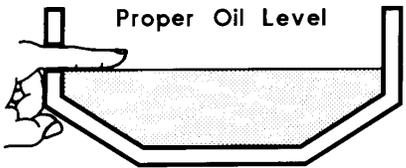

Proper Oil Level

W4000768

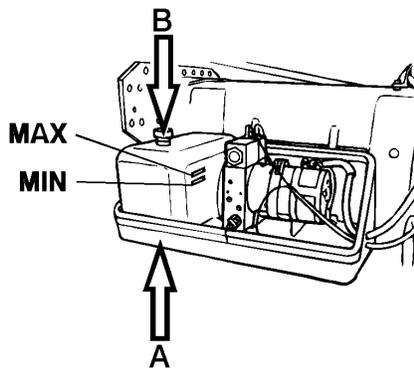

T1006404

- A Drain Plug
B Filler Plug

11 Check Oil Level in Hydraulic Bogie Lift

This option not available on VN/VHD vehicles.



W6001428

12 Check Oil Level in Power Steering

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

The power steering fluid reservoir contains Automatic Transmission Fluid (ATF) Dexron® III.

If the fluid has darkened, then that indicates that the power steering system is running hotter than normal and overheating the fluid. Report the problem to and service the vehicle at a Volvo Truck Dealer.



W7000438

13	Check Oil Level in Hubs for Oil Lubricated Wheel Bearings
-----------	--

Note: For further information refer to “Hubs” page 26.

Front Wheel Hubs

 DANGER
--


Failure to keep wheel bearings properly adjusted can result in accelerated tire wear, poor handling, and in extreme cases, wheel separation from the hub or from the spindle resulting in loss of vehicle control and serious personal injury or death.

The front wheel hubs are lubricated with several types of oil. The suggested types are SAE 30 or 15W40. It is acceptable to use either synthetic or petroleum based oils (Synthetic oils are not recommended for Volvo Axles). Axle oils API GL-5 and SAE 75W-90 are acceptable as well.

Hubs are generally oil lubricated. There are no set oil change intervals. Change oil when the hub is removed for repairs or other routine maintenance.

14	Check Oil Level in Cab Tilt Pump
-----------	---

This option not available on VN/VHD vehicles.

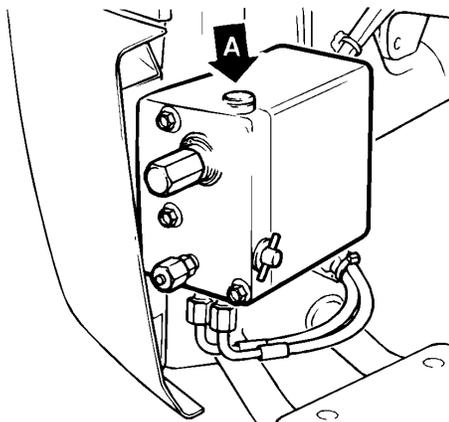

T1006749

A Fill Plug



W4000749

15 Check Oil Level in Clutch Fluid Reservoir

Note: For further information refer to “Clutch” page 21.

Check fluid level in the clutch fluid reservoir. Add oil if necessary and use only DOT 4 (SAE J 1703) fluid.

Replace clutch fluid every year to prevent corrosion problems in the system due to trapped moisture.



W2001081

16 Check Coolant Freeze Protection and Coolant Level

WARNING

Do not remove the cap to the coolant surge tank while the engine and radiator are still hot. Scalding fluid and steam may be blown out under pressure if the cap is removed too soon.

CAUTION

Ensure that the coolant is not a long life product. SCA cannot be added to this type of coolant.

Draw coolant for testing. Adjust coolant as necessary and change the filter if needed.

Supplement coolant additive (SCA) level remain between 0.4 to 0.8 units/liter (1.5 and 3.0 SCA units/gallon).


See each engine manufacturer's recommendation for filter change intervals and additive replenishment.




W2001082

17 Check Fluid Levels in Windshield Wiper and Headlamp Wiper Reservoirs

Check fluid level in the washer fluid container regularly. Add if necessary.

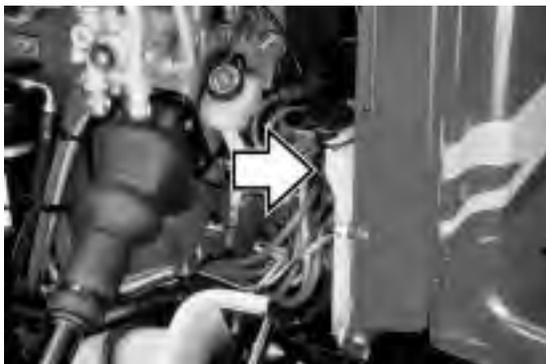

W8000899

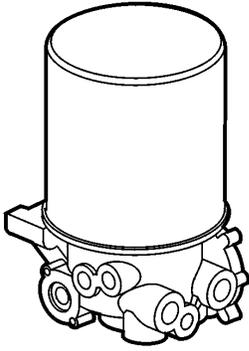

W5001194

18**Check Air Dryer**

Air Dryers


Air Dryers have internal maintenance systems that clean out the accumulated moisture frequently and can therefore work with long maintenance intervals. Eventually the drying medium fills up and needs replacement. Change the cartridge when the medium is filling up more than usual. This service rate varies upon the application.

Dryer manufacturers recommended changing cartridge every two to three years but intervals vary per application. The only dryer with regular maintenance is the Midland, which requires changing of the coalescent filters every year.


Cab



W3000639

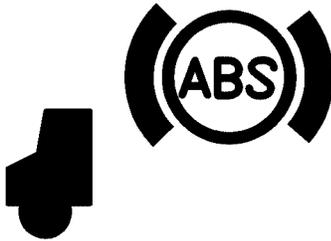

W3000628

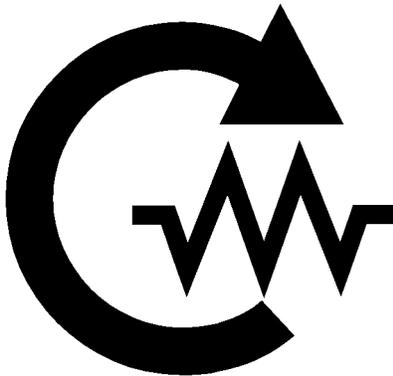

W3000881

19 Check Warning and Control Lamps

Check all indicators on the instrument cluster. Turn the ignition on. Wait until the instrument has gone through the start-up cycle. Press the MODE button until the diagnostic window shows DIAGNOSTICS MENU. Press the DOWN button twice and the SET button once. The diagnostic window reads BULB TEST?. Press SET and the internal check program lights up all indicators. If any bulb is not functioning note it on the checklist.

Press the DOWN and SET buttons once and the check program tests the buzzer functions. Three different durations of the tone are heard.


Press down the SET buttons again and the check program tests the gauges. Most gauges go to half range, full range and then back to rest three times.

Press the DOWN and SET button again for testing the diagnostic display. The display alternates between light and dark. If any defects are noted cite them on the checklist. Return the diagnostic display to the clock by pressing the MODE button five times.

To perform the ABS "chuff-test," turn the ignition off. Press down the foot brake and then turn the ignition back on again. Listen through the side window that the ABS self-check goes through the cycle twice. Each pass operates the ABS modulator valves once, which results in a brief puff of air being released from each valve. The ABS indicator turns on and off twice and then remains on.

Note: For vehicles with the Traction Control System (TCS) five 'chuffs' occur for each valve.

If the vehicle is equipped with a Volvo engine, the engine preheater indicator stays on three to four seconds. If the coolant temperature is over 50 °C (120 °F), the preheater is not engaged. If the coolant temperature is below 50 °C (120 °F), the preheater progressively engages longer depending on the coldness of the coolant. If the indicator stays on, there is a problem in the preheater circuit.

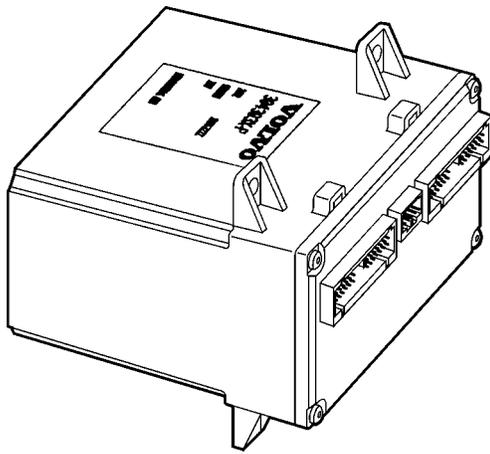

W2002673

20	Check for Fault Codes in the Vehicle Electronic Control Unit
-----------	---

The instruments, vehicle ECUs and engine ECUs, are always included in the system. Other included control units depend on the vehicle variant, legal requirements, and the vehicle specifications.

The control units are:


- Driver information display
- Instrument
- Vehicle ECU
- Engine ECU
- ABS Control Unit
- EBS Control Unit
- Air Suspension Control Unit
- Retarder Control Unit
- Load Indicator Control Unit
- Air Bag Control Unit
- Anti-Theft Control Unit

Ensure the engine is switched off during the service check and the starter key is in the drive position (I).

The control lever on the right-hand side of the wheel is used to communicate and read off any fault codes on the instrument's driver information display.

- 1 Read any fault codes by using the control lever and display. These fault codes are saved in the vehicle's control units.
- 2 Write down and fault codes displayed and then correct the faults.
- 3 After correction, zero out the fault codes.

Fault codes can be read also with a diagnosis output PC. This instrument is placed underneath the instrument panel on the driver's side of the vehicle.

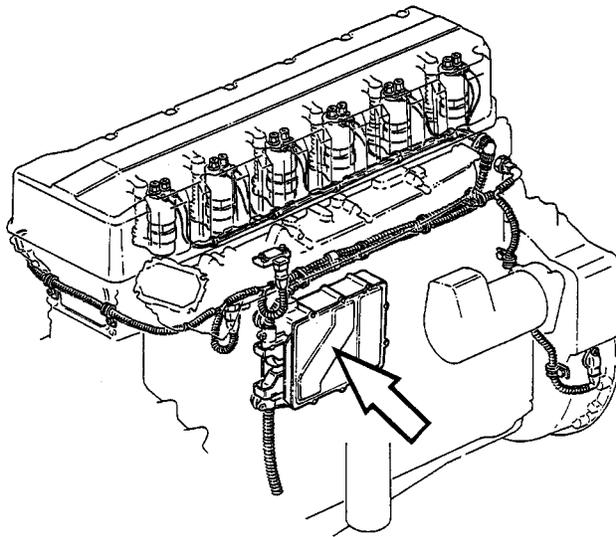

Engine ECU

T2006602

21 Check for Fault Codes in the Engine Electronic Control Unit


Use Service Information in Function Group 23 as a reference.

When reading fault codes perform the following:

- The engine is off.
- The parking brake is applied.
- The starter key is in the drive position (I).

- 1 Read on the display that no fault codes are saved in the EECU.
- 2 Press the diagnosis button for four seconds.
- 3 "CHECK ENGINE" lamp shines steadily for three seconds after the starter key is turned to the drive position (I).
- 4 Write down any fault codes.

Fault codes can be read via diagnosis output using a PC.

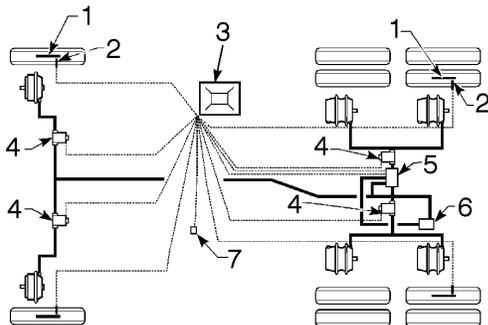

W5001348

- 1 Toothed Hub or Tooth Wheel
- 2 Sensor
- 3 ECU
- 4 ABS Valve
- 5 Relay Valve
- 6 TCS Valve
- 7 J1922/J1939 Connector


22 Check for Fault Codes in the ABS, Anti-Lock brakes

Note: Use Service Information in Function Group 59 as a reference.

To complete the Fault Code Check for ABS, perform the following:

- 1 Check that no fault codes are saved in the ABS ECU.
- 2 Write down any fault codes require correction.

Note: Fault codes can also be traced using a diagnostic program run through a PC.

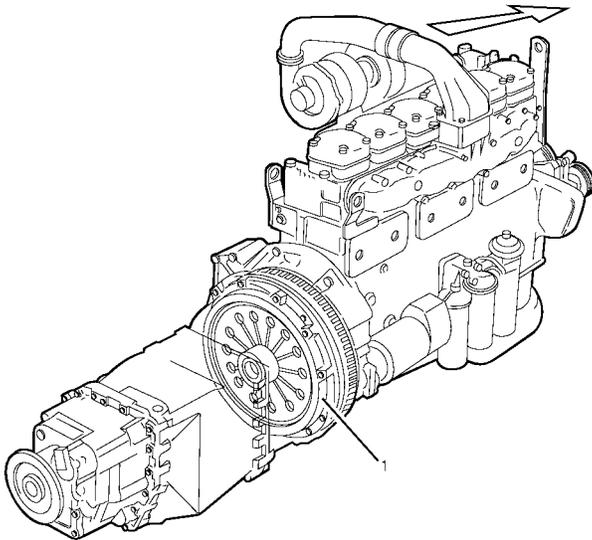

W4002407

23 Check for Fault Codes in Transmission

Note: Use Service Information in Function Group 40 as a reference.

To complete the Fault Code Check for Transmission perform the following:

- 1 Check that no fault codes for the Transmission are saved in the Vehicle ECU.
- 2 Write down any fault codes require correction.

Note: Fault codes can also be traced using a diagnostic program run through a PC.



W8001006

- 1 Utility Outlet
- 2 Option Switches
- 3 Clock
- 4 Alarm Switch
- 5 Fan Control
- 6 Temperature Control
- 7 Lighter

24 Function Check of Parking Heater


! DANGER

Check the heater and ensure that the exhaust is not blocked or leaking. Fumes from the exhaust can cause personal injury or death.

If the vehicle is equipped with a parking heater, start the vehicle and run the parking heater for fifteen minutes to perform a function check.

Note: Do not stop the parking heater until it has been allowed to run fifteen minutes or the function check will be inaccurate.

Note and correct any faults.

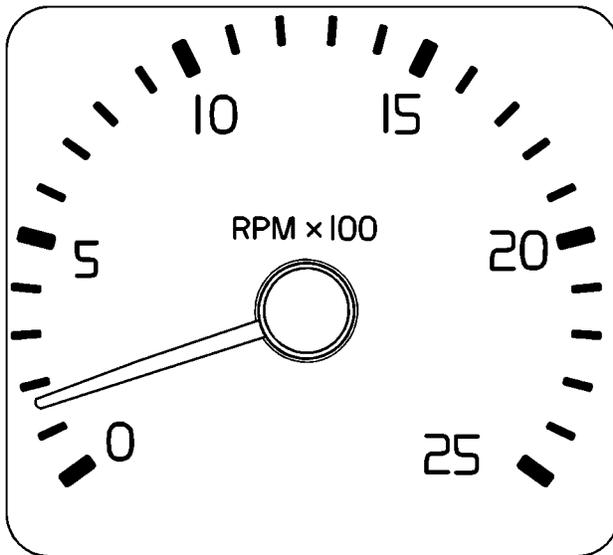

W3000815

25	Check Engine Control in Cab
-----------	------------------------------------

Check engine controls and performance while moving through the gears. Accelerator pedal should work smoothly and without any hesitation in engine response. Engine should accelerate smoothly and without hesitation, misses or surges. Also, check the exhaust through the mirrors for excessive smoke during acceleration.

During acceleration in a low gear, let engine go to full speed on a flat stretch of road. Note maximum engine speed. Check the engine manufacturer's specifications for correct speed.




T0008215

26	Check Retarder Control
-----------	-------------------------------

Ensure that the steps of the retarder control are well-defined and that the control stops in the set position.



W3000829

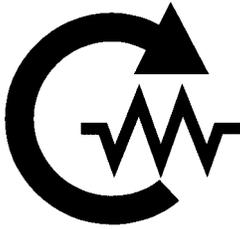

W3000881

27 Start Engine and Check of Starter Element and Preheater

Starter Motor

Using an ammeter, test starter motor for maximum current draw. Check service manual for specifications.

Inspect mounting for secureness and for possible cracks around flanges.

Check wires for wear, fraying, and terminal tightness.

Make sure the wiring is properly routed and securely clamped.

Volvo Engine Preheater

Inspect the Volvo engine preheater for correct function.


The ignition switch has a position in between the normal run position and the start position that engages the preheater. The engagement time is dependent on engine coolant temperature:

Above 10 °C (50 °F) — engagement time: 0 seconds.

Between 10 to -15 °C (50 to 4 °F) — engagement time: 25 ± 2 to 55 ± 2 seconds.

Below -15 °C (4 °F) — engagement time: 55 seconds.

Note: The preheat engages independent of the coolant temperature.


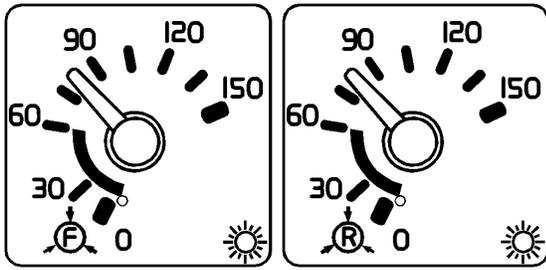


W3000819

28 Check Pressure Regulator's Disconnection and Connection Pressure

Pump the brake pedal while observing the air gauges. As the air pressure is lowering, verify the compressor governor cut-in pressure and the low air warning switches cut-in pressure. Check that both indicator lights in the lower right corner and the Master Warning indicator lights up and make sure the buzzer sounds.

Governor cut-in should be at 790 ± 35 kPa (115 ± 5 psi). The low air warning switches should close at a minimum pressure of 420 kPa (60 psi).

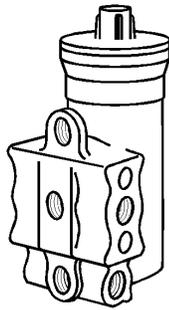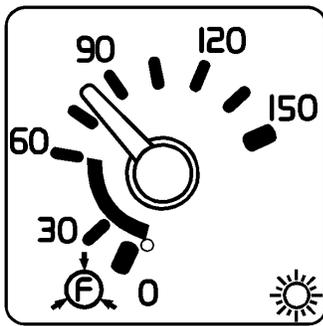


W3000818

29 Check Air Compressor's Function and Condition


Raise the air pressure until it is 585 kPa (85 psi). Time the air pressure build time from that point with the engine at full speed. The pressure should reach 690 kPa (100 psi) in 25 seconds or less. Verify that the governor cutout is at 900 ± 35 kPa (130 ± 5 psi).

Listen for unusual noises from the compressor while it is running under load and unloaded.

When the governor cuts out, check for air dryer exhaust function by listening for the air release from the air dryer through the door or window.

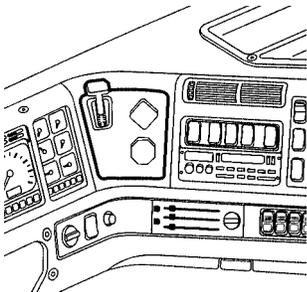

W5001037

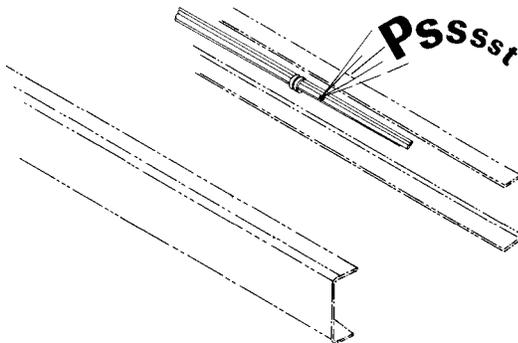

W5000582

30 Check Sealing on Main Brake Circuit (Service)

To perform the check of the Main Brake Seal perform the following:

- 1 Start engine.
- 2 Charge the Compressed Air System to 750 kPa (7.5 bar).
- 3 Shut off engine.
- 4 Release the parking brake.
- 5 Apply the foot pedal for a minimum of five minutes. Use a pedal jack whenever appropriate.
- 6 Check the Dual Pressure Gauge and ensure that the pressure drop doesn't exceed 10 kPa (1.57 psi).
- 7 Listen for air leaks.
- 8 Disconnect the Dual Pressure Gauge from the compressed air tank.



W5000599

31 Check Parking Brake and Blocking Valve

Check the parking brake and blocking valve holding power by engaging direct gear, not allowing the engine speed to go above 1000 rpm and attempt to drive off with the parking brake still applied. The parking brake should hold the vehicle stationary while letting the clutch up slowly.

Release the parking brake and start driving. Check that the parking brakes are released quickly and that no braked drag can be felt.




W4000760

32 Check Gear Shift and Clutch Pedal

To perform a service check on the Gear Shift and Clutch Pedal, complete the following:

- 1 Move the gearshift to range and split gear positions. Listen to the sound when passing through neutral and checking the range gear. The control lamp should light up when the high split gear is engaged.
- 2 Check, on the automatic gearbox, that the engine can only be started when the gear selector is in neutral (N).
- 3 Check that there is no excessive play in the gearshift.
- 4 Check that the gear stick gaiter fits tightly and is not cracked.

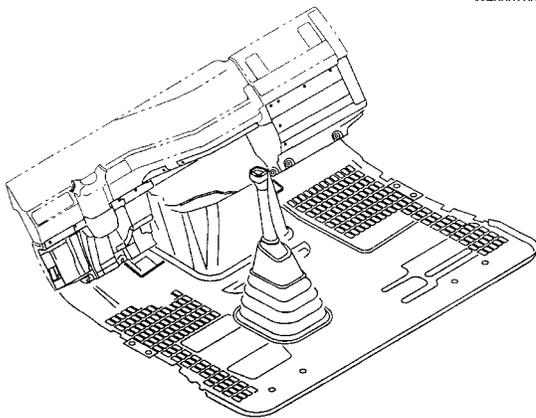

W8001384



W3000810

33 Check Bogie Lift

Check the bogie lift by pressing the air suspension leveling switch. Verify function by watching the chassis being lowered. Verify that the telltale indicator lights up on the instrument cluster.



W5000607

34 Check Brake Pedal and Foot Brake Valve

Letting the engine run at low idle, depress the brake pedal to full brake pressure (depress pedal only once so the compressor does not start loading again). Let the brake pressure stabilize. Hold pressure steady for one minute and check that there is no leakage by observing the air pressure gauges for pressure decrease. Maximum leak permitted over one minute is 10 kPa (1.5 psi).



W8000890

35	Check Hinges, Doorstops, Locks and Sealing Strips
-----------	--


Check the following door functions and verify their operation:

- Check that the door hangs properly on the hinges and that the lock functions properly.
- Check that doorstops and sealing strips are in working condition, free from damage and improper wear.

External Checks



W3004425

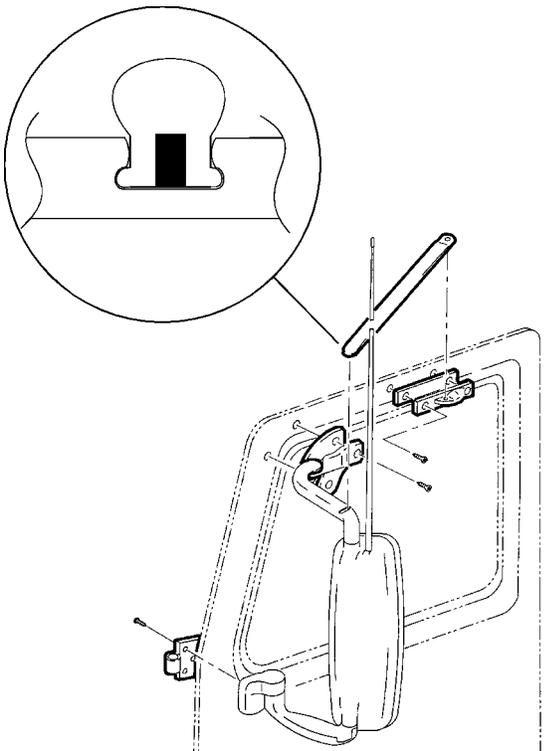

W8001420

36 Function Check of External Lamps


To perform a function check of the external lamps, perform the following:

- 1 Check all external lighting for operation.
- 2 Check that all lamps are in good condition.

37 Check Rear View Mirrors and Reflectors

To perform a function check of the mirrors and reflectors, complete the following:

- 1 Check that the rear view mirrors are in good working condition and remain in position when set.
- 2 Check the attachments for the rear view mirrors and ensure they are functional.
- 3 Check the reflectors for functionality and that none are missing.

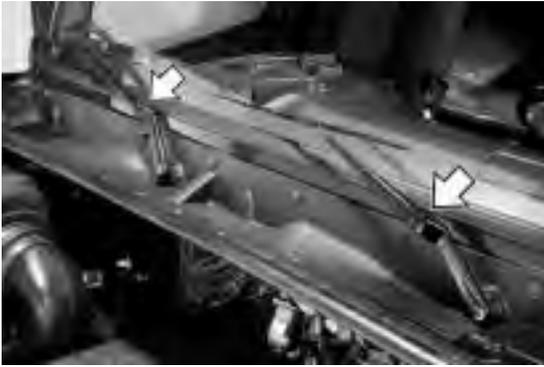

W3000786

38 Function Check of Wipers and Washers

Check the wiper arm tension and condition of the wiper blades.



W3000784

39 Check Headlamps

Check alignment and output of headlights.




W8000990

40 Check Air Filter for Ventilation System


For further information concerning component specifications see service information in Group 8 and appropriate vendor literature.

The fresh air filter should be inspected every 64,000 km (40,000 miles) for regular highway use. In very dusty conditions, it is recommended that the filter be checked every 16,000 km (10,000 miles). Replace with a new filter every 113,000 km (70,000 miles).

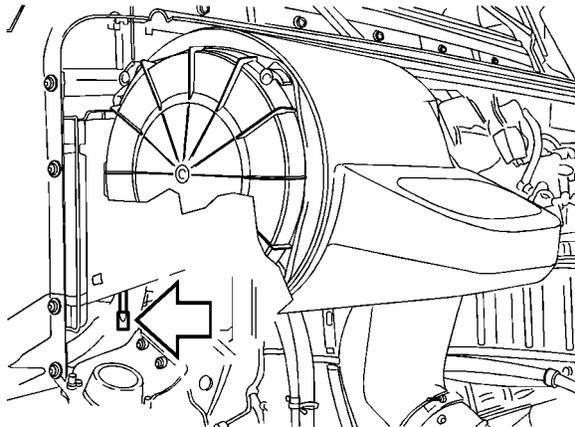

W8000989

Check that the evaporator drain nipple is open by squeezing the end to let water drain out.

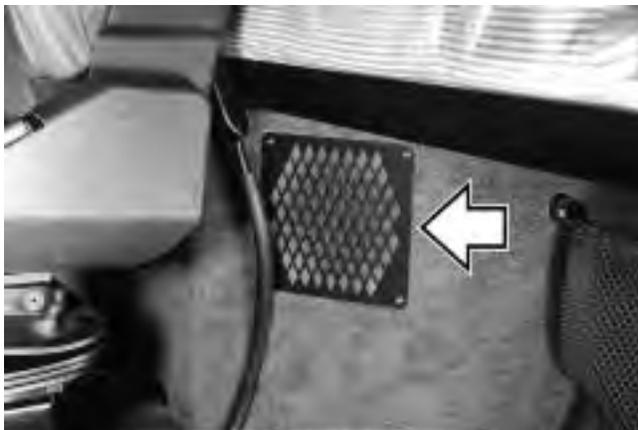

W8000955

If equipped, check the bunk unit air filter — located behind the passenger seat on bunk support. The bunk unit air filter should be inspected at regular intervals, approximately every 112,654 km (70,000 miles). The filter should be changed after 160,934 km (100,000 miles).



C8000117

41 Check Refrigerant Reservoir, Condenser, Pipes and Hoses**WARNING**

Before working on a vehicle, set the parking brakes, place the transmission in neutral and chock the wheels. Failure to do so can result in unexpected vehicle movement and can cause serious personal injury or death.

- 1 Ensure that the Refrigerant Reservoir is filled.
- 2 Using the leak detector, check the following for leaks:
 - Compressor thread connections.
 - Compressor crimp connections.
 - Compressor shaft seal.
 - Condenser tube connections.
 - Receiver/dryer connections.
 - Cab expansion valve.
 - Cab evaporator connections.
 - Pressure switch connections.
 - Schrader valve connections.
 - All refrigerant tubing bends and weld joints.
- 3 Recheck for leaks after performing any repair or replacement.



W8001066



W8001065

42**Check Air Intake and Air Deflector**

Check the air intake grille and air bellows for cracks, breaks and broken tabs and clips



W2001069

43**Check Hood Attachment and Locking Devices**

Open the hood and check condition of hood restraint cylinders and splash shields.

Note: The restraint cylinders are oil-filled and work like shock absorbers.




W8000926

Check hood lock cables for function and condition. Make sure they are not fraying.

Operate the lock to see if it moves without binding.

Inspect cab air suspension condition.

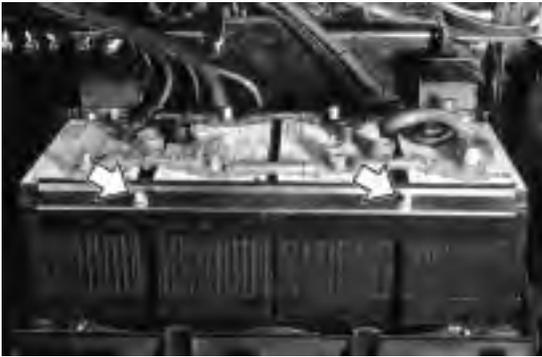

W3000823



W3000859

44**Check Batteries - Dirt, Leakage, Attachment, Specific Gravity of Battery Acid, Fluid Level, Connections and Battery Box**

Note: Batteries on U.S. vehicles are maintenance free.

To complete a function check of the battery mounting, connections and fluid levels complete the following:

- 1 Inspect battery hold-downs for proper placement and tightness.
- 2 Make sure the connections are free from corrosion.
- 3 Inspect cables for proper length, chafing and proper routing.
- 4 Check terminals for tightness and cracks.
- 5 Check Specific Gravity of battery acid.
- 6 Check battery fluid level.
- 7 After cleaning, spray corrosive preventive on posts, terminals and general area around them.
- 8 Ensure that the battery ground connections from the engine to the frame are secure and free from corrosion.

Note: The battery ground connection goes directly to the starter motor.



W2001071

45**Check Fuel Tank, Hoses, Venting and Mounting**

To complete a service check of the fuel tank, hoses, pipes and mountings, complete the following:

- 1 Check the fuel tank mounts.
- 2 Check the fuel tank straps and J-brackets and ensure they are tight and that the tanks haven't rotated.
- 3 Inspect the fuel tank brackets for cracks.
- 4 Check the fuel lines for proper routing, wear and leaks.
- 5 Check the venting for dirt, wear, and damage.

Note: Ensure that the fuel lines are not routed too close to the exhaust system.



W2001226

46**Check Fuel Tank Ventilation Filter**

To complete a service check of the fuel tank ventilation filter, complete the following:

- 1 Inspect the tanks for damage, leaks and corrosion.
- 2 Inspect tank vents.

47 Draining of Fuel Tank (Dirt, Water)

To complete a service check of the fuel tank ventilation filter, complete the following:

- Drain the fuel tank and check for dirt or water in the fuel system.

48 Check Fuel Water Separator for Fuel System, Draining of Condensation

For further information concerning component specifications see service information in Group 1, "Oil and Filter Change Intervals for Volvo Components," publication number 175-001, and appropriate vendor literature.

If the filter is not being changed, drain the water separator.



W2001067



W7000437

49

Check Tire Wear

Tire Wear

- 1 Examine each tire tread for unusual wear patterns. Refer to chart below for typical tread patterns.
- 2 Measure tread depth.
- 3 Check tire pressure and leak-test valve stems.

Different Types of Tire Wear

<p>Faulty Air Pressure</p> <p>Overinflation Abnormal wear in middle</p> <p>Underinflation Abnormal shoulder wear</p>	<p>Improper Camber</p> <p style="text-align: center;">Wrong</p>	<p>Incorrect Toe</p> <p style="text-align: center;">Toe-In Toe-Out</p> <p style="text-align: center;">Out-of-Line Axle</p> <p style="text-align: center;">Steering Arm Defect Wear only on one tire</p>	<p>Imbalance or Caster Fault</p> <p style="text-align: center;">Unbalanced Wheel</p> <p style="text-align: center;">Mechanical Fault</p>	<p>Twin Mounting</p> <p>One Tire Badly Worn Reason: Excessive road camber, different tire types, different diameters, unsuitable loading.</p> <p>Contact Wear Reason: Insufficient air pressure, wrongly matched rims for tire type and size, excess in tire body and different tire types in inner and outer tire.</p> <p style="text-align: center;">Check the diameter</p>
<p>Slip Damage</p> <p>Hard Cornering</p> <p>Flying Start</p>	<p>Tread Bruises</p> <p style="text-align: center;">Cuts Flaking Cuts</p> <p>Rubber Flaking</p> <p>Reason: Poor roads ...</p> <p>... air pressure too high, incorrect type of tires.</p>	<p>Bald Spots</p> <p>Reason: Over-energetic braking, locking brakes, out-of-round brake drums.</p>	<p>Feathered Edges</p> <p>Normal occurrence on good roads, high mileage</p> <p>Wear only on non-driving wheels</p>	<p>Toe and Heel Wear</p> <p>Toe and heel wear is a normal occurrence, depending on tread pattern</p> <p>Compression and extension The GREATER the load, the GREATER the wear</p>

W1000062

Engine Compartment Checks



W3000978

50	Check Alternator Mounting
-----------	----------------------------------


Check the alternator mounting for wear or damage.



W3000978


51	Check Electrical Connections and Cables for Alternator, Starter Motor, and Preheater
-----------	---

- Check the electrical connections for the alternator, starter motor, preheater for dirt, corrosion and damage.

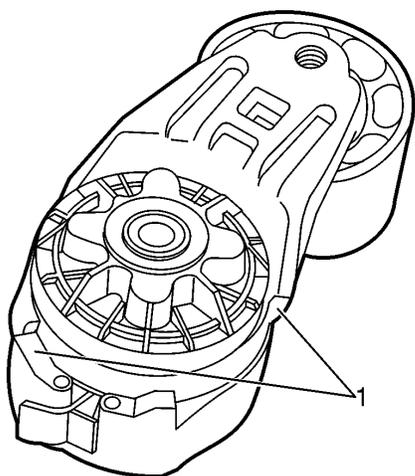

W2003743

1 — Tensioner against the install stop or free-arm stop.

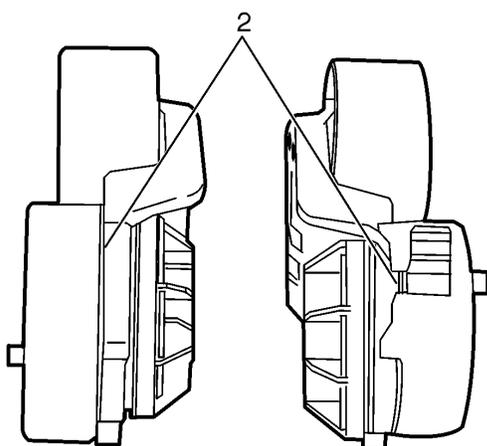

W2003742

2 — Metal-to-metal contact between the arm and springcase.

52 Check Drive Belts





DANGER

Ensure that the engine cannot be started while working around the fan area. Failure to do so may result in serious personal injury or death.

For further information refer to Function Group 2 and appropriate vendor literature.

To perform a function check of the drive belts complete the following:


- 1 Using a belt tension meter, check fan belts for correct tension.
 - Note:** For manual tensioning systems only.
- 2 Inspect the belts for wear, cracks, and fraying.
- 3 Check along the belts for proper alignment.
- 4 Visually inspect hubs and pulleys for wear and damage.
- 5 Inspect the vibration damper for leaks or any surface damage.
- 6 With belt on the drive:
 - Check if the tensioner is against the install stop or free-arm stop. Replace the belt if this condition is seen.
 - Check if the belt is tracking all the way to one edge of the tensioner pulley. A witness mark, considerably wider than the belt, may be seen on the pulley under this condition and the tensioner should be replaced.
- 7 Remove the belt by pulling the tensioner back with a breaker bar. Slowly return the tensioner to its free arm stop. Perform the following:
 - With the breaker bar, slowly pull the tensioner back from the free arm stop to the install stop and slowly release again. If the tensioner exhibits excessive 'roughness' or hesitancy during this cycle, replace the tensioner.
 - Check for metal-to-metal contact between the arm and springcase. Replace if metal-to-metal contact is seen.
 - Check to see if there are any cracks in the tensioner or if the stops on the springcase are broken. Replace the tensioner if either of these conditions is seen.
- 8 Reinstall the belt ensuring that the belt is properly seated in the grooves of all pulleys.

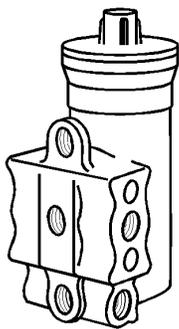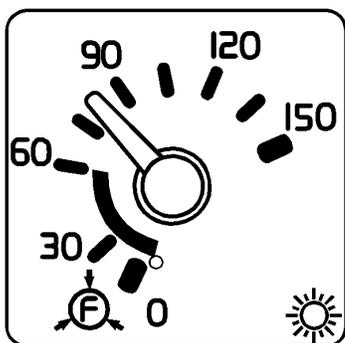

W3000818

53 Check Air Compressor

- 1 Increase the air pressure until it is 585 kPa (85 psi). Time the air pressure build time from that point with the engine at full speed. The pressure should reach 690 kPa (100 psi) in 25 seconds or less. Verify that the governor cutout is at 900 ± 35 kPa (130 ± 5 psi).
- 2 Listen for unusual noises from the compressor while it is running under load and unloaded.
- 3 Check ventilation for dirt and/or damage.

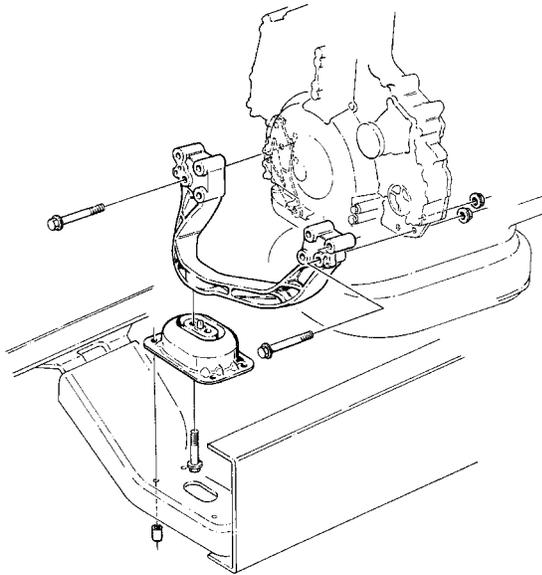

W2001414



W2002080

54 Check Engine Mounting

To perform a check of the engine mounting complete the following:

- Check all brackets, bolts and other engine mounting parts for dirt, wear, and damage.

55 Check Radiator Mounting

To perform a check of the radiator mounting, complete the following:

- Check all brackets, bolts, and other radiator mounting parts for dirt, wear, and damage.



W2001075

56	Check Radiator Fan, Bearing Tolerance, Bolt Unions, Fan Shroud and Fan Ring with Rubber Seal
-----------	---



Ensure that the engine cannot be started while working around the fan area. Failure to do so may result in serious personal injury or death.

Perform the check of the radiator fan as follows:


- 1 Inspect fan blades for any damage.
- 2 Ensure there is enough clearance between the fan blade tips and the fan ring in the shroud.

Note: The minimum clearance is 3 mm (0.12 in.) at any point around the fan ring.
- 3 Loosen the belts and rotate the fan hub assembly. Check for roughness and binding in the bearings. Check that the end play does not exceed 1.5 mm (1/16 in.).
- 4 Check fan clutch for lining wear or air leaks. Lubricate fan hub, if applicable.
- 5 Inspect the idler pulley for cracks.
- 6 Check for bearing roughness and binding.
- 7 Inspect the belt driven water for bearing wobble and any evidence of leakage.
- 8 Check the radiator package mounts, bearing tolerance and bolt unions.
- 9 Inspect rubber cushions for wear.
- 10 Inspect fan shroud rubber molding and all fasteners for wear and tightness.


57	Pressure Testing of Cooling System
-----------	---

To complete a pressure test of the cooling system:

- Pressure test the cooling system using tool J-44399.

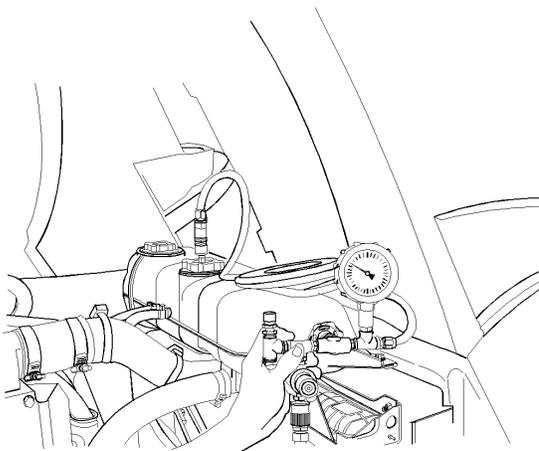

W2001430

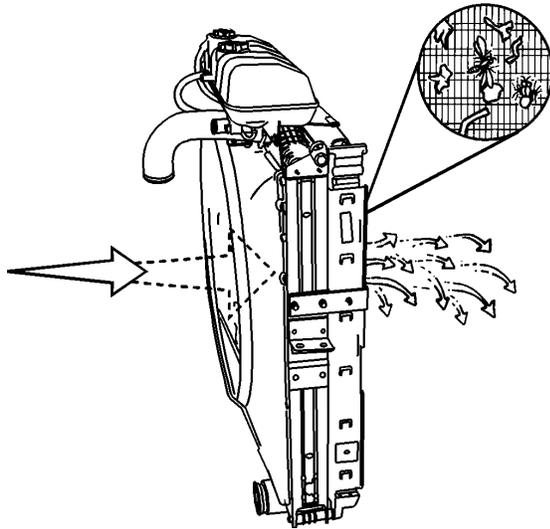

W2001496

58 Check Radiator, Hoses, Pipes and Air Flow

WARNING

Do not remove the cap from the coolant surge tank while the engine and radiator are still hot. Scalding fluid and steam may be blown out by pressure if the cap is removed while the engine and radiator are hot.

Note: This check is also considered Noise Emissions Control Maintenance, which is required maintenance for any Volvo vehicle. For further information on Noise Emissions refer to "Noise Emissions" page 5.

Perform the check of the radiator, hoses and pipes as follows:

- 1 Check the front area of the radiator package for dirt and debris that hinders air flow.
- 2 Clean the radiator package with compressed air or water pressure, blowing or pushing from the inside out.

Note: Air pressure should not exceed 200 kPa (30 psi) for the radiator and charge air cooler cores.

Note: If there is damage to the cooling fins, straighten them out so air can flow freely.

- 3 Check for fluid leaks on or around the engine.

Note: Inspect the mating surfaces, auxiliary component attaching areas and hook-ups, hoses and pipes.

- 4 Pump up pressure in the relief valve, with the heater controls open, to 75 kPa (11 psi). Leave under pressure for five to ten minutes. Look for leaks, wear, cracking and distortion on hoses and tubing.
- 5 Check the hose clamps for tightness.



T2015533

59**Check Intercooler Pipes, Hoses and Air Flow**

Note: This check is also considered Noise Emissions Control Maintenance, which is required maintenance for any Volvo vehicle. For further information on Noise Emissions refer to "Noise Emissions" page 5.

**WARNING**

Always wear appropriate eye protection to prevent the risk of eye injury due to contact with debris or fluids.


To perform a check of the intercooler pipes and hoses, complete the following:

- Inspect the charge-air-cooler for cracks.

Note: Do not operate the vehicle with a damaged or broken charge-air-cooler. This voids the warranty and the engine will not meet emission regulation requirements.

The best method to clean the package is to use air pressure or water stream. Clean from the back of the core. Air pressure should not exceed 30 psi (200 kPa) for radiator and charge-air-cooler cores. The use of fin comb is also a good tool to loosen bugs and dirt from the fins.

Note: If the dirt cannot be cleaned off, consult your Volvo Truck dealer.

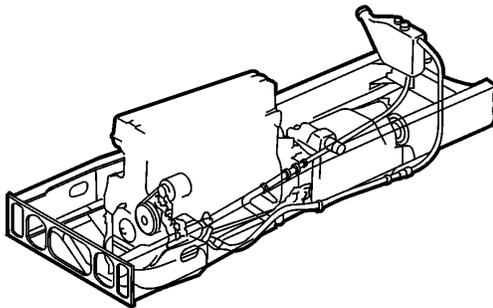


W4002380

60**Check Tightness of Engine and PTO**

For further information refer to Group 4.

To complete a check of the tightness of the engine and PTO, complete the following:

- 1 Check that the engine does not leak oil or coolant.
- 2 Check that the fittings, flanges and hose connections are tight.
- 3 Check that hoses or pipes do not chaff or are cracked.
- 4 Check that the PTO or lines do not leak oil.



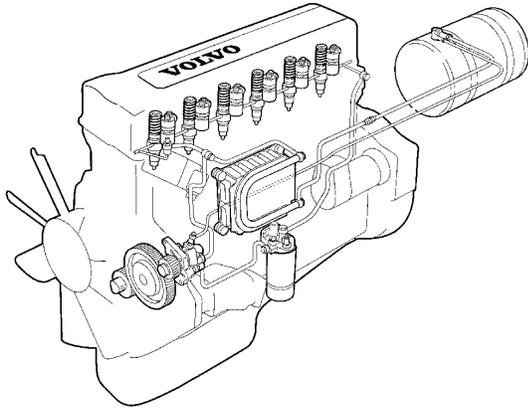


61 Check Fuel Lines on Engine

To complete a check of the fuel pipes and fuel lines, complete the following:

- 1 Check that the hose and pipe fittings for the fuel lines don't leak.
- 2 Check that the fuel lines do not leak or chaff.

T1006751

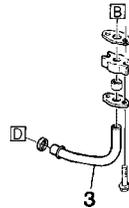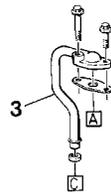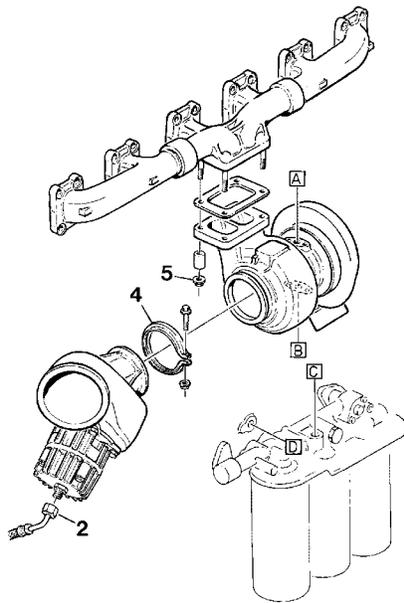


62 Check for Exhaust Leakage

To perform a check of the exhaust system, complete the following:

- 1 Check the exhaust flex line for routing.
- 2 Ensure that nothing that is affected by heat is near the exhaust flex line.
- 3 Check for signs of exhaust leaks.
- 4 Check for leaks on the exhaust ports on the cylinder heads, at the intake exhaust manifolds and flanges.
- 5 Check for leaks on the exhaust pressure governor and the jointing clamp for the exhaust pipe.

W2000943

- 1 N/A
- 2 Exhaust pressure governor
- 3 Oil delivery and return pipes
- 4 Clamp
- 5 Nuts

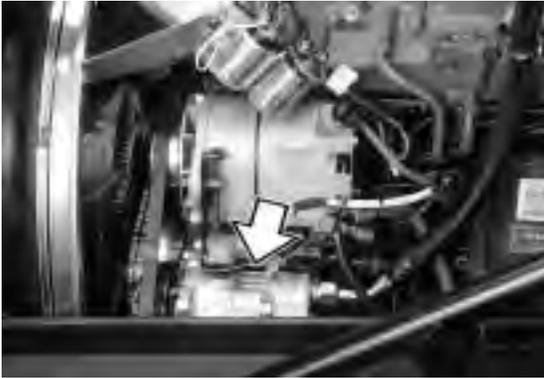

W8001090

63	Check A/C Compressor Mounting
-----------	--------------------------------------

To perform a check of the A/C compressor mounting, complete the following:

- 1 Check A/C compressor mounts for secureness and cracks.
- 2 Inspect the compressor exterior for leaks.



W8001017


64	Check A/C Pipes and Hoses
-----------	----------------------------------

To perform a check of the A/C hoses, fittings, switches, and wires, complete the following:

- 1 Inspect A/C hoses and pipes for signs of abrasion wear, over heating, kinks, broken or missing mounting hardware.
- 2 Look for signs of refrigerant leaks at all connections and hose crimps.
- 3 Check moisture indicator or receiver dryer.
- 4 Check condenser for air flow restrictions.



W8001283

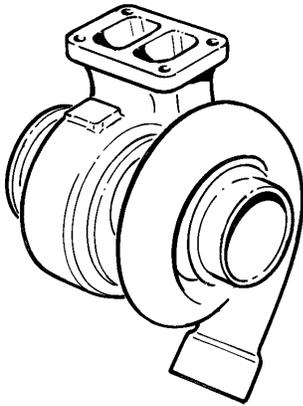

T2006949



T2012805



T2012806

65**Check Air Pipe between Air Intake and Turbo**

To perform a check of the air pipe between the air intake and turbo, complete the following:

- Check the air pipe between the air intake and turbo for wear, damage, and cracks.

66**Check Turbocharger and Regulator**

DANGER


Before working on a vehicle, set the parking brakes, place the transmission in neutral, and block the wheels. Failure to do so can result in unexpected vehicle movement and can cause serious personal injury or death.


WARNING

HOT ENGINE! Keep yourself and your test equipment clear of all moving parts or hot engine parts and/or fluids. A hot engine and/or fluids can cause burns or can permanently damage test equipment.

To complete a check of the turbocharger and regulator, complete the following:

- 1 Check the turbocharger, attached oil pipes, clamps, nuts, and airlines for wear, damage, dirt, and cracks.
- 2 Check the regulator for wear, damage, dirt and cracks.

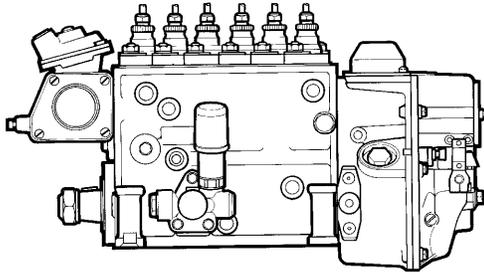

67	Check Pump Coupling for Injection Pump (Electronic Engines Not Applicable)
-----------	---

To perform a check of the pump coupling for the injection pump, complete the following:

- Check the pump coupling is in good condition and clean. There must be no traces of oil or other impurities.

68	Check Tightness on Servo Pump, Oil Lines and Steering Gear
-----------	---

To perform a check of the tightness on the servo pump, oil lines, and steering gear, complete the following:

- Check that the servo pump is secured tightly to the transmission. Also check for excessive dirt, wear or damage.
- Check that the oil lines are secure and free from excessive dirt, wear or damage.
- Ensure that the steering gear is secure and free from excessive play.
- Check that the power steering pump is securely fastened to the engine.
- Ensure that the power steering hoses are secured and free of leaks.


69	Check Sound Baffles for Engine
-----------	---------------------------------------

This option not applicable to the VN/VHD vehicles.



W6001428

Front Suspension, Steering System Checks

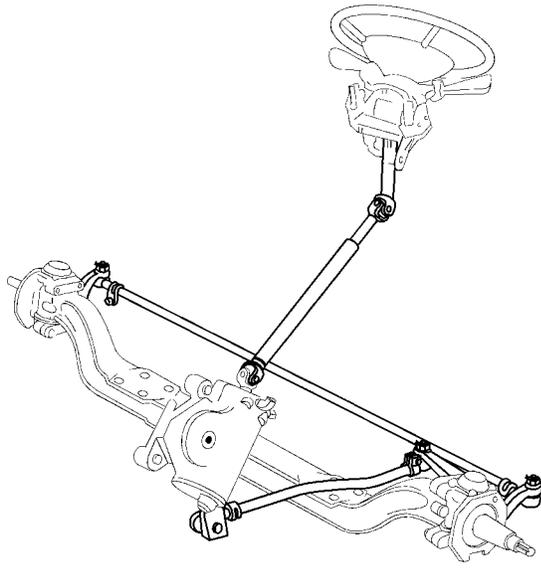


W6000869

70**Check Steering Linkage**

To perform a check of the servo pump and steering gear, complete the following:

- 1 Check the steering shaft, drag link, and tie-rod. Inspect for damage or external wear.
- 2 Check joints for play by manually pushing and pulling each ball stud.

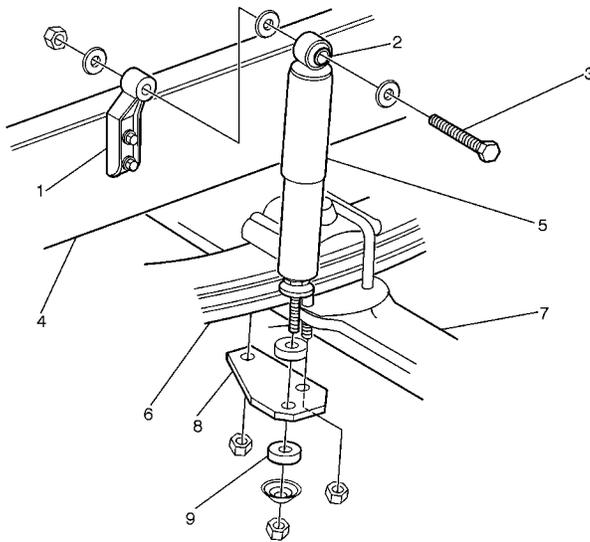**71****Check Front Shock Absorbers**

To perform a check of the front shock absorbers, complete the following:

- 1 Check the rubber mounting bushings for wear or damage.
- 2 Disconnect the lower end and work the shock absorber by hand to see that the outer tube is not striking or rubbing against the fluid reservoir tube.
- 3 While the shock absorber is disconnected, check the piston movement by pulling and pushing the absorber down and up slowly to insure the piston does not bind in the pressure tube.

Note: There should be considerable resistance when extending the absorber, but only slight resistance when collapsing the unit.


W7001242

- 1 Upper Shock Mount Bracket
- 2 Eyelet
- 3 Mounting Bolt
- 4 Chassis
- 5 Shock Absorber
- 6 Front Spring
- 7 Front Axle Beam
- 8 Lower Shock Mount Bracket
- 9 Bushing

72 Check Steering Knuckle Bearing

To perform a check of the steering knuckle bearing, complete the following:

- Check the steering knuckle bearing for excessive dirt, wear, or damage.

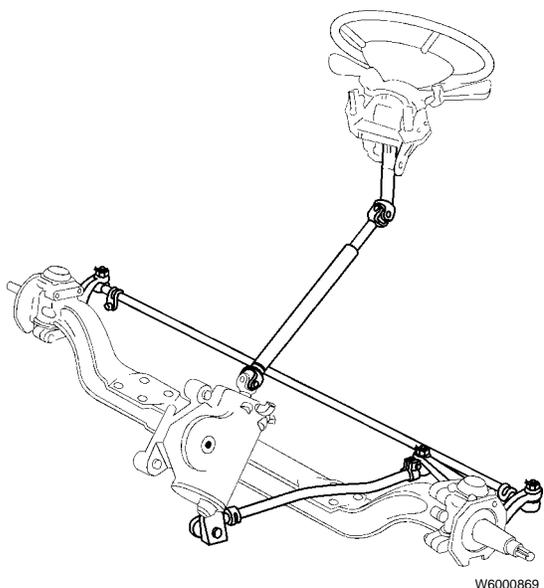**73** Check Front Wheel Bearings

To perform a check of the front wheel bearing clearance, complete the following:


- Check wheel bearings with a dial indicator. Bearing clearance should be within 0.04 to 0.12 mm (0.001 to 0.005 in.).



74 Check Front Wheels

To perform a check of the front wheels, complete the following:


- 1 Inspect the hub and tires for excessive dirt, wear or damage.
- 2 Check the tire pressure to ensure proper tire inflation. Refer to the appropriate vendor literature for information concerning tire inflation.

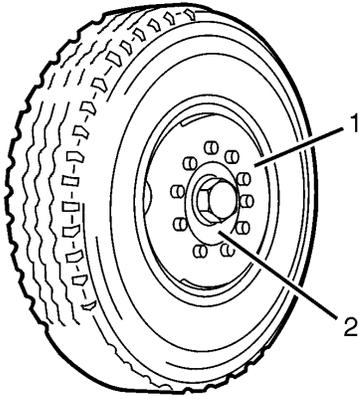

W7001075

Fig. 3: Disc Wheel Hub

- 1 Disc Wheel
- 2 Hub

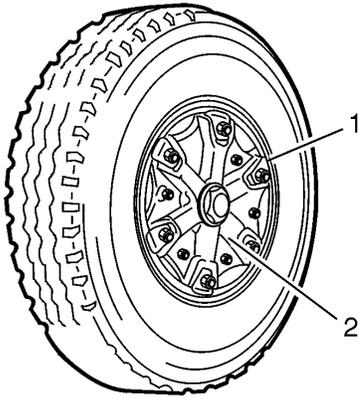

W7001076

Fig. 4: Rim and Spoke Wheel

- 1 Rim
- 2 Spoke Wheel

Checks Beneath the Vehicle

75 Check Tightness, Bearing Clearance and Ventilation on the Front Drive Axle

To perform a check of the sealing on the front drive axle, complete the following:

- Check the hub for excessive dirt, wear, or damage.
- Check the hub for leakage around front driveshaft axle flange.
- Check the entire axle assembly for wear and damage.

76 Check Clearance in Clutch's Mechanical Function

To perform a check of the slack in the mechanical linkage for the clutch, complete the following:

- Check shift tower for proper mechanical linkage and function.



W4000760

77 Check Clutch's Hydraulic and Pneumatic Control System

To perform a check of the clutch's hydraulic and pneumatic control system, complete the following:

- Check the clutch's hydraulic and pneumatic system for leaks, wear, or damage.
- Check the clutch fluid level.



W4000760

78 Check Clutch Wear

Start the test drive by checking clutch pedal play and clutch operation. Clutch pedal play should be 4 to 10 mm (0.15 to 0.40 in.), which is the clearance between the pedal plunger and the piston in the master cylinder.

On vehicles with clutch brake, check function by depressing clutch pedal to within 6 to 12 mm (1/2 to 1 in.) from the floor while engaging a gear. There should be no grating of the engagement teeth when the clutch brake is engaged.



W4000770

79 Check Transmission's Pneumatic and Mechanical Control System

To perform a check of the transmission's pneumatic and mechanical control system, complete the following:

- 1 Check the top of the transmission.
- 2 Inspect lower shift boot condition.
- 3 Inspect the top covers for leakage and the shift lever for leakage and wear.




T1006766

80 Check Seals for Speedometer Sensor and Joint Coupling

To perform a check of the seals for the speedometer sensor and joint coupling, complete the following:

- 1 Check the speedometer sensor seals for wear, cracks, or any other damage.
- 2 Check the joint coupling for secureness and wear or damage.

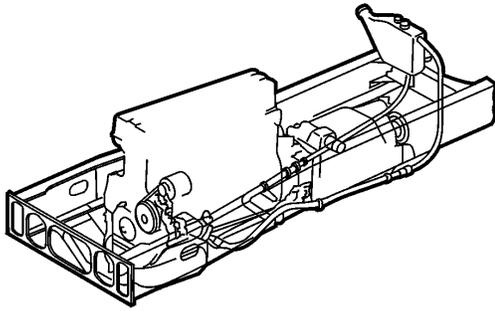

W4002380

81	Check Tightness on Transmission, Transfer Case, and Power Take-off including check of lines
-----------	--

To perform a check of the tightness of the transmission, transfer case, and power take off complete following:

- Visually check the transmission for secureness and any worn or broken clamps, bolts, or other securing devices.
- Visually check the transfer case for secureness and any worn or broken clamps, bolts, or other securing devices.
- Visually check the PTO for secureness and any worn or broken clamps, bolts or other securing devices.
- Check all lines and hoses for leaks.


82	Check Tightness on Cooler for Transmission
-----------	---

To perform a check of the tightness of the oil cooler for the transmission, complete following:

- On the oil cooler, check the coolant lines for proper routing and that there are no leaks.


If the oil cooler is air-cooled, complete the following:

- 1 Check transmission cooler for oil leaks.
- 2 Check that the air flow is free through the core.
- 3 Check all the transmission's pneumatic pipes and hoses for cracks and leaks.

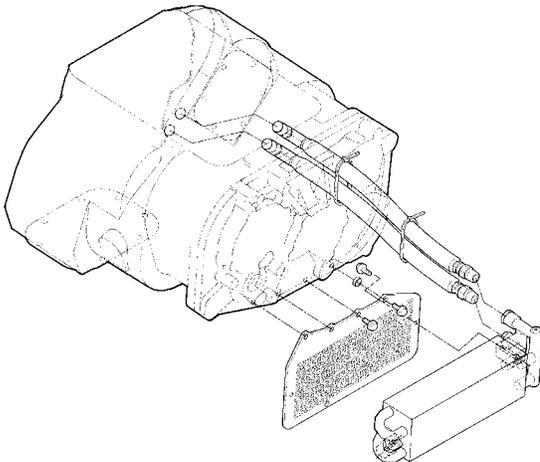


W4000769

Oil Cooler

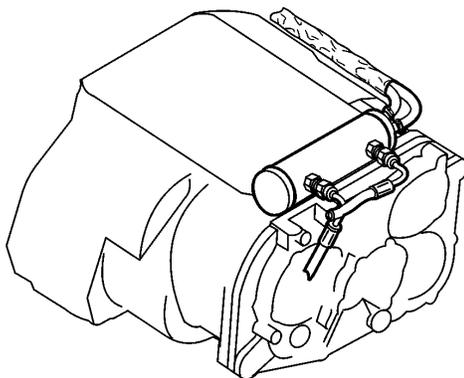

W4002536

Oil/Water Cooler

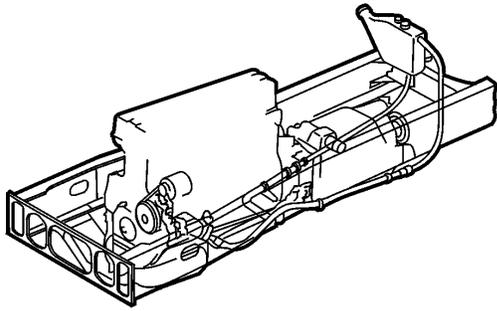

W4002380


83	Check Ventilation for Transmission, Transfer Case, and Power Take-Off
-----------	--

To complete a check of the ventilation for the transmission, transfer case and power take off, complete the following:

- Check that the air flow is free through the core for the transmission, transfer case and power take off.


84	Check Tightness on Retarder and check lines
-----------	--

Not applicable for the VN/VHD vehicles.

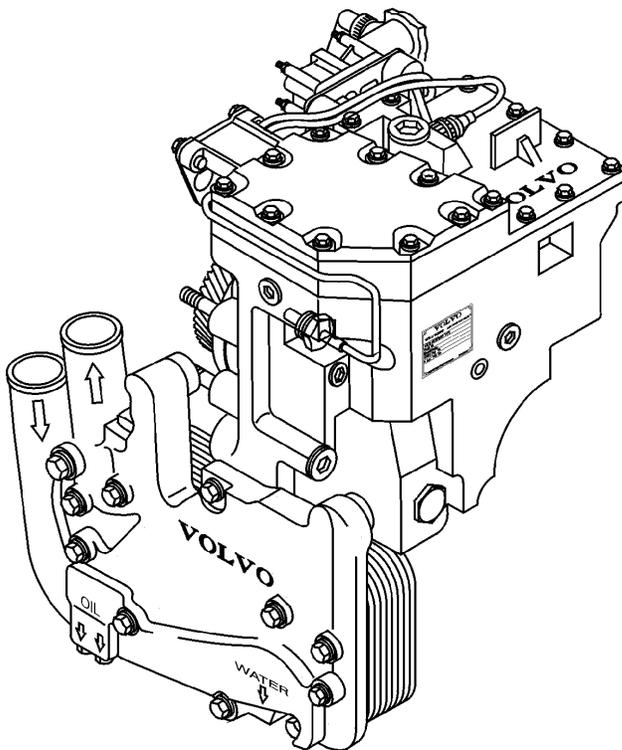

85	Check Sound Baffle for Gearbox
-----------	---------------------------------------

Not applicable to VN/VHD vehicles.

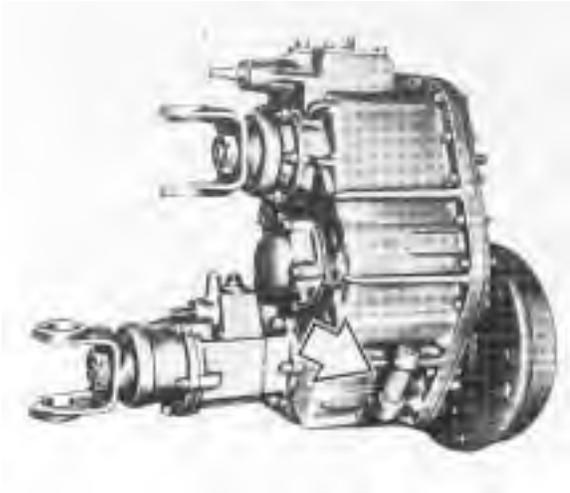

W1000035

86**Check Transfer Case's Mounting**

Not applicable for the VN/VHD vehicles.

87**Check Drive Belt for Power Steering**

Not Applicable for the VN/VHD vehicles.



W4000762



W4000751

88	Check Drive Shaft, Universal Joints, Sliding Joints and Support Bearings
-----------	---

To perform a check of the driveshaft, universal joints, sliding joints and support bearings complete the following:

- 1 Check transmission output shaft bearing for wear. Move the flange up and down; bearing play should not be greater than 1.5 mm (1/16 in.).
- 2 Check for oil leaks past the transmission output shaft seal.

Note: There is a difference between sweating and a leak. If oil is seeping past the seal after cleaning, there is a leak.
- 3 Check driveshaft U-joints and slip joint for play. There should exist no noticeable play in the U-joint bearings. The slip joint radial play maximum is 0.18 mm (0.007 in.).
- 4 The driveshaft tube should be straight and have no damage or missing weights. Remove any build-up of foreign material such as undercoating, concrete, etc.
- 5 Check the torque of driveshaft bolts - they should be 170 Nm (125 ± 10 ft-lb).
- 6 Check center bearing mounting.
- 7 Check rear axle pinion bearing for wear and leaks past the seal.

Note: The Volvo CT EV87 front tandem gear input shaft has a large play for the input shaft bearing. This is normal and does not have any damaging effect on the transfer gear-during rotation, the shaft is balanced so that the clearance is insignificant. If there is no oil leakage there is no reason for concern about this play.



W4000754

89	Check Tightness of Rear Axle and Hub Reduction Gear
-----------	--

To perform a check of the sealing on the rear axle and hub reduction gear, complete the following:

- 1 On the rear axle, inspect around the mating surfaces for leaks past the gasket.
- 2 Check brake chamber and air tubing condition.
- 3 Check hub reduction gear for any leaks or cracked sealant.



W4000752

90**Check Bearing Clearance in Pinion and Rear Axle Input Shaft**

To perform a check of the bearing clearance in the pinion and rear axle, complete the following:

- 1 Use a dial indicator to check bearing clearance in the pinion and rear axles. The clearance should be within 0.04 to 0.12 mm (0.001 to 0.005 in.).



W4000754

91**Check Rear Drive Axle Ventilation**

To perform a check of the rear drive axle ventilation, complete the following:


- Check the rear drive axle for proper ventilation; it should also be free from excessive dirt, wear, or damage.

92**Check Exhaust Pipe and Silencer**

Note: This check is also considered Noise Emissions Control Maintenance, which is required maintenance for any Volvo vehicle. For further information on Noise Emissions refer to "Noise Emissions" page 5.

To perform a check of the exhaust pipe, silencer or particulater, complete the following

- Check if there is exhaust leakage around the exhaust ports on the cylinder heads, at the intake and exhaust manifolds, and at the flanges; exhaust pipe(s) and silencer.
- Check if there is exhaust leakage at the jointing clamp for the front exhaust pipe.

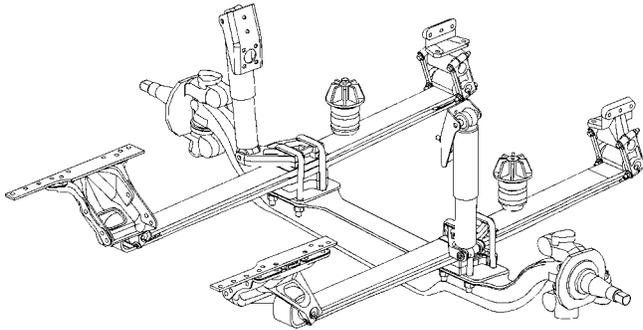

W6000827


93**Check Rear Springs and U-Bolts**

To perform a check of the springs and U-bolts, complete the following:

- 1 Check the springs for damaged or broken leaves.
- 2 Check the spring bushing location in the spring eye.
- 3 Inspect the U-bolts for signs of movement or wear.
- 4 Check that the spring center is aligned with the center of the spring pad on the front axle beam. Verify this alignment by inspecting the underside of the spring to see if there are any signs of movement between the spring and the axle member.

94**Check Anti-Roll Bar**

Not applicable to VN/VHD vehicles.

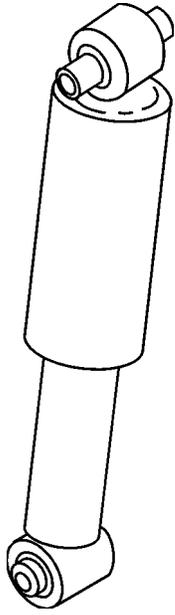


W6000836

95**Check Rear Shock Absorbers**

For further information refer to 761-002, "Shock Absorbers, Front and Rear."

To perform a check of the rear shock absorbers, complete the following:

- Check the rear shock absorbers for excessive dirt, wear, or damage.

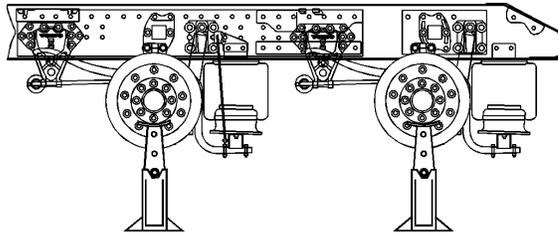


W7000763

96**Check Mounting for Front and Rear Axle**

To perform a check of the mounting for the front and rear axles, complete the following:

- 1 Check the mounting for the front axle for tightness and excessive wear and damage.
- 2 Check the mounting for the rear axle for tightness and excessive wear and damage.

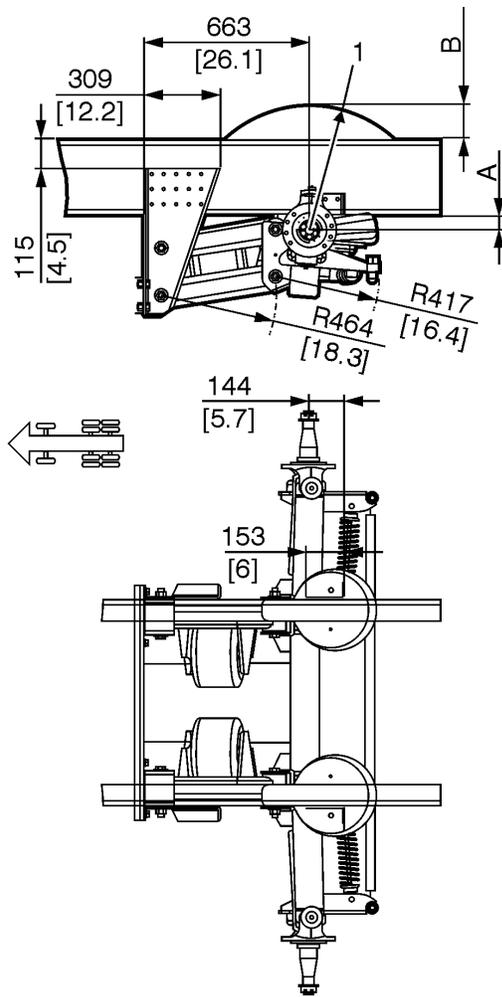


W5001185

97**Check Bogie Lift or Lift Axle**


To perform a check of the bogie lift or lift axle, complete the following:

- 1 Check the lift axle for excessive wear and damage.
- 2 Check the lift axle air lines for leaks or cracks.
- 3 Check the lift axle springs for wear or damage.
- 4 Check the lift axle for proper operation.

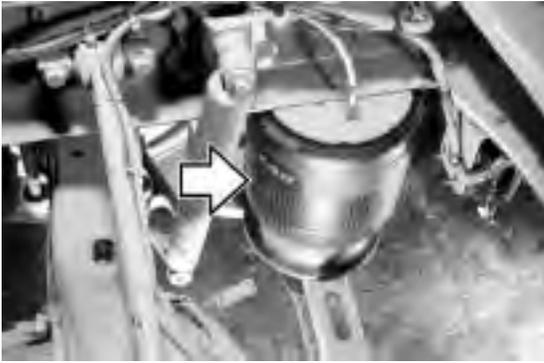

W7000444

Air Bellow

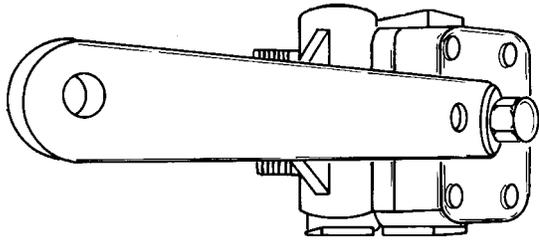

W7000759

Leveling Valve

98**Check Rear Suspension Level Sensors and Leveling Valves**

To perform a check of the air bellow, level sensors and level valves for the air suspension, complete the following:

- 1 Check the air spring for wear and cracks.
- 2 Check the level valve for proper operation.
- 3 Check the leveling valve for wear and damage.
- 4 Check rod control linkage.


99**Check Height Regulation for Air Suspension**

Not applicable for VN/VHD vehicles.

100**Check Chassis Frame and Crossmembers**

To perform a check of the chassis frame and crossmembers, complete the following:

- 1 Check the chassis frame for excessive wear or damage.
- 2 Check the securing fasteners for looseness, excessive wear or damage.
- 3 Check the crossmembers for excessive wear or damage.

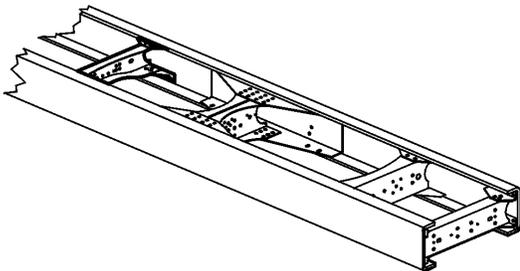

W0001880

101 Check Central Lubrication System


Not applicable for VN/VHD vehicles.

102 Check Compressed Air Lines and Hoses

For further information refer to 560-660, "Compressed Air Brakes, All Models."

To perform a check of the compressed air lines and hoses, complete the following:

- Check the compressed air lines and hoses for leaks and cracks.
- Check the securing fasteners for tightness and wear or damage

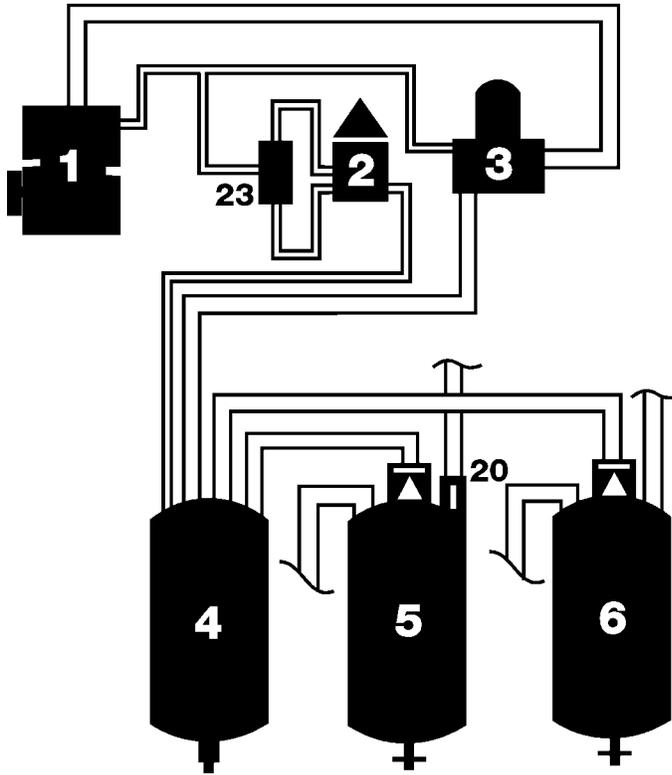

W5000764

103	Check Rear Wheel Bearings
------------	----------------------------------

Note: For further information, refer to Service Information, Group 7 and "Hubs" page 26.

**DANGER**

Failure to keep wheel bearings properly adjusted can result in accelerated tire wear, poor handling and, in extreme cases, wheel separation from the hub or from the spindle resulting in loss of vehicle control and serious personal injury or death.

Note: Avoid mixing Synthetic and petroleum lubricants in the same component.

The wheel hubs are lubricated with several types of oil. It is acceptable to use either synthetic or petroleum based oils (synthetic oils are not recommended for Volvo Axles).

Hubs are generally oil-lubricated. There are no set oil change intervals. Change oil when the hub is removed for repairs or other routine maintenance.



W7000437


104 Check Rear Wheels

Tire Wear

For further information, refer to Service Information, Group 7.

- 1 Examine each tire tread for unusual wear patterns. Refer to chart below for typical tread patterns.
- 2 Measure tread depth.
- 3 Check tire pressure and leak-test valve stems.
- 4 Check the Rim Flange wear on Aluminum Wheels every time the wheel is replaced.

Note: The main causes of tire wear are faulty air pressure, incorrect toe adjustment, and incorrect drive tire alignment or thrust angles, which can cause pushing or scrubbing of the steer tires. Feathered edges of the tires is an early symptom of tire wear.

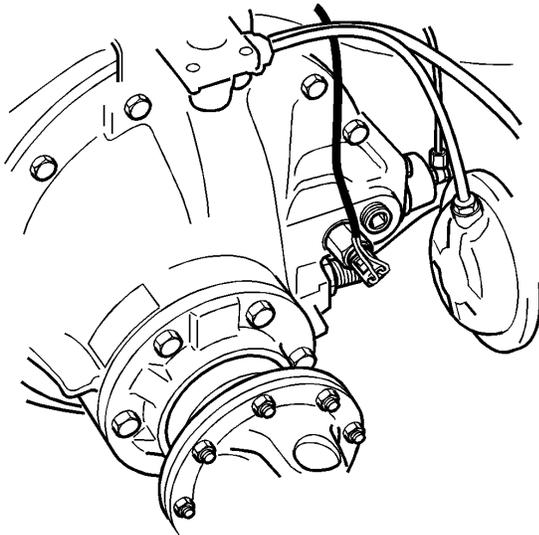

T1006487

105 Check Differential Locks

To perform a check of the differential locks, complete the following:

- 1 Check the differential locks for wear or damage.
- 2 Check that the differential locks are operational.



W5000610



W5000604

106 Check Brake Linings

To perform a check of the brake linings, complete the following:

- Measure the brake lining through the inspection holes in the backing plates. See manufacturer's specifications for minimum lining thickness.

107 Check Brake Cylinders, Levers, and Forks

To perform a check of the brake cylinders, levers and forks, complete the following:


- 1 Remove the wheel and brake drums.
- 2 Inspect the brake cylinders, levers and forks for signs of wear, warp or cracks.

108 Check Brake Disc and Calipers


Note: Not applicable for VN vehicles.

To perform a check of the brake discs and calipers, complete the following:

- 1 Remove the wheel.
- 2 Inspect the brake discs and calipers for signs of wear or damage.

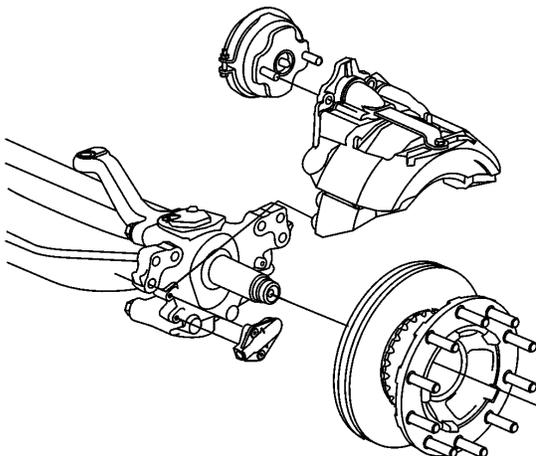

W5001317

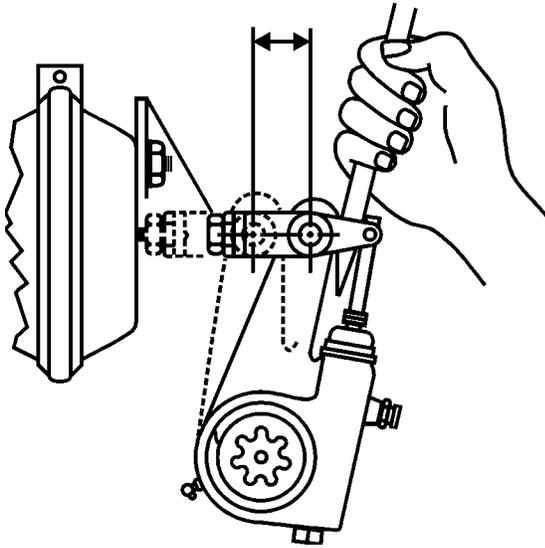

W5000613

109 Check Stroke Length on Slack Adjusters, Brake Levers, and Brake Drum Travel

To perform a check of the brake lever, slack adjuster, and brake drum travel, complete the following:

- 1 Remove the wheel and brake drums.
- 2 Inspect brake lever for signs of wear or damage.
- 3 Check the connecting clevis, pins, slack adjusters and brake chambers for wear or damage.
- 4 Verify the following specifications for slack adjuster stroke:

Relax Stroke Use steel tape to measure from the chamber face to the center push rod eye.

Note: 70 mm (2.75 in.) minimum, 73 mm (2.88 in.) maximum.

Free Stroke Use a pry bar and steel tape to measure from the chamber face to the center push rod eye.

Note: A - B = 9mm (.37 in.)

Applied Stroke Max. pressure for the applied stroke is 586 kPa (85 psi)

Note: Type 16/20 chambers, A - C = 44 mm (1.75 in.). Type 30/30 chambers, A - C = 51 mm (2 in.).

- 5 Check the drum diameters using an inside micrometer. The maximum drum diameter is stamped on the drum edge. Also refer to any available vendor literature for further information.
- 6 Verify that the length of both slack adjusters on an axle is the same.
- 7 Inspect the brake drums for oil, cracks, heat spots, or heavy wear.

110	Check Load Sensing Valve
------------	---------------------------------

Not applicable for VN/VHD vehicles.

111	Check Brake Chambers and Mounting Brackets
------------	---

To perform a check of the brake chambers and mounting brackets, complete the following:

- 1 Inspect the brake chambers and mounting brackets for wear and damage.
- 2 To ensure correct brake balance, all the brake chambers for each axle must be of the same size and type. This balance will ensure maximum brake lining performance.

Test Driving



W4000760



W5000599

112 Check After Start

Check Clutch Operation

Start the test drive by checking clutch pedal play and clutch operation. Clutch pedal play should be 4 to 10 mm (0.15 to 0.40 in.), which is the clearance between the pedal plunger and the piston in the master cylinder.

On vehicles with clutch brake, check function by depressing clutch pedal to within 6 to 12 mm (1/4 to 1/2 in.) from the floor while engaging a gear. There should be no grating of the engagement teeth when the clutch brake is engaged.

Check Parking Brake and Clutch Slip

Check for parking brake holding power and also for clutch slippage by engaging direct gear, not allowing the engine speed to go above 1,000 rpm and attempt to drive off with the parking brake still applied. The parking brake should hold the vehicle stationary while letting the clutch up slowly.

If the clutch slips or the truck moves forward during this operation, note on form for later inspection of either the clutch or spring brake operation.

Release parking brake and start driving. Check that the parking brakes are released quickly and that no brake drag can be felt.



W5000617

113 Check During Test Driving

Check Clutch Operation

During driving, check for smooth operation and engagement when shifting gears. Look for uneven engagement and/or unusual noise.

Wheel Brake Application and Release




DANGER

To do the brake test safely, make sure there are no other vehicles within 300 yards when testing, or perform the test in a off-road area where there is no traffic. Performing brake test in traffic may lead to an accident, personal injury or death.

During the first part of driving, check the wheel brakes. Check for even application and release. Make sure the vehicle does not pull to the side when the brakes are applied and that the noise is not generated while braking.

Whether or not a truck is equipped with ABS brakes, the bobtail proportioning valve will operate as designed, regulating air brake pressure going to the rear wheel brakes while not hooked up to a semitrailer. Rear wheels should not lock up during moderate braking when in bobtail mode.

Note: The rear wheels may lock intermittently while driving unloaded under 30 km/h (20 mph) even when equipped with ABS brakes. This is normal in unloaded operation.

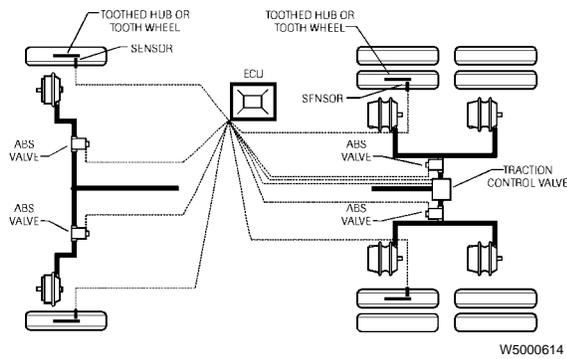

Check ABS System




To do the brake test safely, make sure there are no other vehicles within 300 yards when testing, or perform the test in a off-road area where there is no traffic. Performing brake test in traffic may lead to an accident, personal injury or death.

Check the ABS system by attempting to lock up the wheels during hard braking. The vehicle should come to a controlled stop. Brake from a speed of 50 to 55 km/h (30 to 35 mph). Make a full brake application.

Note: The rear wheels may lock intermittently while driving unloaded under 30 km/h (20 mph) even when equipped with ABS brakes. This is normal in unloaded operation.

Also check that the ABS telltale indicator comes on and goes out at approximately 8 km/h (5 mph).

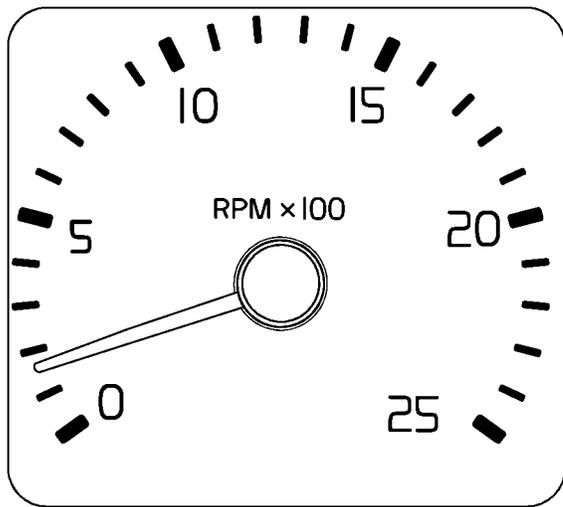

W3000815

Check Engine Controls and Performance

Check engine controls and performance while moving through the gears. Accelerator pedal should work smoothly and without any hesitation in engine response. Engine should accelerate smoothly and without hesitation, misses or surges. Also check the exhaust through the mirrors for excessive smoke during acceleration.

During acceleration in a low gear, let engine go to full speed on a flat stretch of road. Note maximum engine speed. Check the engine manufacturer's specifications for correct speed.

Check Engine Brakes



When operating a tractor bobtail without a trailer or on slippery roads, the engine brake switch must be in the "OFF" position. Failure to follow these instructions can result in loss of vehicle control and serious personal injury or death.

If the engine is equipped with an exhaust brake (Volvo only) or an engine brake, VEB, check the effectiveness of the retarding force when the brake is engaged.

Engine Brake, VEB

The engine brake has two operation modes, high and low, that are selected by one or two switches on the dashboard. Make sure the brake function disengages by:

- Either depressing accelerator or clutch pedal.
- Engine speed goes under 1,000 rpm.
- Vehicle speed goes under 2 mph (3 km/h).
- Turbo boost pressure going over 150 kPa (22 psi).
- Engaging PTO.
- Engaging ABS.




W2001083



W2001084



W4000724

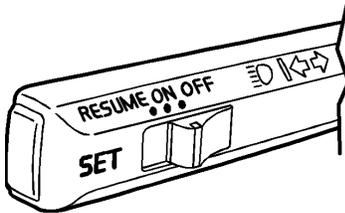

W3000807



W6000828



W1000065

Check Transmission Operation

Check the transmission for smooth operation through the gear pattern. Listen for any unusual noise during shifting. Check for excessive play in the shift lever.

Drive vehicle in all gears and listen for any unusual differences in sound between the gears.

Check Cruise Control

If equipped, engage cruise control. It should engage and disengage smoothly. Make sure the engine does not surge when in cruise control mode.

Check the resume, accelerate and coast functions. Verify that the cruise control is disengaged by the off switch, clutch operation and brake application.


Check Steering System

On the highway the steering should operate precisely and without shimmies, tracking or vibration. When operated at low speed and close quarters doing full turns, the steering should operate without binding in any spot.

Check for Other Noise

Check for unusual noise or vibration that can be contributed to a problem. Listen for unusual:

- Road noises.
- Wind noises.
- Mechanical noises.

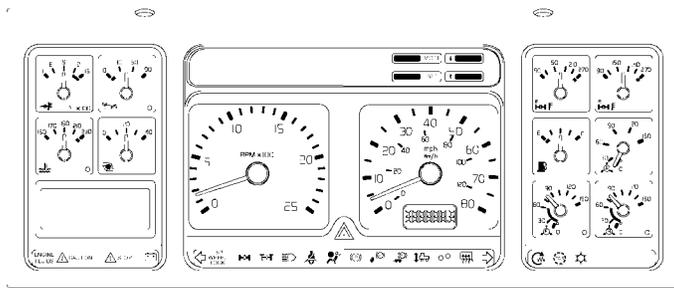

Check Instruments and Gauges


Check all instruments and gauges for proper function.

If possible, check the odometer against a measured mile.

Check Heater and Air Conditioning

Check function of heater and air conditioning. Operate the controls and let the fan run on all speeds.

Note: In the summertime, the shut-off valves for the heater may be closed for the season. Open valves before testing heater.

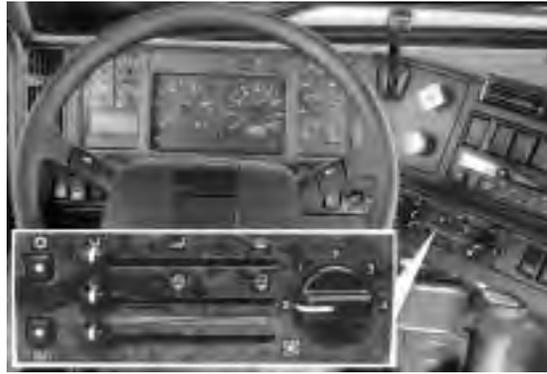

W8000889



W3000810

114 Check After Test Driving

Check Pneumatic Switches

If vehicle is equipped with a pneumatic 5th wheel sliding release, operate release mechanism while listening through door or have a helper check the function. Verify that the telltale indicator on the instrument cluster lights up.

Note: If vehicle air pressure is below approximately 720 kPa (75 psi), pneumatic switches will not function. This is a safety lockout for the air brake system.

Operate the differential lock switch(es). Verify engagement by listening to the lock mechanism operating and that the telltale indicator lights up on the instrument cluster.

If equipped with air suspension levelling switch, operate the switch. Verify function by watching the chassis being lowered. Verify that the telltale indicator lights up on the instrument cluster.


Make sure the lock function of each switch works so that the switch can not be engaged without operating the lock.



W6000829

Check Steering Column Adjustment


Press down the release pedal and move the steering wheel column through its possible positions. It should be possible to move the steering column without binding or using excessive force. When the pedal is released, the column should be firmly locked in place.

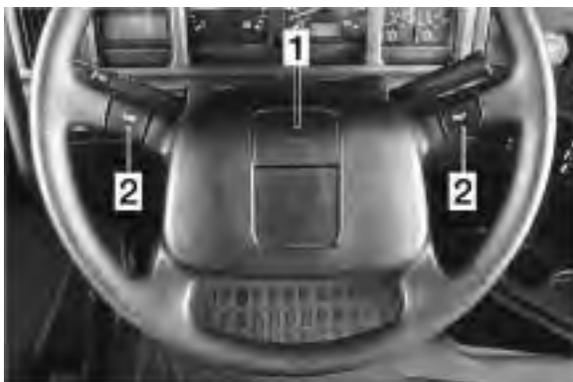

W8000947

Check Horns

Sound both the air horn (1) and the electrical horn (2). Each should have a strong, even tone.

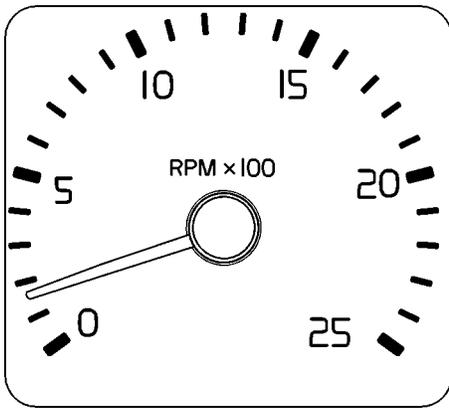


W3000815

Engine Low Idle

Record the engine low idle speed. Listen for idling problems such as surging, missing or unusual noise. See each engine manufacturer's specification for correct idle speed.

Record low and high oil pressure.

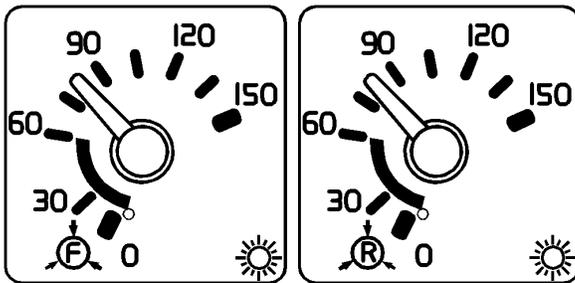

W3000819

Check Low Air Warning Switches

Pump the brake pedal while observing the air gauges. As the air pressure is lowering, verify the compressor governor cut-in pressure and the low air warning switches cut-in pressure. Check that both indicator lights in the lower right corner and the Master Warning indicator lights up and make sure the buzzer sounds.

Governor cut-in should be at 790 ± 35 kPa (115 ± 5 psi). The low air warning switches should close at a minimum pressure of 420 kPa (60 psi).

Check Manifold Dash Valve

Start the manifold dash valve check by pulling out the yellow knob (Parking). At the same time the red knob (Trailer Air Supply) should also pop out. Press both knobs in.

Note: The gauges should only be used for general reference. Gauges are less accurate below 275 kPa (40 psi).



Lower the air pressure by pumping the foot brake valve to the point where the red knob pops out. Verify that this happens at a pressure of 275 ± 35 kPa (40 ± 5 psi).

Hold the red knob in manually and decrease the pressure further. At a pressure of 210 ± 35 kPa (30 ± 5 psi), a tripper valve starts to exhaust the air supply to the trailer. This is the non-override function working. Release the red knob.

Continue to decrease air pressure until the yellow knob pops out. This should happen at a pressure of 170 ± 35 kPa (25 ± 5 psi). Now try to push in both knobs. They should not stay in on their own.



W5000612

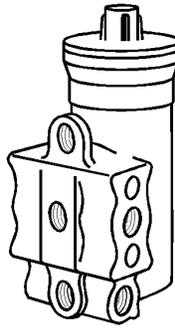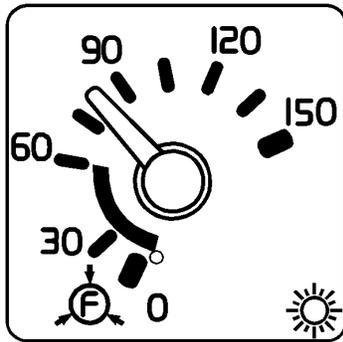

W3000818

Check Compressor Loading

Raise the air pressure until it is 585 kPa (85 psi). Time the air pressure build time from that point with the engine at full speed. The pressure should reach 690 kPa (100 psi) in 25 seconds or less. Verify that the governor cutin is at 758 ± 68 kPa (110 ± 10 psi) and cutout is at 900 ± 35 kPa (130 ± 5 psi).

Listen for unusual noises from the compressor while it is running under load and unloaded.

When the governor cuts out, check for air dryer exhaust function by listening for the air release from the air dryer through the door or window.



W3000755

Check Wipers and Washer

Check the windshield wipers and washer from inside the cab. Wipers should operate smoothly and without any binding in the sweep. Listen for any unusual noise. The blades should clear the swept area without leaving streaks or missing any spots.

Check the intermittent mode function.

Note: To shorten the interval time, move the lever to normal wipe position, and then to the interval wipe position again when the next wiper sweep is desired. This way, the interval can be programmed between 1 – 10 seconds.

Operate the windshield washer and check that the spray pattern covers the wind shield effectively.



W1000064

115 Finish

Drive Vehicle; Check Fluids

Drive the vehicle around the block to settle the oil and to verify any points that were found during the inspection.



W6000854

Check all fluid levels. Make sure there are no signs of leakage after changing oils or filters.

Clean



W1000061

Clean all areas that have been dirtied during the test drive. As a courtesy to the customer, be especially careful about making sure the cab area is as clean or cleaner than when the vehicle came into the shop.

Attach a new maintenance sticker.

Additional Time Based Maintenance

**Every:
Year**

Volvo Engine

Check the engine valve clearance after the first six months of operation. Check every 12 months or 193,121 km (120,000 miles) thereafter. Adjust if necessary.

**Every:
Two Years**

Engine Coolant

Engine coolant needs to be changed every two years unless the maximum mileage has been reached before that. See specification section for engine manufacturer's mileage recommendation.

Texaco Extended Life Coolant

Note: For further information on long life coolant refer to Service Bulletin 260-002, "Texaco Extended Life Coolant."



CAUTION

Long life coolant is colored red for identification purposes, so as not to mistake it for conventional, green coolant. Long life coolant will test as out of additives (SCA), but SCA should not be added.

Fleetguard ES Complete Long Life Coolant

Note: For further information on Fleetguard ES Complete Long Life Coolant refer to the appropriate vendor literature.

Clutch Hydraulic Fluid

Change the hydraulic fluid in the hydraulic system for the clutch. The clutch hydraulic system fluid collects moisture from the air and will eventually hold enough moisture to affect the metal surfaces in the system unless removed.

Drain fluid by removing the lid for the fluid container and then drain through the bleed fitting on the clutch slave cylinder into a container.

Use bleeder tool 9996928 to refill the hydraulic system with new fluid. Use fluid to specification DOT 4.

Caterpillar: Coolant Extender Added

If using long-life coolant in a Caterpillar engine, add coolant extender every second year.

Fan Hubs

Check clutch lining condition and thickness every 80,000 km (50,000 miles). Use lining wear gauges where applicable.

Inspect engagement mechanism for air leaks.

**Every:
Two to Three Years**

Air Dryers

The exchange interval of the air dryer cartridge is heavily dependent on how often the compressor cycles off and on and if the climate is hot and moist or cool and dry.

Do not use a dryer cartridge for more than three years. It may have to be changed before that. If a large amount of fluid is collecting in the wet tank, then the desiccant in the dryer may be saturated and needs to be changed.

**Every:
Three Years**

Caterpillar: Engine Valves and Injector Preload

Engine valve lash adjustment is checked and, if necessary, adjusted every third year. At the same time, adjust the injector preload. Refer to the Caterpillar Service Manual for correct procedure.

Caterpillar: Engine Compression Brake Slave Piston Lash

If the engine is equipped with an engine compression brake, adjust the slave piston lash after the engine valves are adjusted. Make the adjustment with the engine stopped. Refer to the Caterpillar Service Manual for adjustment information.

**Every:
Four Years**

Caterpillar: Long-Life Coolant Change

At every fourth year or 6000 hours of operation, change coolant if long-life coolant is used.

Use only clean water to flush out cooling system. Replace the coolant filter at the same time.

Additional Mileage Based Maintenance

**Every:
80,000 km (50,000 miles)**

Eaton Fuller and Meritor Transmissions

Regular oil change intervals when petroleum oil is used are at every 80,000 km (50,000 miles). See specification section for oil types and viscosities.

**Every:
96,000 km (60,000 miles)**

Caterpillar: Initial Valve Lash/Injector Preload

Do an initial check on engine valve clearance and injector preload, between 19,000 and 96,000 km (12,000 and 60,000 miles). Adjust if necessary.

**Every:
120,000 km (75,000 miles)**

Volvo Transmission

Regular oil change intervals for Volvo transmissions are at every 120,000 km (75,000 miles). See specification section for oil types and viscosities.

Volvo Rear Axle

Regular oil change intervals for Volvo rear axle is at every 120,000 km (75,000 miles). See specification section for oil types and viscosities.

**Every:
190,000 km (120,000 miles)**

Detroit Diesel: Engine Valve Clearance and Injector Height

Check valve clearance and injector height. Adjust each as necessary. For specific information, refer to Detroit Diesel Service Manual.

Cummins: Overhead Set Adjustment

Check valve clearance and injector adjustment. Adjust each as necessary. For specific information, refer to Cummins Service Manual.

**Every:
240,000 km (150,000 miles)**

Steering System Fluid Change

Change steering system hydraulic fluid every 240,000 km (150,000 miles). Use Dexron® II or Dexron® III.

If the fluid is very dark in color, there may have been heat problems in the system. Note on the inspection form for follow-up.

**Every:
385,000 km (240,000 miles)**

Cab Fresh Air Filter Change

Change cab fresh air filter at 385,000 km (240,000 miles). If the vehicle is driven in dusty conditions, the filter may have to be changed more often.

Feedback

One of our objectives is that workshop personnel should have access to correct and appropriate service manuals where it concerns fault tracing, repairs and maintenance of Volvo trucks.

In order to maintain the high standards of our literature, your opinions and experience when using this manual would be greatly appreciated.

If you have any comments or suggestions, make a copy of this page, write down your comments and send them to us, either via telefax or mailing directly to the address listed below.

To

Volvo Trucks North America, Inc.

Dept. 516 Service Publications

7900 National Service Road

P.O. Box 26115

Greensboro, NC 27402-6115

USA

Fax (336) 393-3170

From

.....

.....

.....

.....

.....

.....

.....

Comments/proposals

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Concerns Service Manual:

VOLVO

Volvo Trucks North America, Inc.

P.O. Box 26115, Greensboro, NC 27402-6115

Volvo Trucks Canada, Ltd.

6490 Vipond Drive, Mississauga, Ontario L5T 1W8

<http://www.volvotrucks.volvo.com>